

You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda Brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

### Description of the display and control buttons

#### Display elements

Date  
Second hand  
Minute hand  
Hour hand  
Second counter  
Minute counter  
1/10 second counter (running for the first 30 sec.)  
Hour counter after 30 min.

#### Control buttons

Push button A  
Crown  
Push button B

01

05

### Chronograph: Basic function

(Start / Stop / Reset)

Example:

- Start:** Press push-button A.
- Stop:** To stop the timing, press push-button A once more and read the chronograph hands: **4min/38sec/7/10 sec**
- Zero positioning:** Press push-button B. (The chronograph hands will be reset to their zero positions.)

05

### Description of the display and control buttons

#### Display elements

Date  
Second hand  
Minute hand  
Hour hand  
Second counter  
Minute counter  
1/10 second counter (running for the first 30 sec.)  
Hour counter after 30 min.

#### Control buttons

Push button A  
Crown  
Push button B

01

### Chronograph: Accumulated timing

Example:


- Start:** (start timing)
- Stop:** (e.g. 15 min 5 sec following 1)
- Restart:** (timing is resumed)
- Stop:** (e.g. 5 min 12 sec following 3) = **20 min 17 sec**  
(The accumulated measured time is shown)

#### Please note:

\* Following 4, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...).

06

### Setting the time

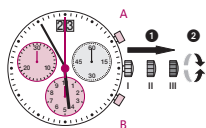

- Pull out the crown to position III (the watch stops).
- Turn the crown until you reach the correct time 8:45.
- Push the crown back into position I.

#### Please note:

\* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 2 must be pushed back into position I at the exact second.

02

### Chronograph: Intermediate or interval timing

Example:


- Start:** (start timing)
- Display interval:** e.g. 20 minutes 17 seconds (timing continues in the background)
- Making up the measured time:** (The chronograph hands are quickly advanced to the ongoing measured time.)
- Stop:** (Final time is displayed)
- Reset:** The chronograph hands are returned to their zero position.

#### Please note:

\* Following 4, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

07

### Setting the date (quick mode)

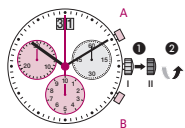

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until the correct date 01 appears.
- Push the crown back into position I.

#### Please note:

During the date changing phase between approx. 9 PM and midnight; the date must be set to the date of the following day.

An extreme acceleration in setting the date with quick mode can induce a false date indication. The synchronization is re-established by setting the date from 01 till 31 (crown in position II).


03

### Adjusting the chronograph hands to zero position

Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand 360° → corrective mode is activated).

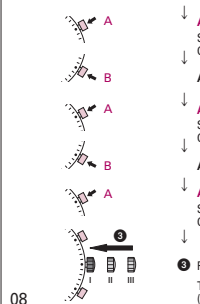

#### Adjusting the second counter hand

Single step: A 1 x short  
Continuous: A long

#### Adjusting the next hand B

#### Adjusting the 1/10 second counter hand (position 6h)

Single step: A 1 x short  
Continuous: A long

#### Adjusting the next hand B

#### Adjusting the minute counter hand (position 9h)

Single step: A 1 x short  
Continuous: A long

- Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).

08

### Setting the date/time following a battery change

Example:

- Date / time on the watch: 17 / 1:25 AM  
- Present date / time: 04 / 8:30 PM

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until yesterday's date appears 03.
- Pull out the crown to position III (the watch stops).
- Turn the crown until the correct date 04 appears.
- Continue to turn the crown until the correct time 8:30 PM appears.
- Push the crown back into position I.

#### Please note:

\* To set your watch to the exact second, please refer to the chapter entitled «setting the time».  
\* Please observe the AM/PM clock rhythm.

04