



Movement holder
Removing setting stem
H5XXX.1T



Movement holder
Setting hands
H5XXF.1A

Fitting dial and hands

- Crown in position II
- Wind minute hand forwards, until a click is heard before weekday changes
- Press corrector C, until next month appears
- Remove working hand
- Fit dial
- Set date hand on 1
- Point the other hands towards 12 o'clock
- Wind crown forwards, until actual time is displayed
- Wind hands forwards to actual time
- Zero chronograph hand**
- Crown in position I
- Set date*

Date switching duration

Date/Month

~2hrs

Weekday


~2hrs

*Set date

- Corrector C → to correct date
- Corrector D → to correct weekday
- Corrector E → to correct month

**Zeroing the Chronograph hand

- Activate pushers A and B for 2 seconds at the same time
(Chrono seconds hand rotates once)
- Pusher A → to correct chrono seconds hand
- Pusher B → to jump to hour hand
- Pusher A → to correct hand's position
- Pusher B → to jump to minute hand
- Pusher A → to correct hand's position

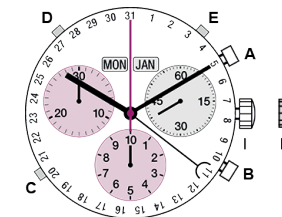

General Instructions

Removing the setting stem can only be effected in Pos. I.

The use of supporting screws is essential when mounting the hands.

Permitted hand setting strengths:

Hr / min. hands: <40N

Other hands: <30N