



Movement holder
Removing setting stem
H5XXX.1T



Movement holder
Setting hands
H5XXX.1A4



PCB-Alarm
Installing Piezo function for
H5XXX.1A4
H5XXX.1P

Fitting dial and hands

- Crown in position III
- Wind hour hand forwards, until date changes
- Remove working hand
- Mount dial
- Point all hands towards 12 o'clock
- Fit time
- Zero chronograph hand*
- Crown in position III
- Install alarm reference time**
- Set date
- Crown in position I

Date switching duration

First and tenth digit discs

~2hrs

*Zeroing the Chronograph hand


- Press pushers A and B for 2 seconds at the same time
(Chrono seconds hand rotates once)
- Pusher A → to correct chrono seconds hand
- Pusher B → to jump to hour and minute hands
- Pusher A → to correct hand position

Details: See Instruction Manual

**Setting alarm reference time

- Press pusher B min. 2 secs (Reference time mode is activated)
- Using pusher B, synchronise reference time with actual time:
 - Short press (< 1 sec.) → +1 minute
 - Medium press (1-2 secs) → +1 hour
 - Long press (> 2 secs) → continuous

Details: See Instruction Manual

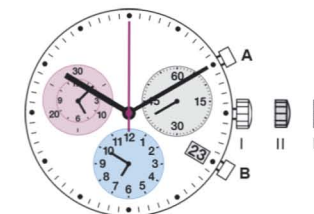

General Instructions

Removing the setting stem can only be effected in Pos. I.

The use of supporting screws is essential when mounting the hands.

Permitted hand setting strengths:

Hr / min. hands: <40N

Other hands: <30N

During quick date correction (setting stem in position II), a date switching speed of 5 d/s must not be exceeded.

Alarm reference time tip

The reference time runs in the background, behind the watch time, on which the ALARM time is based. So with every new time setting, the reference time must be freshly synchronised.