



Movement holder
Removing setting stem
H6XXX.1T




Movement holder
Setting hands
H6XXX.1A2

Fitting dial and hands

- Crown in position III
- Wind hour hand forwards, until date changes
- Remove working hand
- Set friction spring 3315.001 on the hour wheel, if not yet in place
- Fit dial
- Point all hands towards 12 o'clock
- Set time
- Crown in position II
- Set date
- Crown in position I

Date switching duration:

~1¼hrs

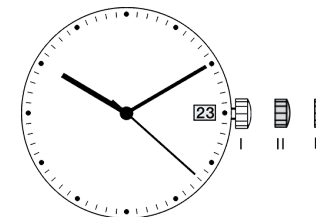

General Instructions

Removing the setting stem can only be effected in Pos. I.

The use of supporting screws is essential when mounting the hands.

Permitted hand setting strengths:

Hr / min. hands: <40N

Other hand: <30N

During quick date correction (setting stem in position II), a date switching speed of 5 d/s must not be exceeded.