


Cal. 5010.B

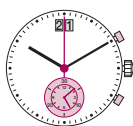

Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)
Accuracy: +20 / -10 seconds per month

English User's Manual

In case your watch needs to be repaired or to raise claims under a guarantee, please contact the point of sales




Description of the display and control buttons

Display elements

- Date
- Minute hand
- Hour hand
- Centre stop-second
- Minute counter
- Hour counter

Control buttons

- Push button A
- Crown
- Push button B

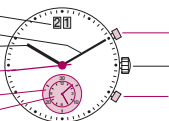

Push-button A




Minute counter Hour counter

Chronograph: Basic function


(Start / Stop / Reset)

Example:

- Start:** Press push-button A.
- Stop:** to stop the timing, press pushbutton A once more and read the 3 chronograph counters: **4h / 20 min / 44 sec.**
- Zero positioning:** Press push-button B. (The 3 chronograph hands will be reset to their zero positions).

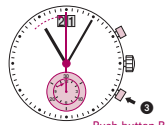

Push-button B

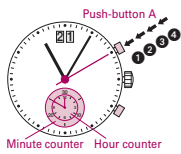

Minute counter Hour counter


Chronograph: Accumulated timing

Example:


- Start:** (start timing)
- Stop:** (e.g. 15 min 5 sec following 1)
- Restart:** (timing is resumed)
- Stop:** (e.g. 10 min 5 sec following 3) = **25 min 10 sec**
(The accumulated measured time is shown)

- Reset:** The three chronograph hands are returned to their zero positions.

Please note:
* Following 4, the accumulation of the timing can be continued by pressing **push-button A** (Restart / Stop, Restart / Stop, ...)

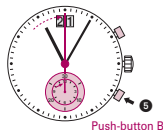

Push-button B

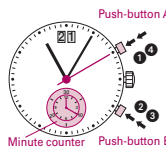


Minute counter Push-button B

Chronograph: Intermediate or interval timing


Example:

- Start:** (start timing)
- Display interval:** e.g. 10 minutes 10 seconds (timing continues in the background)
- Making up the measured time:** (the 3 chronograph hands are quickly advanced to the ongoing measured time).
- Stop:** (Final time is displayed)
- Reset:** The 3 chronograph hands are returned to their zero position

Please note:
* Following 2, further intervals or intermediates can be displayed by pressing **push-button B** (display interval / make up measured time, ...)

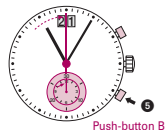

Push-button B

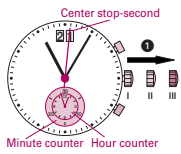


Minute counter Hour counter


Adjusting the chronograph hands to zero position

Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all 3 chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).

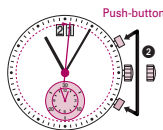

Push-button B

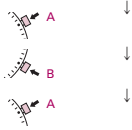

Adjusting the centre stop second

- Single step A 1 x short
- Continuous A long

Adjusting the next hand B


- Single step A 1 x short
- Continuous A long

Adjusting the minute counter hand and the hour counter hand (mechanical coupled)

- Single step A 1 x short
- Continuous A long



Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).

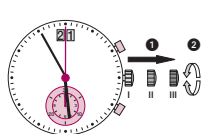


Setting the time

- Pull out the crown to position III (the watch stops).
- Turn the crown until you reach the correct time 8:45.
- Push the crown back into position I.

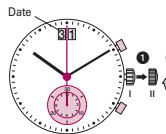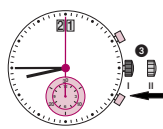


Setting the date (quick mode)

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until the correct date 01 appears.
- Push the crown back into position I.

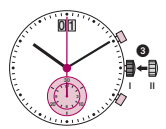

Please note:
During the date changing phase between 9 PM and 12 PM, the date must be set to the date of the following day.

An extreme acceleration in setting the date with quick mode can induce a false date indication. The synchronization is re-established by setting the date from 01 till 31 (crown in position II).

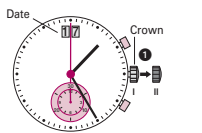


Setting the date/time following a battery change


Example:

- Date / time on the watch: 17 / 1:25 AM
- Present date / time: 04 / 8:30 PM


- Pull out the crown to position II (the watch continues to run).

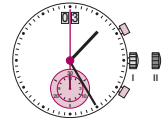

- Turn the crown until yesterday's date appears 03.

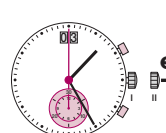

- Pull out the crown to position III (the watch stops).

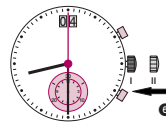

- Turn the crown until the correct date 04 appears.

- Continue to turn the crown until the correct time 8:30 PM appears.

- Push the crown back into position I.

Please note:
* Please observe the AM/PM clock rhythm.