

RONDA startech – Movement Cal. 5010.B

 
User's Manual English

You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda Brand.


In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

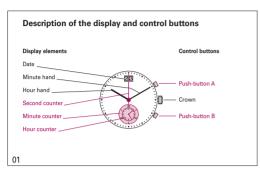

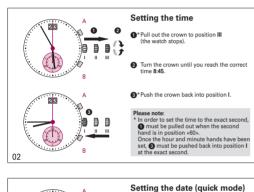



03

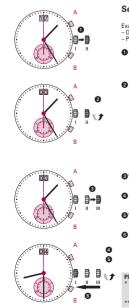



Example: - Date / time on the watch: 17/ / 1:25 AM - Present date / time: 4/ 8:30 PM

Pull out the crown to position II (the watch continues to run).


2 Turn the crown until the correct date 1 appears.

Please note: During the date changing phase between approx. 9 PM and midnight; the date must be set to the date of the following day.


An extreme acceleration in setting the date with quick mode can induce a false date in cation. The synchronization is re-establishe by setting the date from 01 till 31 (crown in position II).


Push the crown back into position I.

- Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until yesterday's date appears 3.
- Pull out the crown to position III (the watch stops). ß⁺
- Turn the crown until the correct date 4
- *Continue to turn the crown until the correct time 8:30 PM appears.
- Push the crown back into position I.
- To set your watch to the exact second, please refer to the chapter entitled «setting the time». Please observe the AM/PM clock rhythm

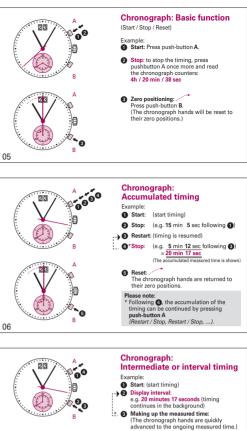

4 6

 

 



. m · A

Ю. в

۵



Stop: (Final time is displayed)

Reset:

Please note:
* Following (), further intervals or inter-mediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

Example: One or several chronograph hands are not in their correct zero positions and have to adjusted (e.g. following a battery change). be

- Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- Ø Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).



08

Battery type: 395 / SR927SW Accuracy: +20 / -10 seconds per month

