

RONDA startech – Movement cal. Z60 & Z50


User's Manual English


You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

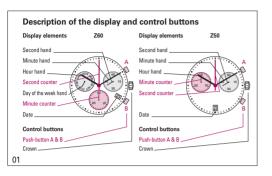

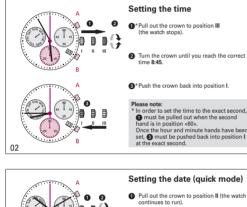

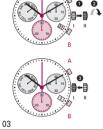

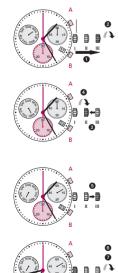

8


Setting the date, day of the week (Z60) and time

Please note: During the date changing phase between approx. 09:45 PM and midnight; the date must be set to the date of the following day.

2 Turn the crown anticlockwise until the correct date 1 appears.

8 Push the crown back into position I.

- Date / time on the watch: 17 / 01:25 / MON Present date / time: 23 / 20:35 / THU Pull out the crown to position III
- (the watch stops).
- Turn the crown anticlockwise until yesterday's day of the week WED a 0
- 9 Push the crown to position II.
- Turn the crown until vesterday's date appears 22
- Pull out the crown to position III (the watch stops).
- Turn the crown anticlockwise until the correct date [23] and day of the week A THU appears.
- *Continue to turn the crown anticlockw until the correct time 8:35 PM appears a
- 8 Push the crown back into position I.
- Please note: * To set your watch to the exact second, please refer to the chapter entitled «setting the time». ** Please observe the AM/PM clock rhythm.

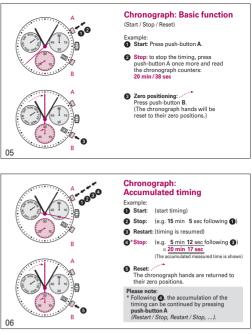

Chronograph:

Example Start: (start timing)

4 6

Intermediate or interval timing

Making up the measured time: (the chronograph hands are quickly advanced to the ongoing measured time).

Reset: The chronograph hands are returned to their zero position

Please note: * Following (), further intervals or inter-mediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

Adjusting the chronograph

Example: One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).


Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position.)


② Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated.)

hands to zero position


Display interval: e.g. 20 minutes 17 seconds (timing continues in the background)

Stop: (Final time is displayed.)

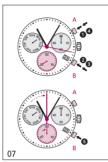

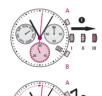



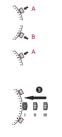



08

Battery type: 395/SR927SW Accuracy: +20 / -10 seconds per month

