


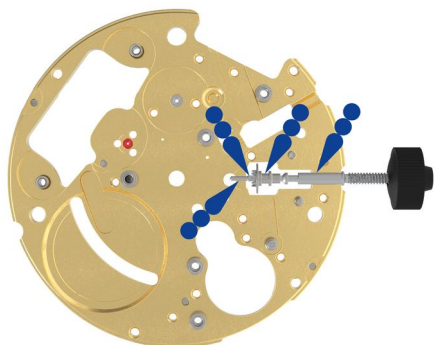





- | | | | |
|---|---|-------------|--------------------|
| 1 |  | 2000.664.G | Main plate B (KIs) |
| 2 |  | 3000.189.CO | Working stem |
| 3 |  | 3001.068.FI | Sliding pinion B |
| 4 |  | 9020 | Moebius 9020 |

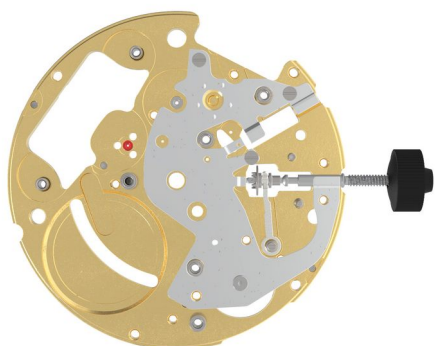

- | | | | |
|---|---|-------------|-------------------------|
| 5 |  | 2130.204.CO | Setting mechanism cover |
| 6 |  | 4000.321 | Screw |
| 7 |  | 4000.321 | Screw |
| 8 |  | 4000.321 | Screw |
| 9 |  | 3015.083 | Bottom yoke |

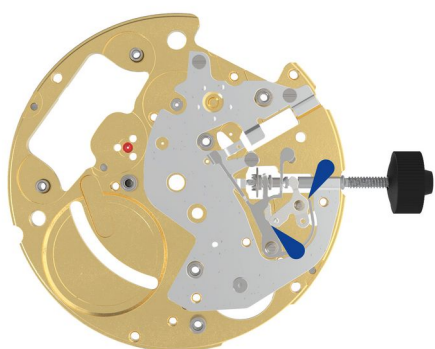

- | | | | |
|----|---|-------------|---------------|
| 10 |  | 3017.056.CO | Setting lever |
| 11 |  | 3015.082 | Yoke |
| 12 |  | 8200 | Moebius 8200 |

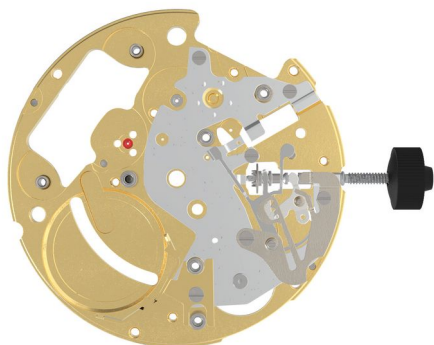


13  3905.069 Setting lever jumper
Tensioning the spring arm.

14  4000.312 Screw

15  4000.328 Screw


16  3601.117.G Battery clamp (+)

17  4000.244 Screw

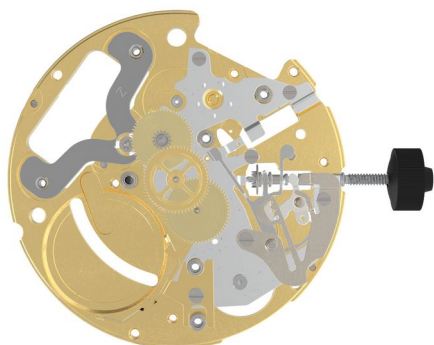


18  3622.042 Stator

19  3715.103.RK Rotor

20  3147.056.CO Intermediate wheel

21  3122.086.CO Third wheel

22  3136.160.CO Center second wheel (Aig.)

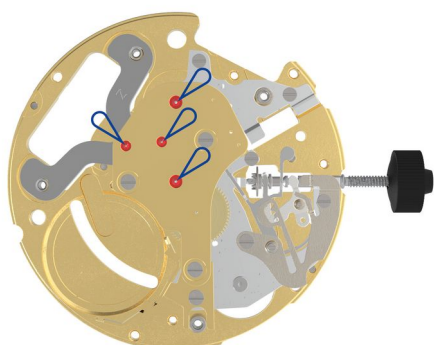


23  2020.180.G Train wheel bridge

24  4000.279 Screw


25  4000.279 Screw

26  4000.279 Screw


27  9014 Moebius 9014

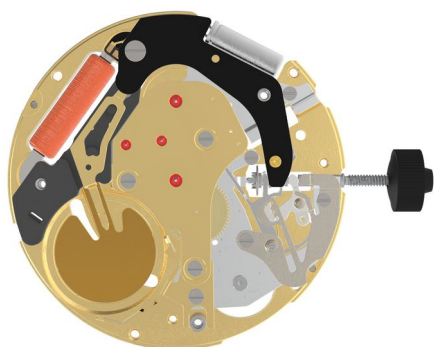


- | | | | |
|---|---|-------------|----------------------|
| 28 |  | 3621.060.RK | Coil |
| Attention: Please hold the coil only on the grey coil core. | | | |
| 29 |  | 3603.075 | Battery insulator |
| 30 |  | 3603.074 | Bridle (-) insulator |
| 31 |  | 3601.116 | Bridle - |
| 32 |  | 3612.270.RK | Electronic module |
| 33 |  | 4000.318 | Screw |

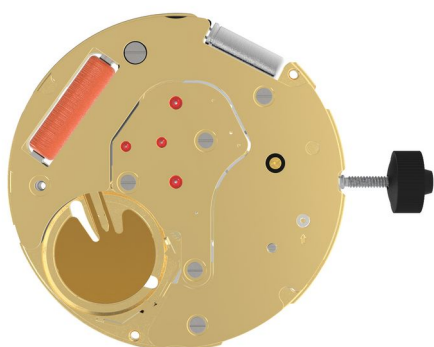


- | | | | |
|----|---|----------------------|-------------------------|
| 34 |  | 2130.168.G.M01.6003B | Electronic module cover |
| 35 |  | 4000.102 | Screw |
| 36 |  | 4000.102 | Screw |

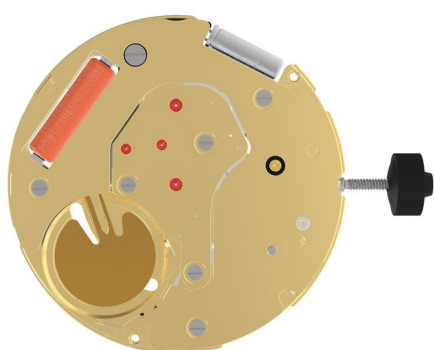


- | | | | |
|----|---|----------|-------|
| 37 |  | 4000.102 | Screw |
|----|---|----------|-------|

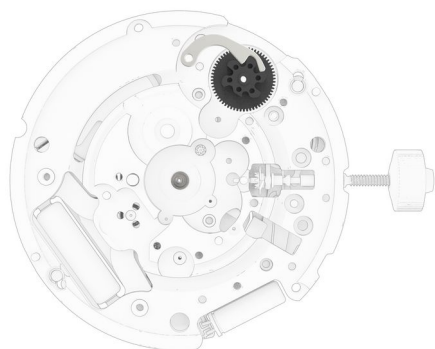



- | | | | |
|----|---|--------------|------------------------------|
| 38 |  | 3600.031.HGF | Battery 373 (Ø 9.45 x 1.65) |
| 39 |  | 3903.061 | Center tube |
| 40 |  | 3004.232 | Tens indicator driving wheel |
| 41 |  | 3500.060 | Tens jumper |

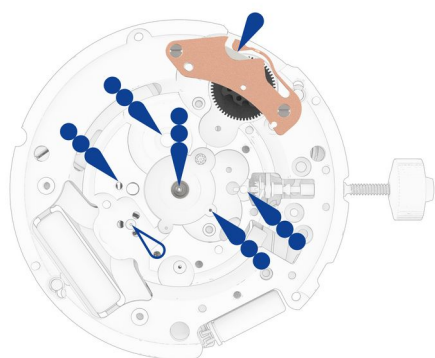


- | | | | |
|----|---|----------------|--|
| 42 |  | 2130.171 | Tens jumper maintaining plate |
| 43 |  | 4000.332 | Screw |
| 44 |  | 4000.332 | Screw |
| 45 |  | 8200 9014 9020 | Moebius 8200 Moebius 9014 Moebius 9020 |

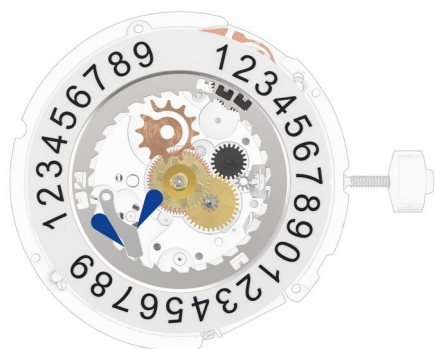

- | | | | |
|----|---|-----------------|----------------------------|
| 46 |  | 3004.182.FI | Setting wheel B |
| 47 |  | 3004.183.FI | Intermediate setting wheel |
| 48 |  | 3305.305.CO | Cannon pinion (Aig.) |
| 49 |  | 3007.073.CO | Minute wheel |
| 50 |  | 3301.271.CO | Hour wheel (Aig.) |
| 51 |  | 3315.001 | Friction spring |
| 52 |  | 3504.217.AF.1.A | Units indicator (T3, G12) |

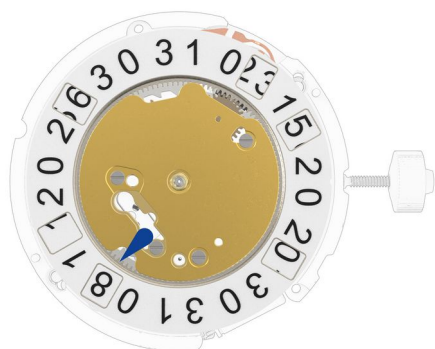

53		3004.187	Date indicator driving wheel
54		3500.061	Date jumper B
55		8200	Moebius 8200
56		2130.169	Date indicator maintaining plate
57		4000.312	Screw
58		3504.218.AF.1.A	Tens indicator (T3, G12)
59		3905.070 Insert the date jumper spring in the previous opening.	Date jumper spring
60		3147.057	Tens intermediate wheel
61		2130.170.G	Date mechanism maintaining plate
62		4000.312	Screw
63		4000.312	Screw
64		4000.312	Screw
65		8200	Moebius 8200

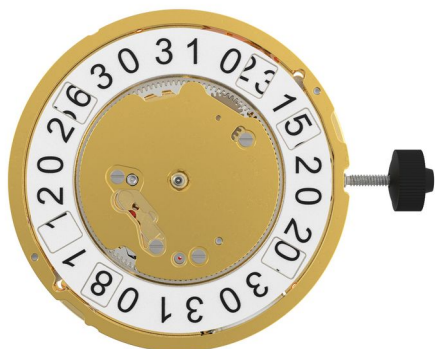


66




3506.075.G

Dial support


Measurement

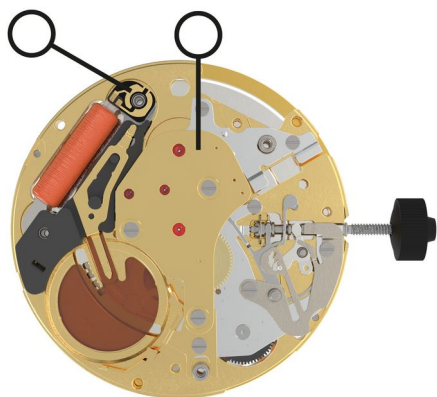


Coil insulation
Infinite

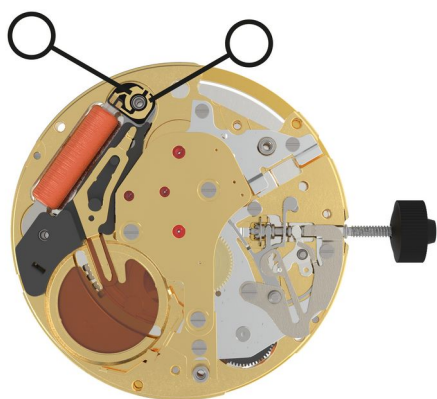

Coil resistance movement
(min./max.) 1610 - 1810 Ohm

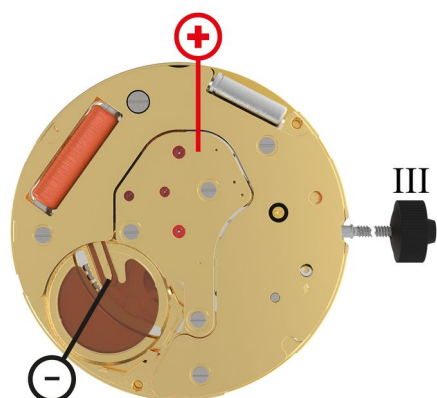

Setting stem in position III, 60 s measuring interval.
(typ./max.) 0.10 / 0.30 μ A

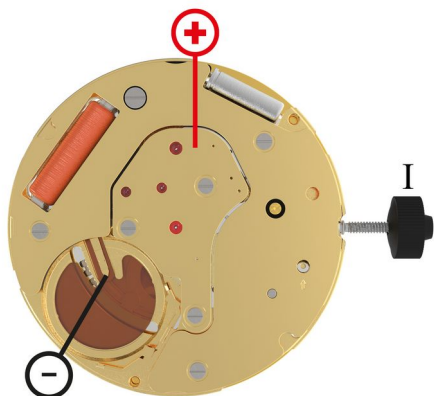

Lower working voltage limit


<1.20 V

60s measuring interval

-10 .. +20s/mth

Setting stem in position I, calendar not in gear, 60s measuring interval.

(typ./max.) 1.03 / 1.85 μ A

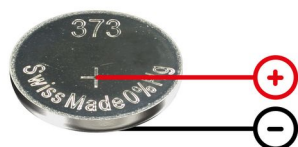

Voltage

typ 1.5V