


You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

### Description of the display and control buttons

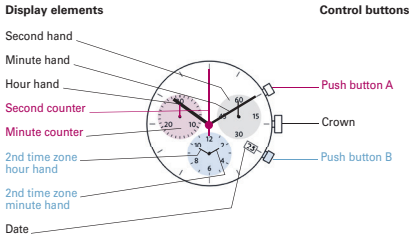

01

### Setting the time

- 1\* Pull out the crown to position III (the watch stops).
- 2 Turn the crown until you reach the correct time 8:45.
- 3\* Push the crown back into position I.

**Please note:**  
\* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 3 must be pushed back into position I at the exact second.

02

### Setting the date (quick mode)

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until the correct date [1] appears.
- 3 Push the crown back into position I.

**Please note:**  
During the date changing phase between approx. 9 PM and midnight the date must be set to the date of the following day.

03

### Setting the date/time following a battery change

Example:  
- Date / time on the watch: [12] / 1:25 AM  
- Present date / time: [4] / 8:30 PM

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until yesterday's date appears [3].
- 3\* Pull out the crown to position III (the watch stops).
- 4 Turn the crown until the correct date [4] appears.
- 5\*\* Continue to turn the crown until the correct time 8:30 PM appears.
- 6 Push the crown back into position I.

**Please note:**  
\* To set your watch to the exact second, please refer to the chapter entitled «setting the time».  
\*\*Please observe the AM/PM clock rhythm.

04

### Chronograph: Basic function (Start / Stop / Reset)

Example:

- 1 Start: Press push-button A.
- 2 Stop: to stop the timing, press push-button A once more and read the chronograph hands: **20 min / 38 sec.**
- 3 Zero positioning: Press push-button B. (The chronograph hands will be reset to their zero positions.)

05

### Chronograph: Accumulated timing

Example:

- 1 Start: (start timing)
- 2 Stop: (e.g. 15 min 5 sec following 1)
- 3 Restart: (timing is resumed)
- 4 Stop: (e.g. 5 min 12 sec following 3) = **20 min 17 sec** (The accumulated measured time is shown)
- 5 Reset: The chronograph hands are returned to their zero positions.

**Please note:**  
\* Following 4, the accumulation of the timing can be continued by pressing **push-button A** (Restart / Stop, Restart / Stop, ...).

06

### Chronograph: Intermediate or interval timing

Example:

- 1 Start: (start timing)
- 2 Display interval: e.g. 20 minutes 17 seconds (timing continues in the background)
- 3 Making up the measured time: (The chronograph hands are quickly advanced to the ongoing measured time.)
- 4 Stop: (Final time is displayed)
- 5 Reset: The chronograph hands are returned to their zero position.

**Please note:**  
\* Following 2, further intervals or inter-mediations can be displayed by pressing **push-button B** (display interval / make up measured time, ...).

07

### Adjusting the chronograph hands to zero position

Example:  
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- 1 Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- 2 Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).

**Adjusting the second counter hand**  
Single step: Push A 1 x short  
Continuous: Push A long

**Adjusting the next hand B**

**Adjusting the minute counter hand (position 9h)**  
Single step: Push A 1 x short  
Continuous: Push A long

3 Returning the crown to position I  
Termination of the chronograph hands adjustment (can be carried out at any time).

08

### Setting the 2nd time zone

The desired time of the 2nd time zone can be set by adjusting minute hand and hour hand of the 2nd time zone display.

- 1 Activation: Press the push button B for at least 2 seconds. As soon as the minute hand jumps one step forward, the operation mode is active.
- 2 Brief pressing: (less than 1 second) Hands move forward by 1-minute step  
Medium pressing: (1 to 2 seconds) Hands move forward one hour  
Long pressing: (more than 2 seconds) Hands move forward continuously until the push button is released

**Please note:**  
If the push button is not pushed for ten seconds, the setting mode is deactivated. Please see point no 1 for activation.

09