






A



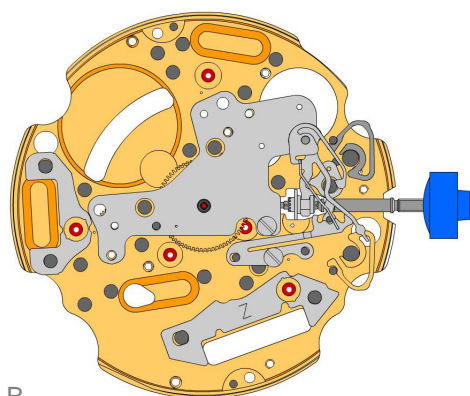

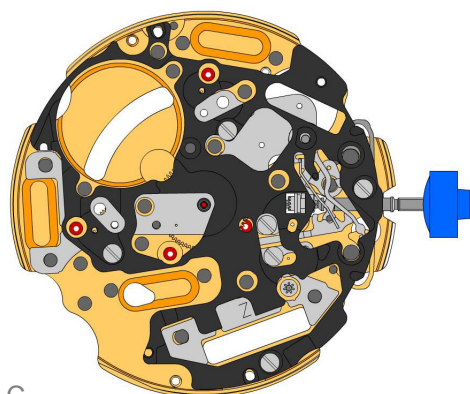













B




C

2000.574.G 1.		Main plate
3305.290.CO 2.		Cannon pinion with driver (Aig.2, closed)
3301.243 3.		Hour wheel (counter 24h)

2030.024.CO 4.		Centre bridge Center bridge held by 1 screw 4000.250.
4000.250 5.		Screw
3001.055.FI 6.		Sliding pinion
3000.177.CO 7.		Setting stem
3017.049 8.		Setting lever
3905.049 9.		Setting lever jumper (3 positions) Setting lever jumper held by 1 screw 4000.250.
4000.250 10.		Screw
3015.081 11.		Yoke (3 positions)
3905.067 12.		Yoke spring Tensioning the spring arm.
3406.030 13.		Pusher jumper B Put the grey jumper between the two posts on the further side.
3406.038 14.		Pusher jumper A Put the yellow jumper between the two posts on the closer side.
3622.040 15.		Stator Mark [Z] on stator.
3622.039 16.		Stator (counter 6h, 9h, chrono)

3603.079 17.		Plastic bracket Plastic bracket held by 4 screws 4000.250.
4000.250 18.		Screw
3715.094.RK 19.		Rotor

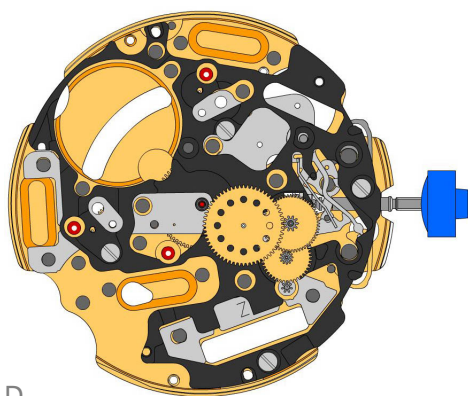


D


3147.046.CO
20.  Intermediate wheel

3136.142.CO
21.  Second wheel (long)

3122.056.CO
22.  Third wheel

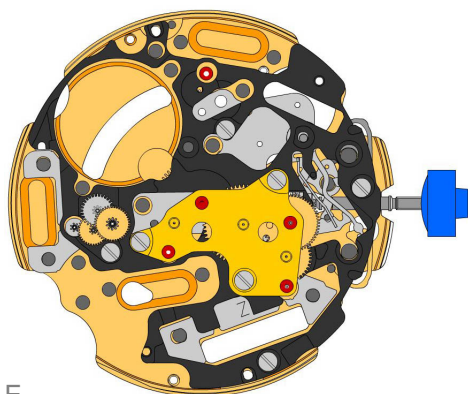


E

2020.148.G
23.  Train wheel bridge
Train wheel bridge held by 3 screws 4000.250.


4000.250
24.  Screw

3715.095.RK
25.  Rotor


3147.048.CO
26.  Intermediate wheel (counter)

3007.055.CO
27.  Minute wheel (counter 24h)


3402.007.CO
28.  Minute counting wheel (24h)

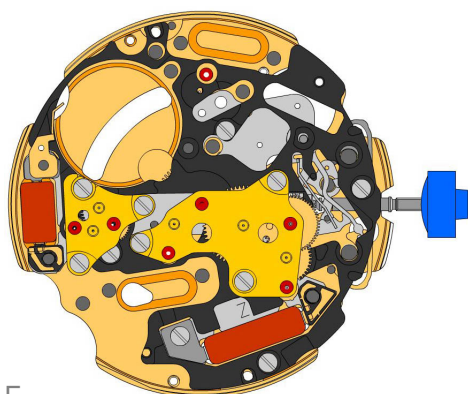


F

2020.149.G
29.  Counter train wheel bridge
Counter train wheel bridge held by 3 screws 4000.250.

4000.250
30.  Screw

3621.053.RK
31.  Coil
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
32.  Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core.

4000.250
33.  Screw


3601.118
34.  Contact strip
Contact strip held by 1 screw 4000.250.

4000.250
35.  Screw





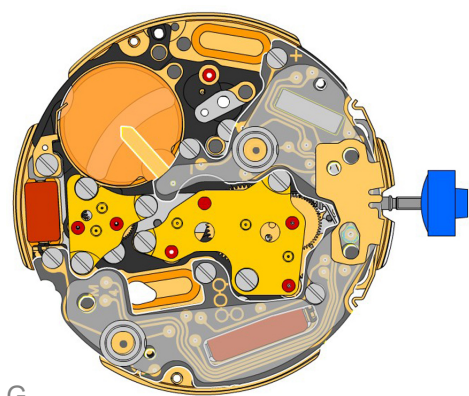

3603.034
36.  Battery insulator


3503.054
37.  Tube

3503.054
38.  Tube





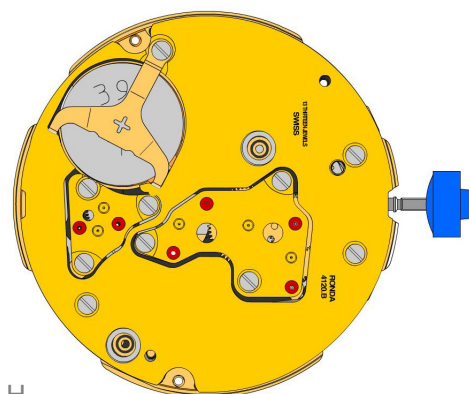



G










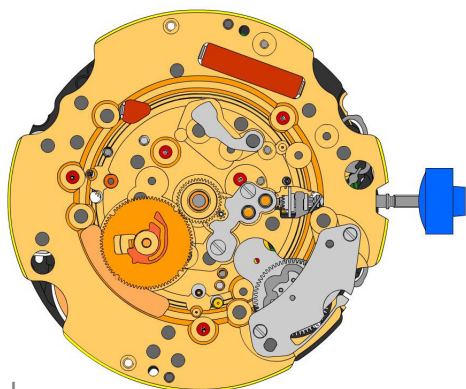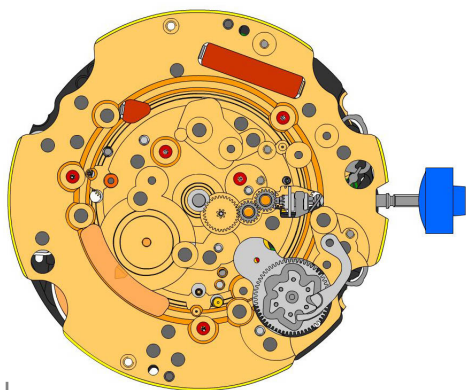




3612.176.4120 39.		Electronic module Electronic module held by 5 screws 4000.248. Electronic measurements may be realised now.
4000.248 40.		Screw
3603.069 41.		Circuit insulator
3603.070 42.		Contact insulator
3603.070 43.		Contact insulator
3601.107.G 44.		Pusher contact spring




H


2130.160.G.M01.4120B 45.		Electronic module cover Electronic module held by 5 screws 4000.248.
3600.010.HGF 46.		Battery 395
3601.109.G 47.		Bridle + Bridle held by 1 screw 4000. 250.
4000.250 48.		Screw



2000.574.G 49.		Main plate
3004.164 50.		Setting wheel
3004.164 51.		Setting wheel
3007.054.CO 52.		Minute wheel
2130.143 53.		Minute train bridge Minute train bridge held by 2 screws 4000.250.
4000.305 54.		Screw
3004.227 55.		Tens indicator driving wheel The short tooth of the tens indicator driving wheel must point to the center of the movement.
3500.075 56.		Tens jumper
2130.142 57.		Tens jumper maintaining plate Tens jumper maintaining plate held by 2 screws 4000.306. Tensioning the spring arm.
4010.306 58.		Screw
3301.242 59.		Hour wheel (Aig.2)
3315.016 60.		Friction spring
3004.224.CO 61.		Date indicator driving wheel
3500.049 62.		Date jumper

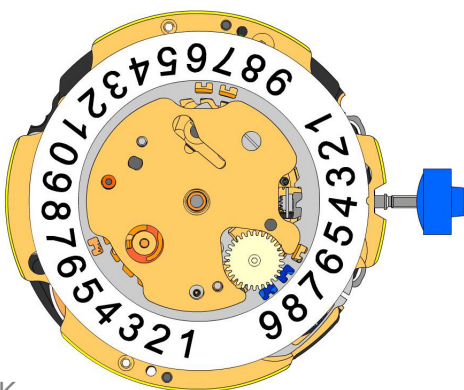

K

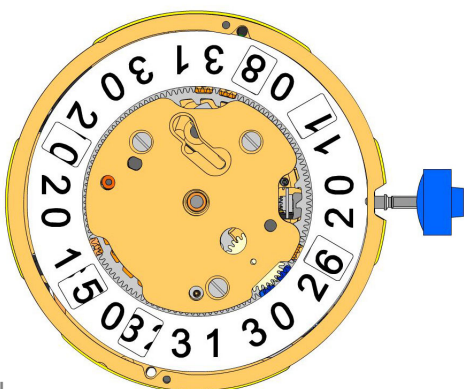

L

3504.214.AD.1.A
63. Units indicator (standard)
Nick of the indicator at 3 o'clock.



3147.054
64. Tens intermediate wheel



2130.141
65. Date indicator maintaining plate
Date indicator maintaining plate held by 1 screw 4000.250.



3905.070
66. Date jumper spring
Insert the date jumper spring in the provided opening.



3504.215.AD.1.A
67. Tens indicator (standard)
Nick of the indicator at 3 o'clock.



2130.140.G
68. Date mechanism maintaining plate
Date mechanism maintaining plate held by 2 screws 4000.250.



4000.250
69. Screw



3506.072.G
70. Dial support



8200
71. Moebius 8200



9014
72. Moebius 9014



124
73. Jismaa 124




9020
74. Moebius 9020






Battery	395
Voltage	1.55 V

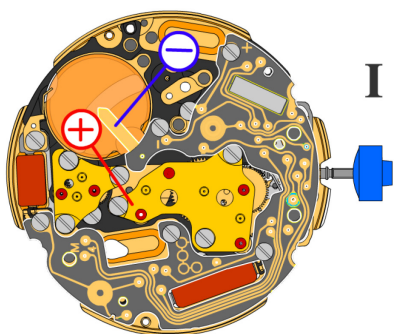


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption	1.42 μA
Maximal consumption	1.65 μA
Rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.20 V

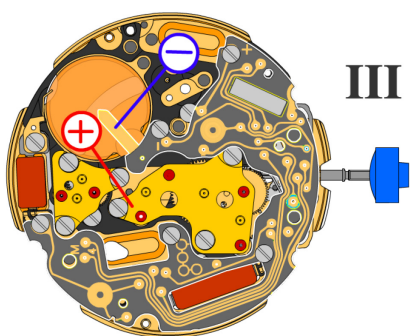

Setting stem in position III, 60 s measuring interval:


Typical consumption	0.10 μA
Maximal consumption	0.30 μA

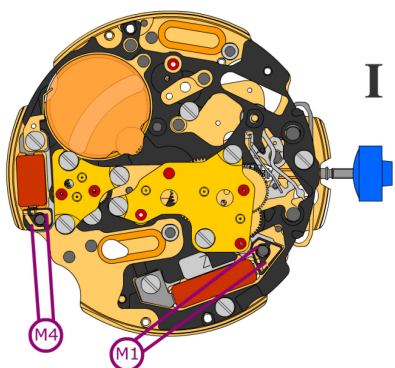


Coil resistance M1

1.90 k Ω .. 2.10 k Ω

Coil resistance M4

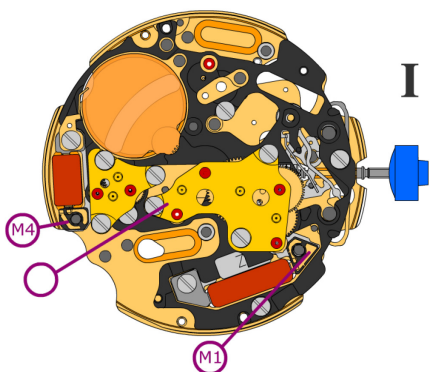1.68 k Ω .. 1.88 k Ω


Coil isolation M1/M4

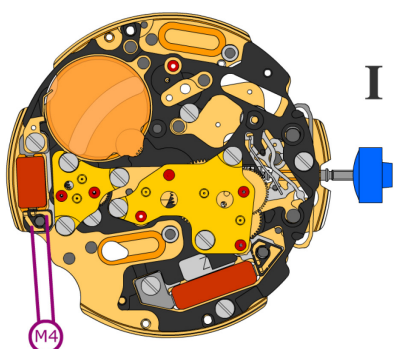 ∞ k Ω

Signal generator (4.9 ms, 8 Hz):

Lower working voltage limit M4

1.20 V