








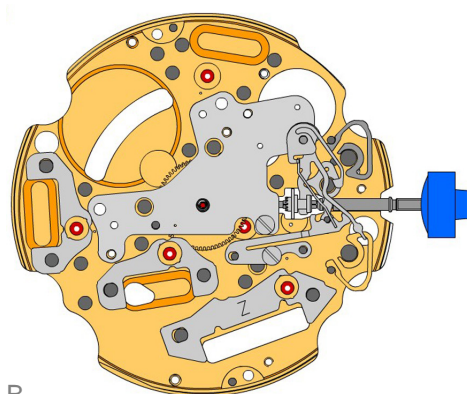
















A

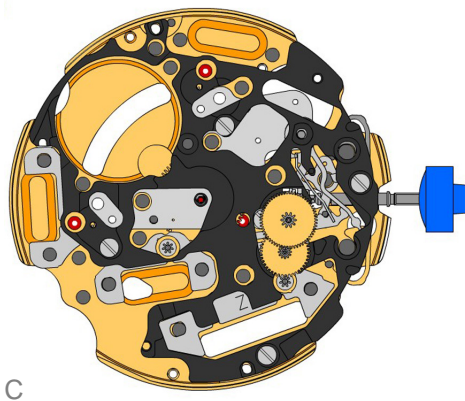





B


2000.574.G 1.		Main plate
3305.275.CO 2.		Cannon pinion with driver (Aig.1)
2030.017.CO 3.		Centre bridge Centre bridge held by 1 screw 4000.250.
4000.250 4.		Screw
3001.055.FI 5.		Sliding pinion
3000.177.CO 6.		Setting stem
3017.049 7.		Setting lever
3905.049 8.		Setting lever jumper (3 positions) Setting lever jumper held by 1 screw 4000.250.
4000.250 9.		Screw
3015.081 10.		Yoke (3 positions)
3905.067 11.		Yoke spring Tensioning the spring arm.
3406.030 12.		Pusher jumper B Put the grey jumper between the two posts on the further side.
3406.038 13.		Pusher jumper A Put the yellow jumper between the two posts on the closer side.
3622.040 14.		Stator Mark [Z] on stator.
3622.039 15.		Stator (counter 6h, 9h and chrono)
3622.039 16.		Stator (counter 6h, 9h and chrono)



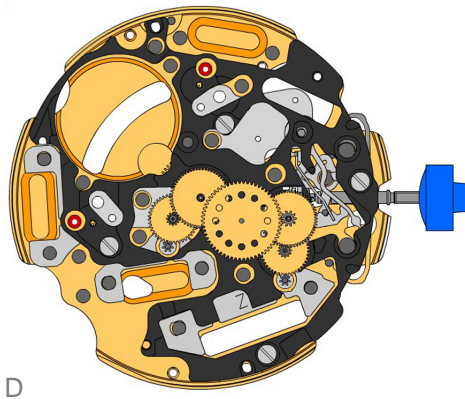




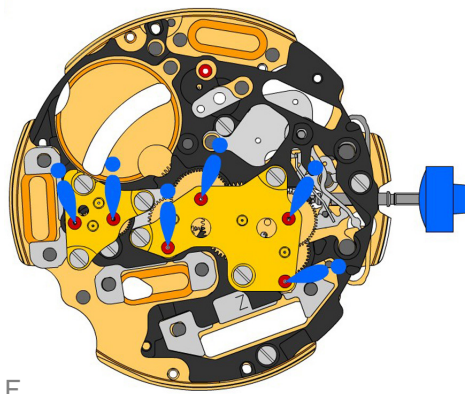
3603.079 17.		Plastic bracket Plastic bracket held by 4 screws 4000.250.
4000.250 18.		Screw
3715.094.RK 19.		Rotor
3715.094.RK 20.		Rotor
3147.046.CO 21.		Intermediate wheel
3136.142.CO 22.		Second wheel (long)

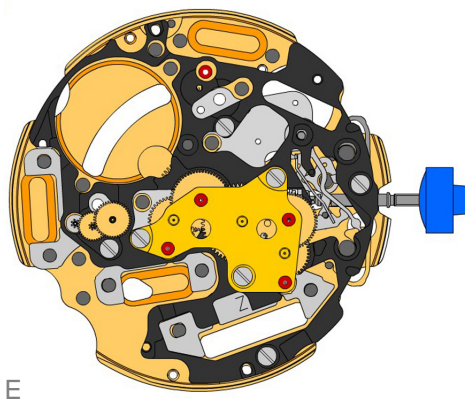



3147.047.CO 23.		Intermediate wheel (chrono)
3136.143.CO 24.		Chronograph wheel (Aig.1)
3122.056.CO 25.		Third wheel





2020.148.G 26.		Train wheel bridge Train wheel bridge held by 3 screws 4000.250.
4000.250 27.		Screw
3715.095.RK 28.		Rotor
3147.059.CO 29.		Intermediate wheel (counter)
3402.006.CO 30.		Minute counting wheel



F

2020.149.G 31.		Counter train wheel bridge Counter train wheel bridge held by 3 screws 4000.250.
4000.250 32.		Screw

4000.250 33.		Screw
-----------------	---	--------------


3621.053.RK 34.		Coil Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.
--------------------	---	---


3621.054.RK 35.		Coil (counter 9h, chrono) Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.
--------------------	---	--


3621.054.RK 36.		Coil (counter 9h, chrono) Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.
--------------------	---	--

4000.250 37.		Screw
-----------------	---	--------------


3601.118 38.		Contact strip Contact strip held by 1 screw 4000.250.
-----------------	--	---


4000.250 39.		Screw
-----------------	---	--------------


3603.034 40.		Battery insulator
-----------------	---	--------------------------

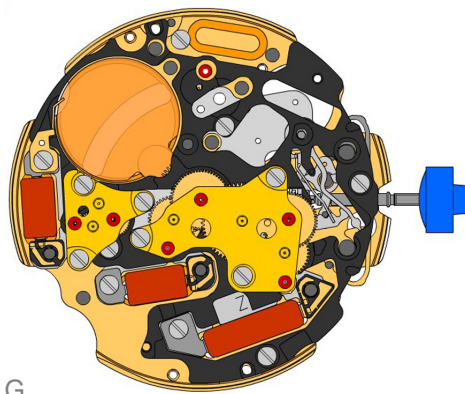

G

4000.248 41.		Screw
-----------------	---	--------------

3603.069 42.		Circuit insulator
-----------------	---	--------------------------

3601.107.G 43.		Pusher contact spring
-------------------	---	------------------------------

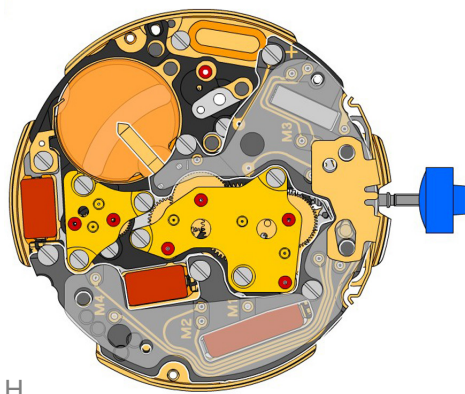
H

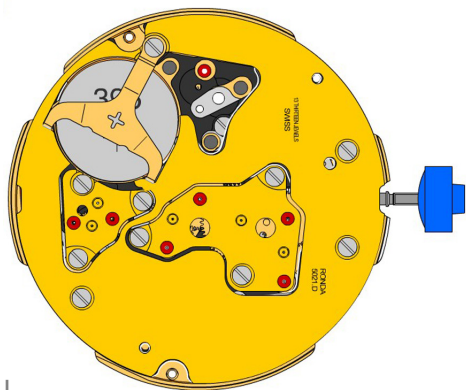


2130.137.G.M01.5021D Electronic module cover
44.  Electronic module cover held by 3 screws 4000.250.





3600.010.HGF Battery 395
45.  Battery 395


3601.109.G Bridle +
46.  Bridle held by 1 screw 4000.250.

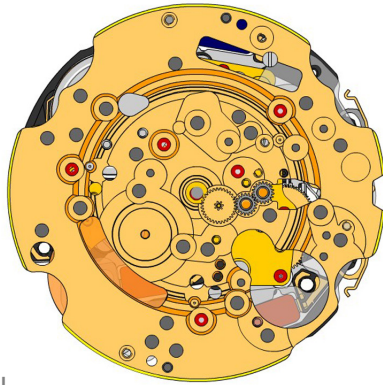4000.250 Screw
47.  Screw





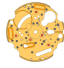

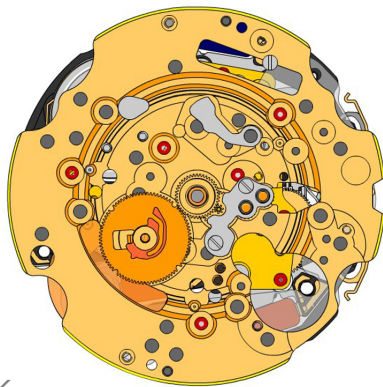

J

2000.574.G 48.		Main plate
3004.164 49.		Setting wheel
3004.164 50.		Setting wheel
3007.054.CO 51.		Minute wheel





K

2130.143 52.		Minute train bridge Minute train bridge held by 2 screws 4000.305.
4000.305 53.		Screw
3301.241 54.		Hour wheel (Aig.1)
3315.016 55.		Friction spring
3004.224.CO 56.		Date indicator driving wheel
3500.049 57.		Date jumper












L

3504.208.AB.1.A 58.		Date indicator (standard) Nick of the indicator at 3 o'clock.
2130.141 59.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250.




M

3905.070 60.		Date jumper spring Insert the date jumper spring in the provided opening.
2130.140.G 61.		Date mechanism maintaining plate Date mechanism maintaining plate held by 2 screws 4000.250.
4000.250 62.		Screw
3506.072.G 63.		Dial support
8200 64.		Moebius 8200
9014 65.		Moebius 9014
124 66.		Jismaa 124
9020 67.		Moebius 9020

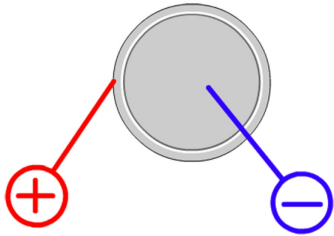


Battery	395
Voltage	1.55 V

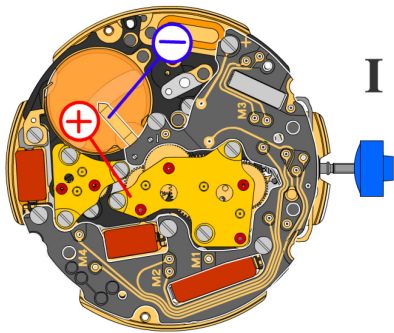


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption	1.32 μA
Maximal consumption	1.65 μA
Rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.20 V

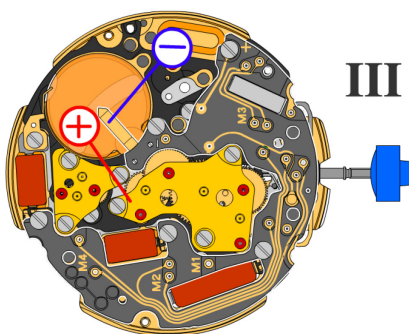

Setting stem in position III, 60 s measuring interval:

Typical consumption	0.10 μA
Maximal consumption	0.30 μA

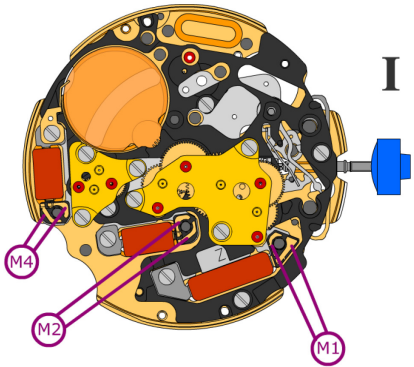


Coil resistance M1

1.90 k Ω .. 2.10 k Ω


Coil resistance M2

1.68 k Ω .. 1.88 k Ω

Coil resistance M4

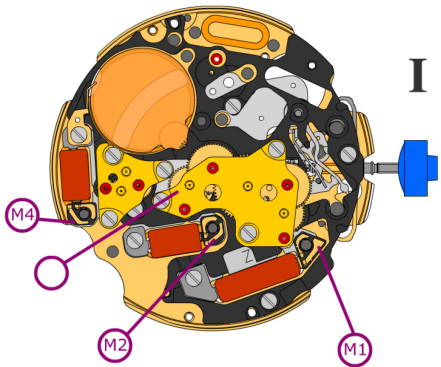1.68 k Ω .. 1.88 k Ω


Coil resistances M1-M4

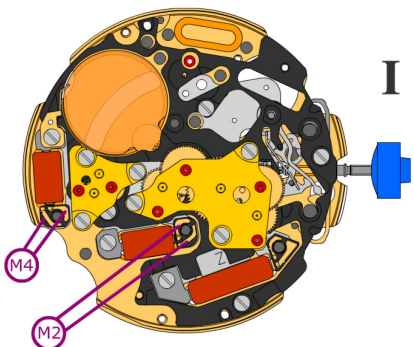 ∞ k Ω

Signal generator (4.9 ms, 8 Hz):

 Lower working voltage
limits M2-M4

1.20 V