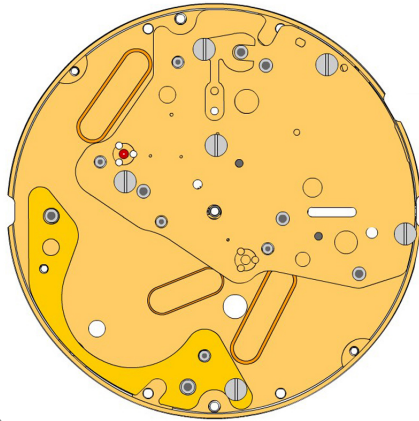
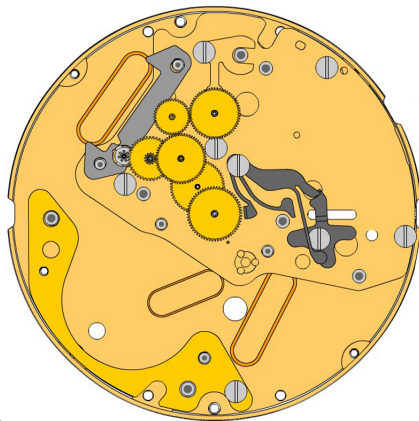



















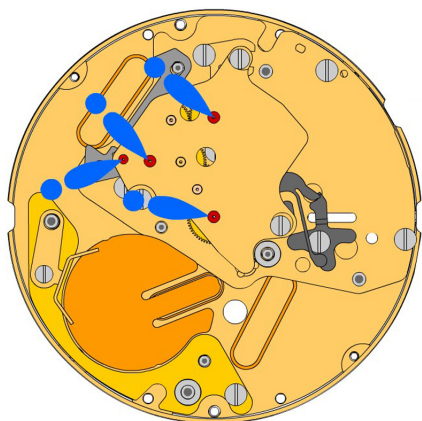


A

B

C


2000.669.G 1.		Main Plate
3305.363.CO 2.		Cannon pinion with driver B (Aig.1)
2030.028.CO 3.		Centre bridge Centre bridge held by 3 screws 4000.250.
4000.250 4.		Screw
3406.039 5.		Sliding attachment Sliding attachment held by 1 screw 4000.250.
2130.181.CO 6.		Combined maintaining plate Combined maintaining plate held by 1 screw 4000.250.
4000.250 7.		Screw
3016.028 8.		Lever for setting lever Lever for setting lever held by 1 screw 4000.249.
4000.249 9.		Screw
3016.027 10.		Stop lever Stop lever Position held by 1 screw 4000.249.
4000.249 11.		Screw
3622.044 12.		Stator
3715.105.RK 13.		Rotor
3147.060.CO 14.		Intermediate wheel
3122.070.CO 15.		Third wheel
3136.174.CO 16.		Centre second wheel (Aig.1)
3004.203.CO 17.		Seconde intermediate wheel
3136.182.CO 18.		Small second wheel
3136.173.CO 19.		Centre second wheel (Aig.1)


D

2020.170.G
20.  **Train wheel bridge**
Train wheel bridge held by 3 screws 4000.250.

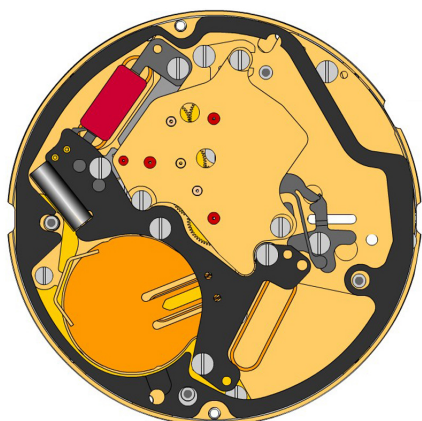
4000.244
21.  **Screws**

3603.080
22.  **Battery insulator**

3601.120.G
23.  **Battery clamp +**
Battery clamp held by 1 screw 4000.248.

4000.248
24.  **Screw**

3503.071
25.  **Tube**


E

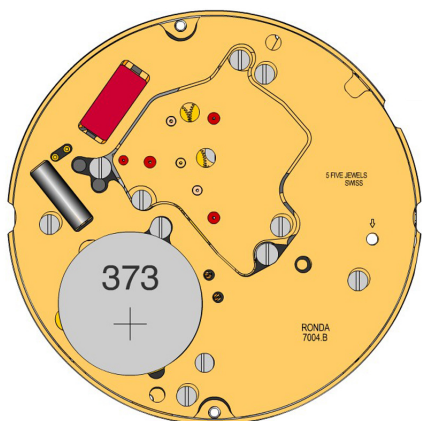
3612.196
26.  **Electronic module**
Electronic module held by 5 screws 4000.250.

4000.250
27.  **Screw**

3603.081
28.  **Spacer**

4000.244
29.  **Screws**

3600.032.HGF
30.  **Battery 381**


F

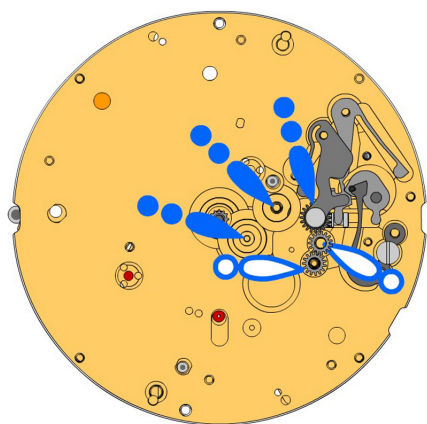
2000.669.G
31.  **Main Plate**

3017.054.CO
32.  **Setting lever**

3905.063
33.  **Setting lever jumper (3 positions)**
Setting lever jumper held by 1 screw 4000.282.

4000.282
34.  **Screw**


3001.061.FI
35.  **Sliding pinion**

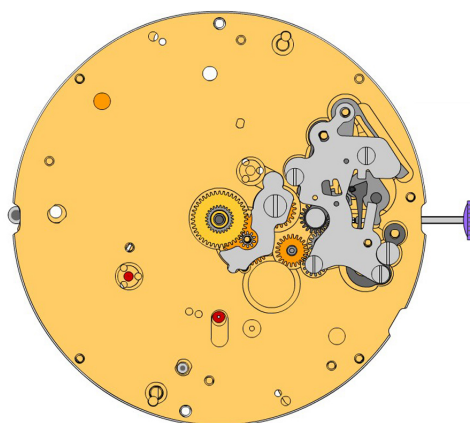

G


3015.077
36.  **Yoke (3 positions)**
Tensioning the spring arm.

3004.200
37.  **Corrector setting wheel**

3004.200
38.  **Corrector setting wheel**


3015.078.CO
39.  **Rocking bar (3 positions)**
Tensioning the spring arm.


H


2130.194
40.  **Setting mechanism cover**
Setting mechanism cover held by 4 screws 4000.305.

4000.305
41.  **Screws**

3000.194.CO
42.  **Stem**

3004.204
43.  **Intermediate setting wheel**

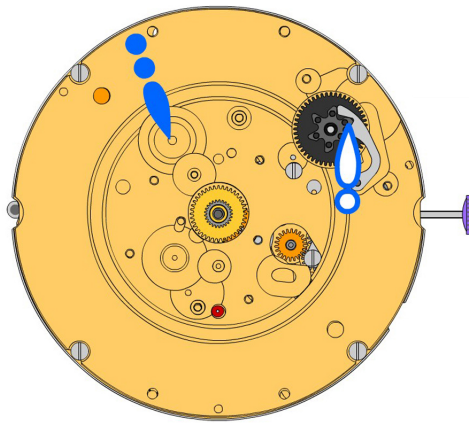
3007.079.CO
44.  **Minute wheel**

2130.185
45.  **Minute train bridge**
Minute train bridge held by 1 screw 4000.278.

4000.278
46.  **Screw**

3301.296.CO
47.  **Hour wheel (Aig.1)**

3147.066.CO
48.  **Date corrector setting wheel**



2000.671.G
49.



Main plate retro
Main plate retro held by 4 screws 4000.248.

4000.248
50.



Screw

3004.209
51.



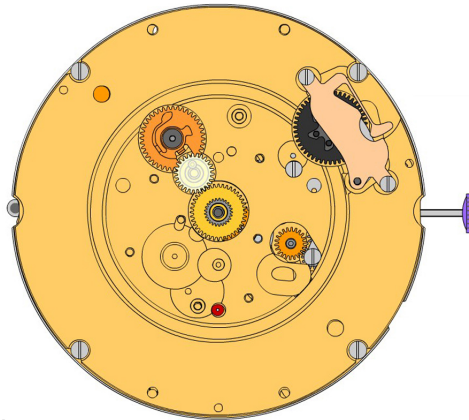
Tens indicator driving wheel
The short tooth of the tens indicator driving wheel must point to the center of the movement.

3500.073
52.



Tens jumper

I



2130.187
53.



Tens jumper maintaining plate
Tens jumper maintaining plate held by 2 screws 4000.279. Tensioning the spring arm.

4000.279
54.



Screw

3004.208.CO
55.



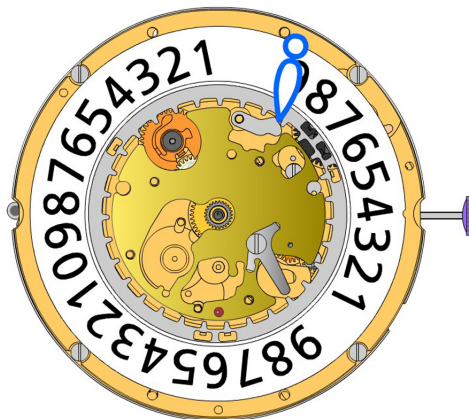
Date indicator driving wheel

3147.061
56.



Intermediate date wheel

J



2130.188
57.



Date indicator plate

3905.068
58.



Date corrector spring
Date corrector spring held by 1 screw 4000.244.

3905.066
59.



Day rack lever spring
Tensioning the spring arm.

3500.069
60.



Day jumper
Tensioning the spring arm.

3500.068
61.



Date jumper

3504.229.AF.1.A
62.






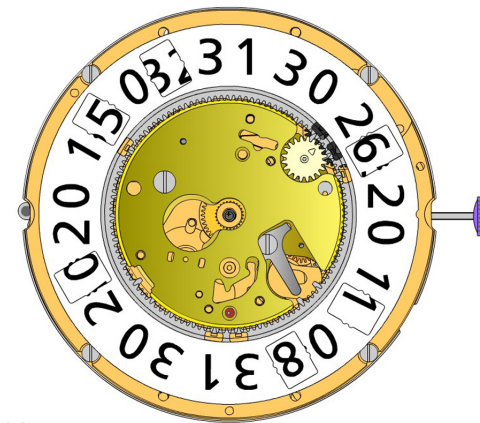
Units indicator (standard)
Nick of the indicator at 3 o'clock.

K







L

2130.189 63.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250.
4000.250 64.		Screw
3905.064 65.		Date jumper spring Insert the date jumper spring in the provided opening.



M

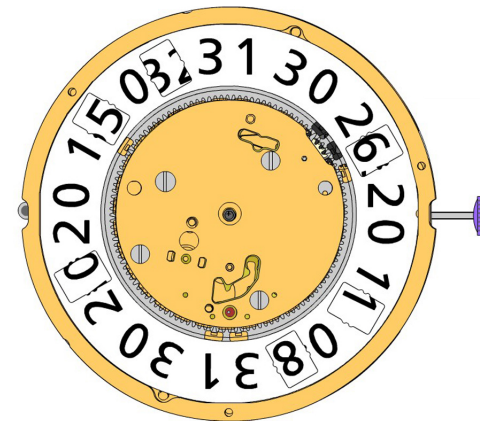
3147.062 66.		Tens intermediate wheel Arrow positioning radially outwards.
3315.003 67.		Friction spring
3504.230.AF.1.A 68.		Tens indicator (standard) Nick of the indicator at 3 o'clock.

2130.190.G 69.		Date mechanism maintaining plate (12h) Date mechanism maintaining plate held by 3 screws 4000.320.
-------------------	--	--

4000.320 70.		Screw
-----------------	---	--------------

3506.077.G 71.		Intermediate dial support Polished version first.
-------------------	---	---

3506.076.G 72.		Dial support
-------------------	---	---------------------



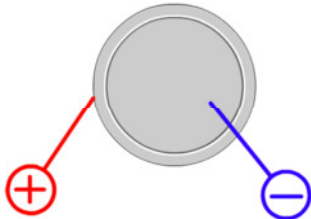
N

8200 73.		Moebius 8200
-------------	---	---------------------

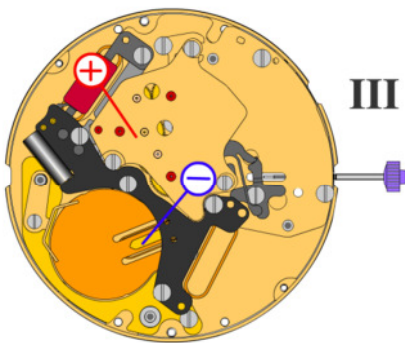
9014 74.		Moebius 9014
-------------	---	---------------------

124 75.		Jismaa 124
------------	---	-------------------

9020 76.		Moebius 9020
-------------	---	---------------------

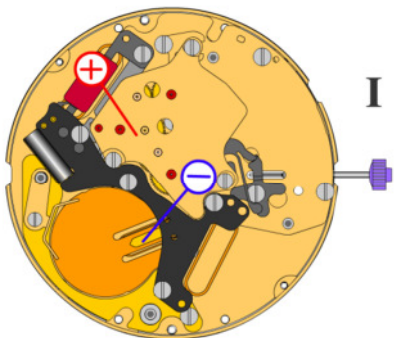


Battery	381
Voltage	1.55V


III

*Setting stem in position III,
60s measuring interval:*

Typical consumption	0.1 μA
Maximal consumption	0.3 μA


I

*Stem in position I, date
mechanism not in gear:*

Typical consumption	1.43 μA
Maximal consumption	3.1 μA

60s measuring time:

Instantaneous rate **-10s/mth .. +20s/mth**

Lower working voltage limit	1.20 V
-----------------------------	---------------