




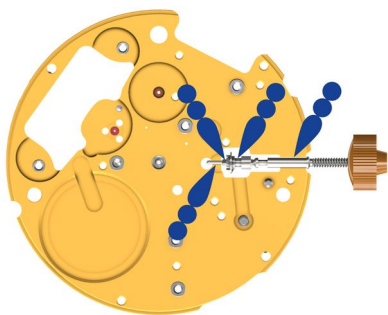


- | | | | |
|---|---|-------------|------------------|
| 1 |  | 2000.675.G | Main plate |
| 2 |  | 3000.189.CO | Working stem |
| 3 |  | 3001.056.FI | Sliding pinion D |
| 4 |  | 9020 | Moebius 9020 |

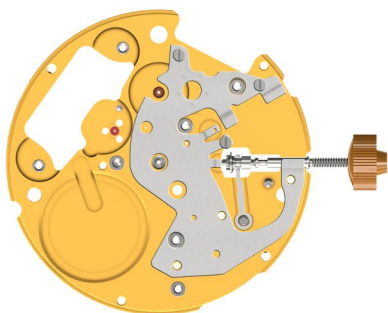


- | | | | |
|---|---|----------|-------------------------|
| 5 |  | 2130.252 | Setting mechanism cover |
| 6 |  | 4000.321 | Screw |
| 7 |  | 4000.321 | Screw |
| 8 |  | 4000.321 | Screw |
| 9 |  | 3015.083 | Bottom yoke |

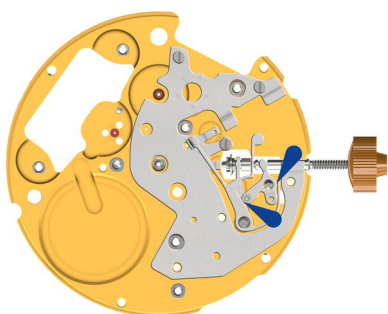


- | | | | |
|----|---|-------------|---------------|
| 10 |  | 3017.056.CO | Setting lever |
| 11 |  | 3015.082 | Yoke |
| 12 |  | 8200 | Moebius 8200 |

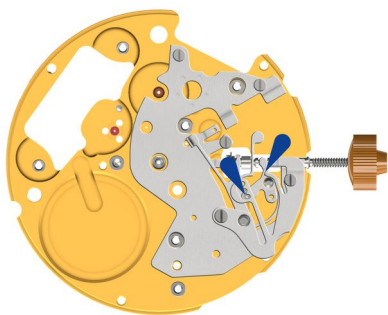



- | | | | |
|----|---|----------|--|
| 13 |  | 3905.069 | Setting lever jumper
Tensioning the spring arm. |
| 14 |  | 4000.312 | Screw |
| 15 |  | 4000.328 | Screw |
| 16 |  | 8200 | Moebius 8200 |

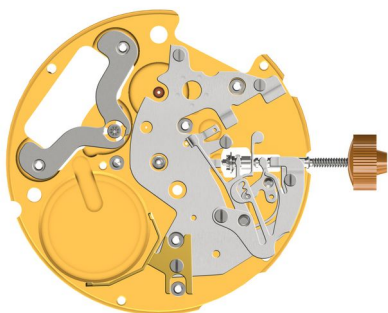


- | | | | |
|----|---|-------------|-------------------|
| 17 |  | 3601.117.G | Battery clamp (+) |
| 18 |  | 4000.244 | Screw |
| 19 |  | 3622.042 | Stator |
| 20 |  | 3715.103.RK | Rotor |

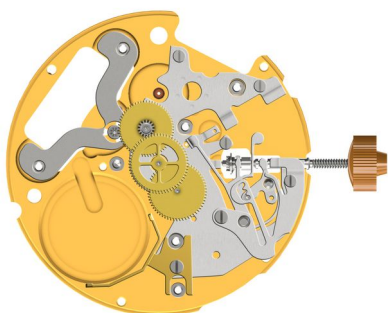


- | | | | |
|----|---|-------------|----------------------------|
| 21 |  | 3147.056.CO | Intermediate wheel |
| 22 |  | 3122.059.CO | Third wheel |
| 23 |  | 3136.164.CO | Center second wheel (Aig.) |

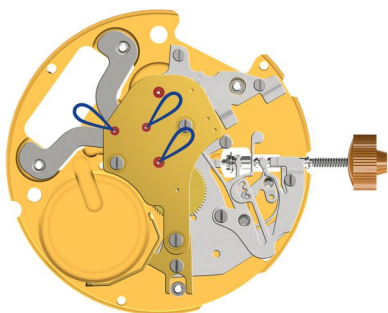


24		2020.180.G	Train wheel bridge
25		4000.279	Screw
26		4000.279	Screw
27		4000.279	Screw
28		9014	Moebius 9014

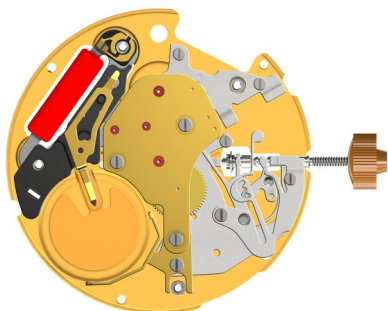


29		3621.060.RK	Coil Attention: Please hold the coil only on the grey coil core.
30		3603.075	Battery insulator
31		3603.074	Bridle (-) insulator
32		3601.116	Bridle -

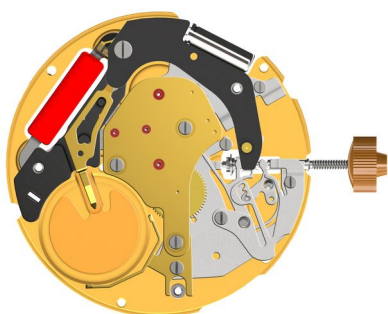

33		3612.270.RK	Electronic module
34		4000.318	Screw

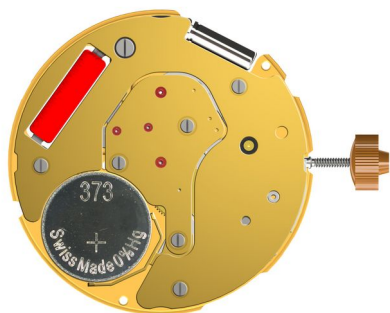


- | | | | |
|----|---|----------------------|-----------------------------|
| 35 |  | 2130.168.G.M01.6003D | Electronic module cover |
| 36 |  | 4000.102 | Screw |
| 37 |  | 4000.102 | Screw |
| 38 |  | 4000.102 | Screw |
| 39 |  | 3600.031.HGF | Battery 373 (Ø 9.45 x 1.65) |

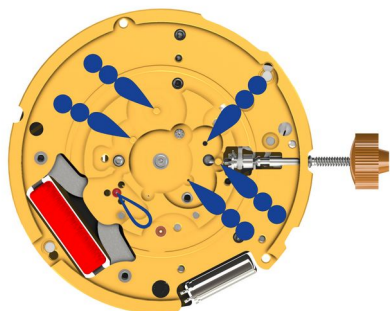

- | | | | |
|----|---|------|--------------|
| 40 |  | 9020 | Moebius 9020 |
|----|---|------|--------------|




- | | | | |
|----|---|------|--------------|
| 41 |  | 9020 | Moebius 9020 |
|----|---|------|--------------|

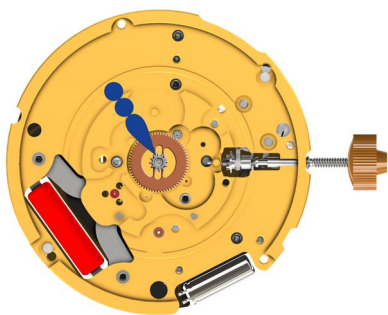

42   3305.344.CO Cannon pinion (Aig.)

43  9020 Moebius 9020

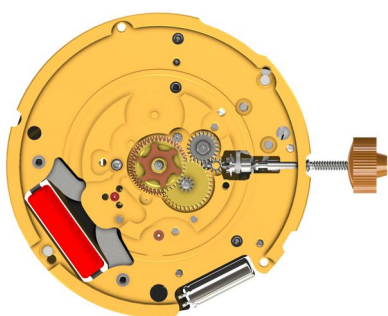


44   3004.253.FI Setting wheel

45   3004.252.FI Intermediate setting wheel

46   3007.087.CO Minute wheel

47   3301.334.CO Hour wheel (Aig.)

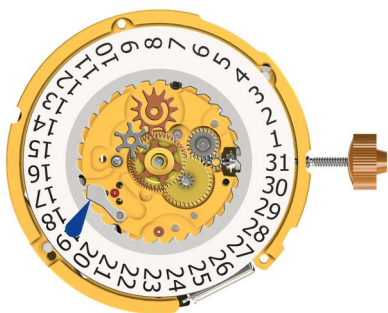

48  3315.001 Friction spring


49  3147.084 Date intermediate setting wheel

50  3004.235 Date indicator driving wheel D

51  3504.239.AA.1.A Date indicator (T3, G3)
Nick of the indicator at 3 o'clock.


52  3500.077 Date jumper

53  8200 Moebius 8200

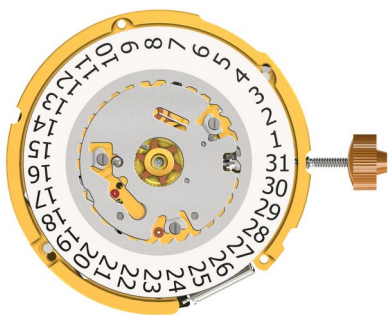


54		3905.103	Date jumper spring
55		2130.217	Date indicator maintaining plate
56		4000.300	Screw
57		4000.300	Screw
58		4000.300	Screw


Measurement

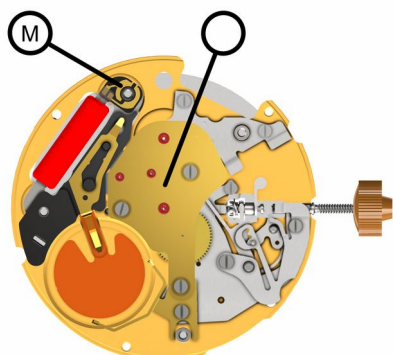


Coil insulation
infinite

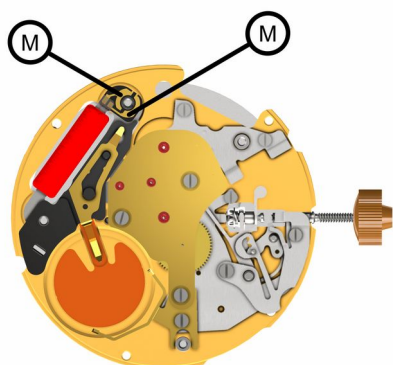

Coil resistance movement
(min./max.) 1610 - 1810 Ohm

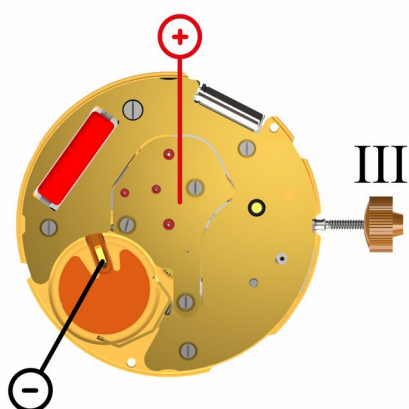

Setting stem in position III, 60 s measuring interval.
(typ./max.) 0.10 / 0.30 μ A

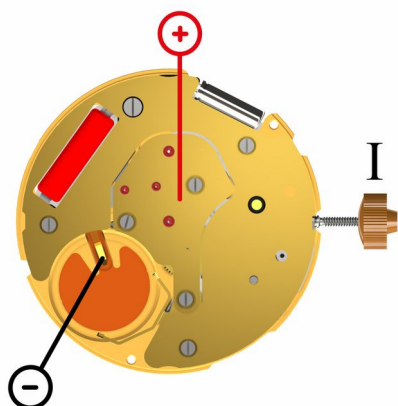

Lower working voltage limit


<1.20 V

60s measuring interval

-10 .. +20 s/mth

Setting stem in position I, calendar not in gear, 60s measuring interval.

(typ./max.) 1.03 / 1.85 μ A

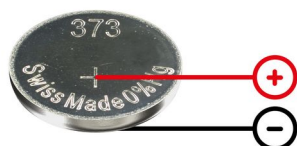

Voltage

typ 1.5V