


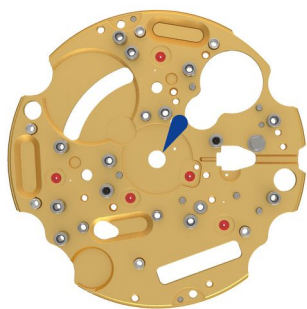





- | | | | |
|---|---|------------|--------------|
| 1 |  | 2000.574.G | Main plate |
| 2 |  | 8200 | Moebius 8200 |

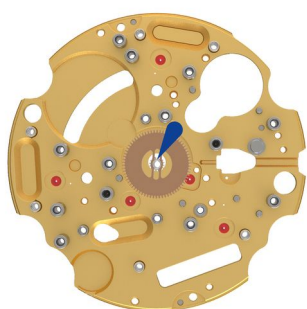


- | | | | |
|---|---|-------------|----------------------|
| 3 |  | 3305.275.CO | Cannon pinion (Aig.) |
| 4 |  | 8200 | Moebius 8200 |

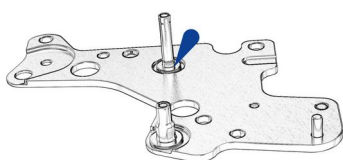


- | | | | |
|---|---|------|--------------|
| 5 |  | 8200 | Moebius 8200 |
|---|---|------|--------------|

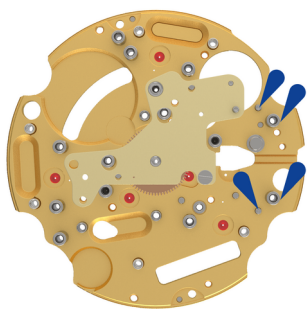


- | | | | |
|---|---|-------------|---------------|
| 6 |  | 2030.032.CO | Center bridge |
| 7 |  | 4000.250 | Schraube |
| 8 |  | 8200 | Moebius 8200 |

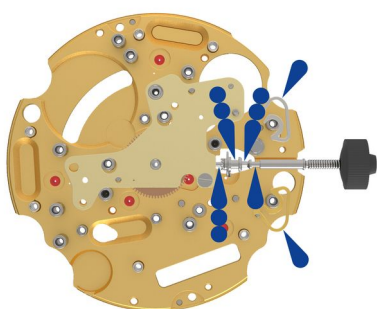


- | | | | |
|----|---|-------------|---|
| 9 |  | 3406.038 | Pusher jumper A
Put the yellow jumper between the two pillars. |
| 10 |  | 3406.030 | Push jumper B
Put the grey jumper between the two pillars. |
| 11 |  | 3000.177.CO | Working stem |
| 12 |  | 3001.055.FI | Sliding pinion |
| 13 |  | 8200 / 9020 | Moebius 8200 / Moebius 9020 |

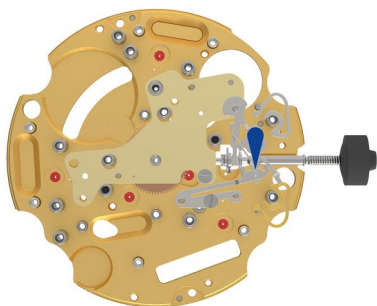


- | | | | |
|----|---|----------|----------------------|
| 14 |  | 3017.049 | Setting lever |
| 15 |  | 3905.049 | Setting lever jumper |
| 16 |  | 4000.250 | Schraube |
| 17 |  | 3015.081 | Yoke |
| 18 |  | 8200 | Moebius 8200 |

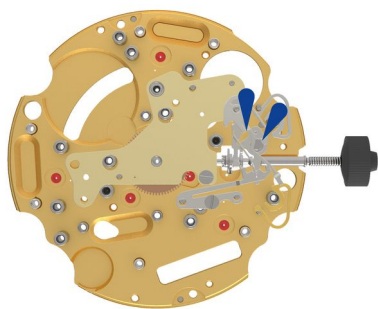

- | | | | |
|----|---|----------|---|
| 19 |  | 3905.067 | Yoke spring
Tensioning the spring arm. |
| 20 |  | 8200 | Moebius 8200 |

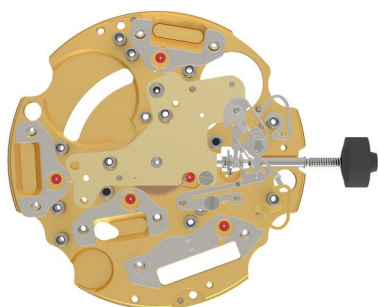


- | | | | |
|----|---|----------|-------------------------------|
| 21 |  | 3622.040 | Stator
Mark "Z" on stator. |
| 22 |  | 3622.039 | Stator |
| 23 |  | 3622.039 | Stator |
| 24 |  | 3622.039 | Stator |

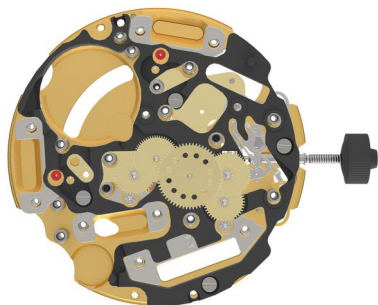


- | | | | |
|----|---|-------------|-----------------------------|
| 25 |  | 3603.079 | Plastic bracket |
| 26 |  | 4000.250 | Schraube |
| 27 |  | 4000.250 | Schraube |
| 28 |  | 4000.250 | Schraube |
| 29 |  | 4000.250 | Schraube |
| 30 |  | 3715.094.RK | Rotor |
| 31 |  | 3147.047.CO | Intermediate wheel (chrono) |
| 32 |  | 3136.143.CO | Chronograph wheel (Aig.) |

33			3715.094.RK	Rotor
34			3147.099.CO	Intermediate wheel
35			3136.142.CO	Seconde wheel long (Aig.)
36			3122.056.CO	Third wheel

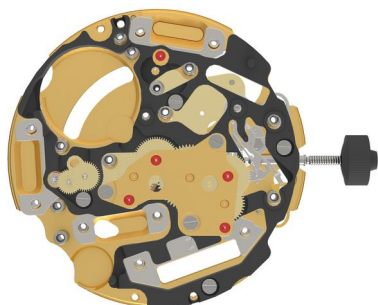


37			2020.148.G	Train wheel bridge
38			4000.250	Schraube
39			4000.250	Schraube
40			4000.250	Schraube
41			3715.095.RK	Rotor
42			3147.048.CO	Intermediate wheel (counter)
43			3402.006.CO	Minute counting wheel

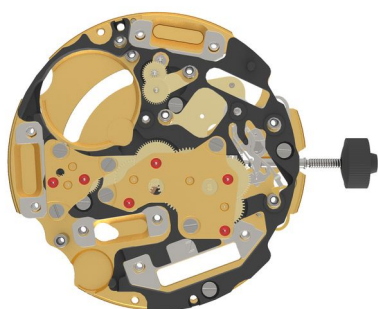


44			2020.149.G	Counter train wheel bridge
45			4000.250	Schraube
46			4000.250	Schraube
47			4000.250	Schraube

48			3715.095.RK	Rotor
49			3147.053.CO	Intermediate wheel (counter 1/10 sec)
50			3402.016.CO	Counting wheel 1/10 sec

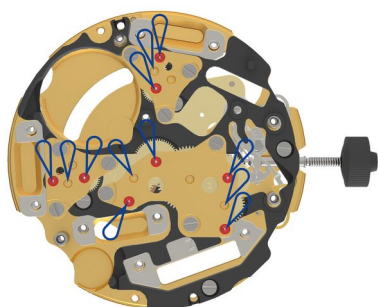


51			2020.149.G	Counter train wheel bridge
52			4000.250	Schraube
53			4000.250	Schraube
54			4000.250	Schraube
55			9014	Moebius 9014

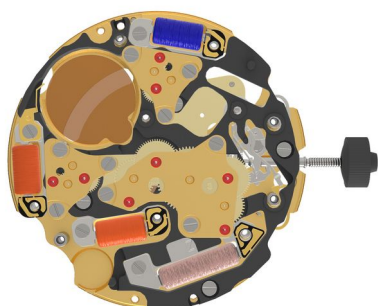


56			3621.053.RK	Coil
			Attention: Please hold the coil only on the grey coil core.	
57			3621.054.RK	Coil
			Attention: Please hold the coil only on the grey coil core.	
58			3621.055.RK	Coil
			Attention: Please hold the coil only on the grey coil core.	
59			3621.054.RK	Coil
			Attention: Please hold the coil only on the grey coil core.	
60			3601.118	Contact strip
61			4000.250	Schraube
62			4000.250	Schraube


63			4000.250	Schraube
64			4000.250	Schraube
65			3603.034	Battery insulator

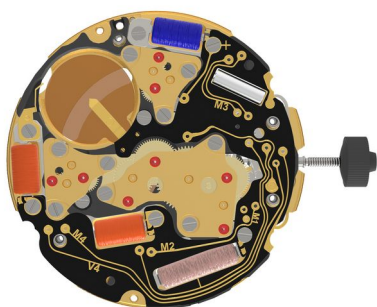

66			3612.247.5040	Electronic module
67			4000.250	Schraube
68			4000.250	Schraube
69			4000.250	Schraube
70			4000.250	Schraube
71			4000.250	Schraube

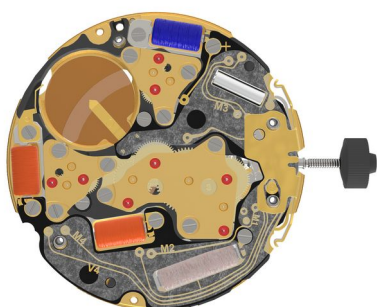


72			3603.069	Circuit insulator
73			3601.107.G	Pusher contact spring

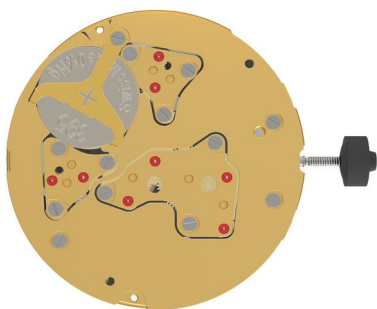

74  2130.137.G.M01.5040.B Electronic module cover

75  4000.250 Schraube


76  4000.250 Schraube

77  4000.250 Schraube

78  3600.010.HGF Battery 395 (Ø 9.50 x 2.70)

79  3601.109.G Bridle +


80  4000.250 Schraube

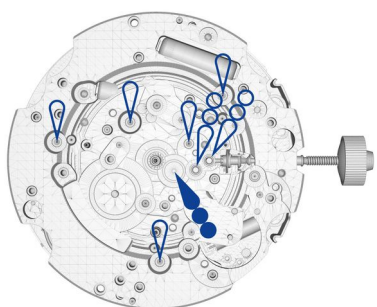

81  I-4 / 9020 / 9014 Moebius I-4 / Moebius 9020 / Moebius 9014


82  3004.164.TA Setting wheel



83  3004.164.TA Setting wheel

84  3007.054.CO Minute wheel


85  2130.143 Minute train bridge

86  4000.305 Screw

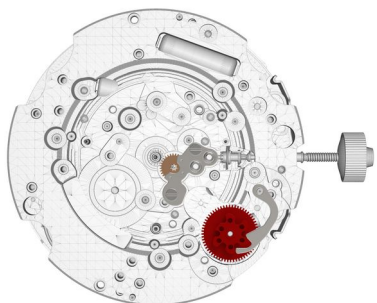

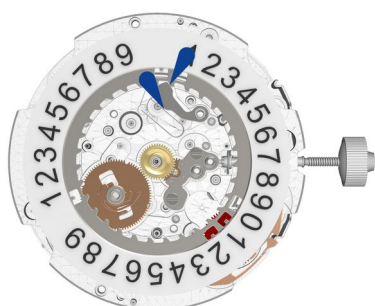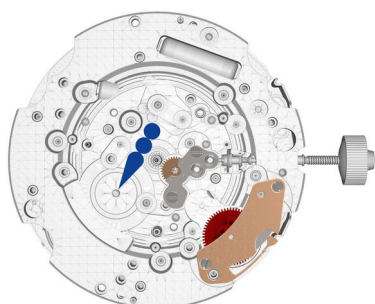

87		4000.305	Screw
88		3004.227	Tens indicator driving wheel The short tooth of the tens indicator driving wheel must point to the center of the movement.
89		3500.075	Tens jumper
90		2130.142	Tens jumper maintaining plate Tensioning the spring arm.
91		4010.306	Screw
92		4010.306	Screw
93		9020	Moebius 9020
94		3004.224.CO	Date indicator driving wheel
95		3301.241	Hour wheel (Aig.)
96		3315.016	Friction spring
97		3504.214.AF.1.A	Units indicator (T3, G12) Nick of the indicator at 3 o'clock.
98		3500.049	Date jumper
99		3905.070	Date jumper spring Insert the date jumper spring in the previous opening.
100		8200	Moebius 8200

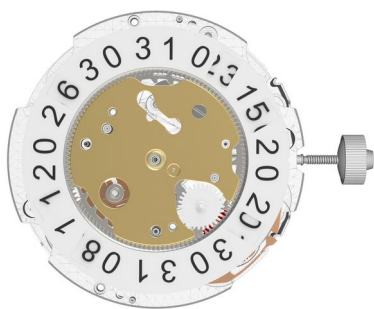

101  2130.141 Date indicator maintaining plate

102  4000.250 Schraube

103  3504.216.AF.1.A Tens indicator (T3, G12)
Nick of the indicator at 3 o'clock.

104  3147.054 Intermediate wheel




105  2130.140.G Date mechanism maintaining plate

106  4000.250 Schraube


107  4000.250 Schraube

108  8200 Moebius 8200

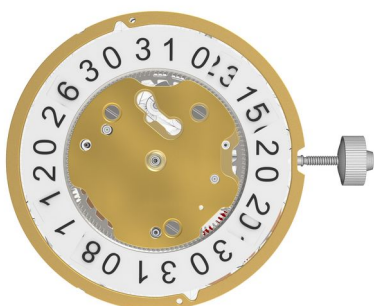


109  3506.072.G Dial support


Measurement

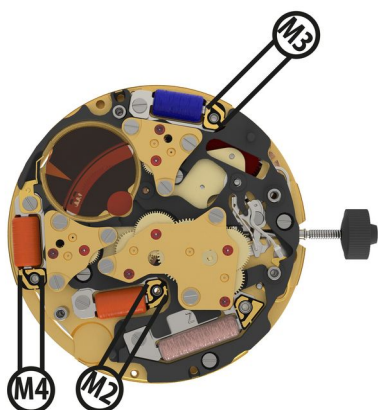

Signal generator (4.9ms, 8Hz)
< 1.20 V

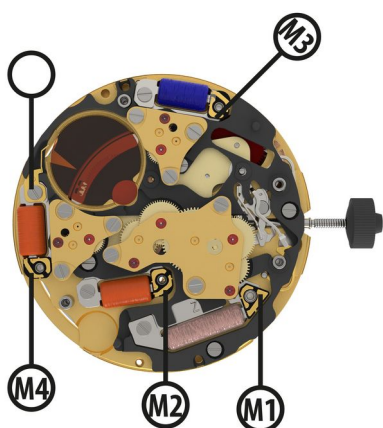

Coil insulation M1 - M4
infinite

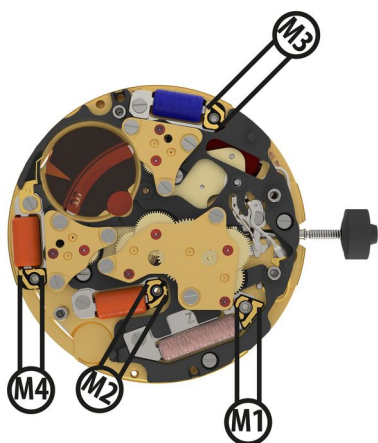


Coil resistance movement
(min./max.) 1900 - 2100 Ohm


Coil resistance M2
(min./max.) 1680 - 1880 Ohm

Coil resistance M3
(min./max.) 1680 - 1880 Ohm

Spulenwiderstand M4
(min./max.) 1680 - 1880 Ohm

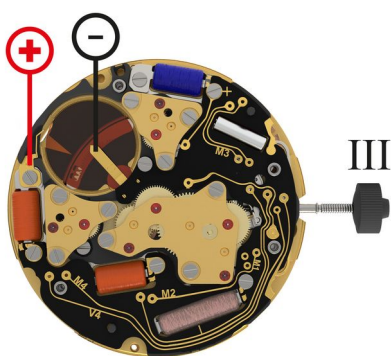

Setting stem in position III, 60 s measuring interval.
(typ./max.) 0.10 / 0.30 μ A

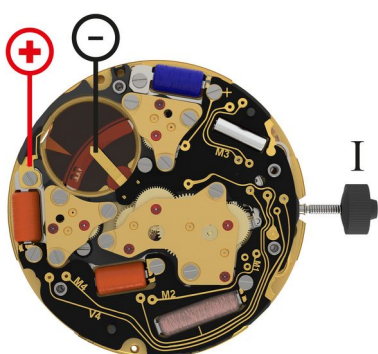

Setting stem in position I, calendar not in gear, 60s measuring interval.

(typ./max.) 1.32 / 1.65 μ A

Lower working voltage limit
<1.20 V

60s measuring interval
-10 .. +20s/mth



Voltage
typ 1.5 V