




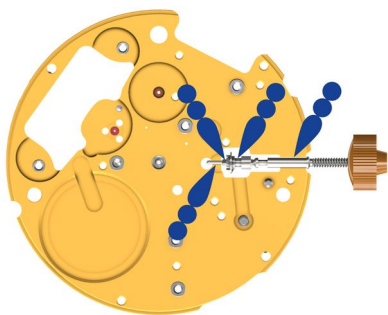


- | | | | |
|---|---|-------------|------------------|
| 1 |  | 2000.675.G | Main plate |
| 2 |  | 3000.189.CO | Working stem |
| 3 |  | 3001.056.FI | Sliding pinion D |
| 4 |  | 9020 | Moebius 9020 |

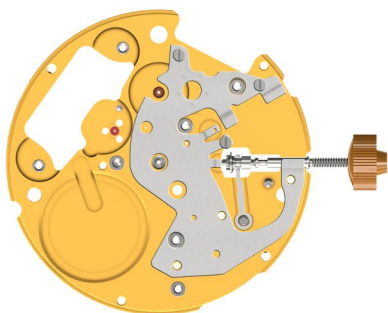


- | | | | |
|---|---|----------|-------------------------|
| 5 |  | 2130.252 | Setting mechanism cover |
| 6 |  | 4000.321 | Screw |
| 7 |  | 4000.321 | Screw |
| 8 |  | 4000.321 | Screw |
| 9 |  | 3015.083 | Bottom yoke |

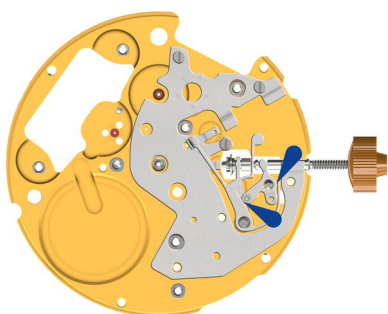


- | | | | |
|----|---|-------------|---------------|
| 10 |  | 3017.056.CO | Setting lever |
| 11 |  | 3015.082 | Yoke |
| 12 |  | 8200 | Moebius 8200 |

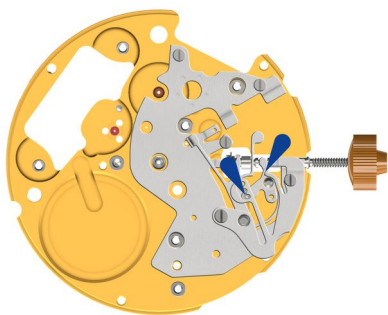



- | | | | |
|----|---|----------|--|
| 13 |  | 3905.069 | Setting lever jumper
Tensioning the spring arm. |
| 14 |  | 4000.312 | Screw |
| 15 |  | 4000.328 | Screw |
| 16 |  | 8200 | Moebius 8200 |

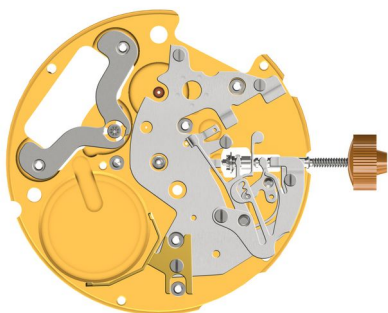


- | | | | |
|----|---|-------------|-------------------|
| 17 |  | 3601.117.G | Battery clamp (+) |
| 18 |  | 4000.244 | Screw |
| 19 |  | 3622.042 | Stator |
| 20 |  | 3715.103.RK | Rotor |

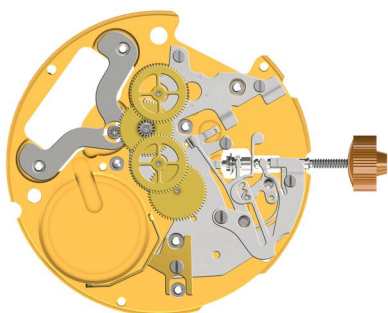


- | | | | |
|----|---|-------------|----------------------------------|
| 21 |  | 3147.056.CO | Intermediate wheel |
| 22 |  | 3122.059.CO | Third wheel |
| 23 |  | 3136.168.CO | Small second wheel (Aig.) |
| 24 |  | 3136.163.CO | Center second wheel short (Aig.) |

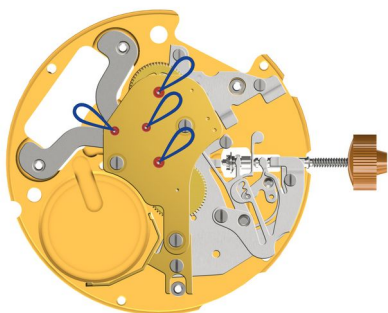


25		2020.180.G	Train wheel bridge
26		4000.279	Screw
27		4000.279	Screw
28		4000.279	Screw
29		9014	Moebius 9014

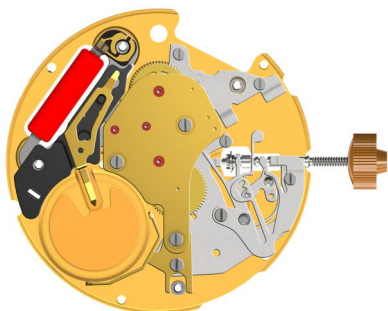


30		3621.060.RK	Coil Attention: Please hold the coil only on the grey coil core.
31		3603.075	Battery insulator
32		3603.074	Bridle (-) insulator
33		3601.116	Bridle -

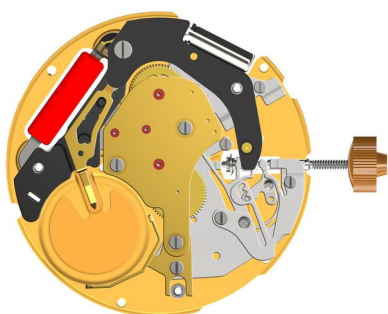

34		3612.270.RK	Electronic module
35		4000.318	Screw

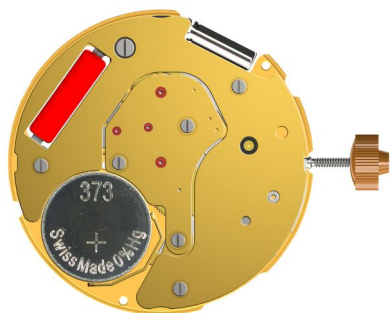


- | | | | |
|----|---|----------------------|-----------------------------|
| 36 |  | 2130.168.G.M01.6004D | Electronic module cover |
| 37 |  | 4000.102 | Screw |
| 38 |  | 4000.102 | Screw |
| 39 |  | 4000.102 | Screw |
| 40 |  | 3600.031.HGF | Battery 373 (Ø 9.45 x 1.65) |

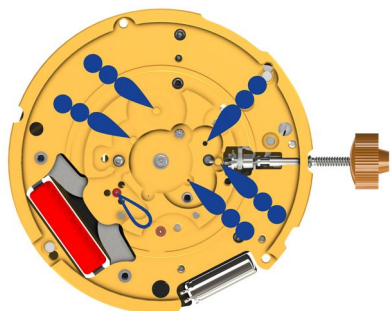

- | | | | |
|----|---|-------------|--|
| 41 |  | 9014 / 9020 | Moebius 9014 / Moebius 9020
1x Moebius 9014 / 5x Moebius 9020 |
|----|---|-------------|--|




- | | | | |
|----|---|------|--------------|
| 42 |  | 9020 | Moebius 9020 |
|----|---|------|--------------|

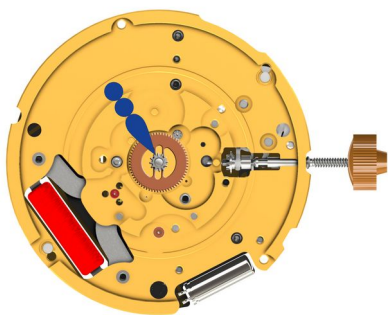

43   3305.345.CO Cannon pinion (Aig.)

44  9020 Moebius 9020

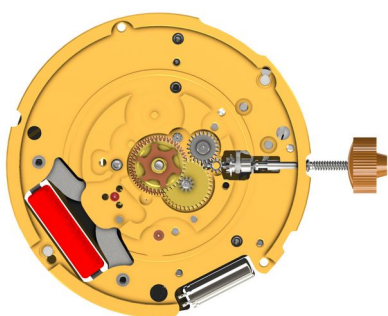


45   3004.253.FI Setting wheel

46   3004.252.FI Intermediate setting wheel

47   3007.087.CO Minute wheel

48   3301.335.CO Hour wheel (Aig.)

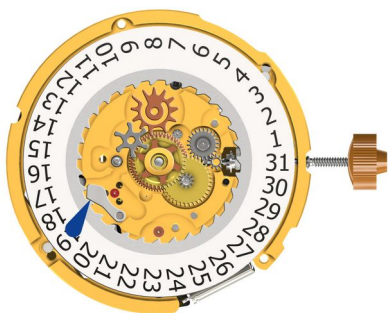

49  3315.001 Friction spring


50  3147.084 Date intermediate setting wheel

51  3004.235 Date indicator driving wheel D

52  3504.239.AA.1.A Date indicator (T3, G3)
Nick of the indicator at 3 o'clock.


53  3500.077 Date jumper

54  8200 Moebius 8200

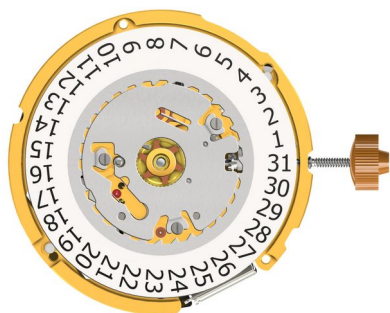


55		3905.103	Date jumper spring
56		2130.217	Date indicator maintaining plate
57		4000.300	Screw
58		4000.300	Screw
59		4000.300	Screw


Measurement

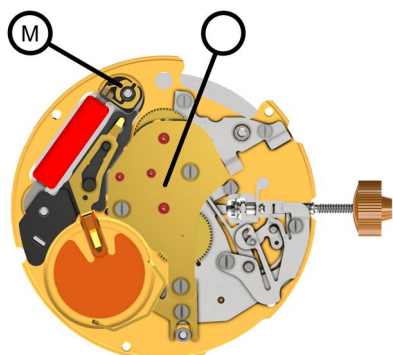


Coil insulation M
infinite

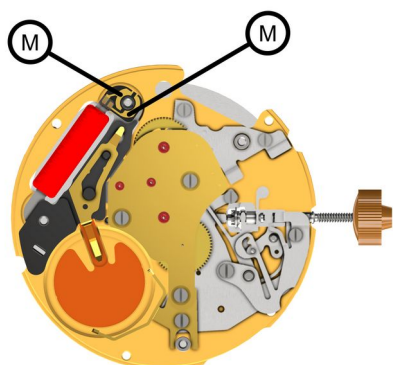

Coil condition movement
(min./max.) 1610 - 1810 Ohm

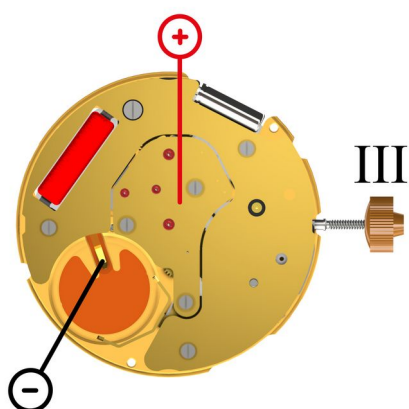

Setting stem in position III, 60 s measuring interval.
(typ./max.) 0.10 / 0.30 μ A

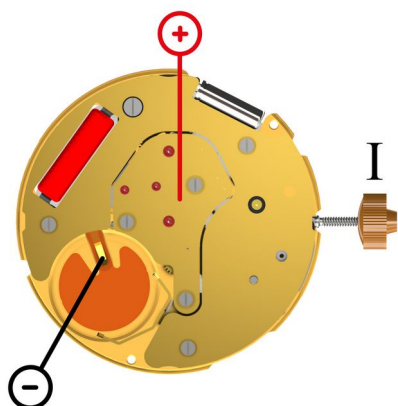

Setting stem in position I, calendar not in gear, 60s measuring interval.

(typ./max.) 1.03 / 1.85 μ A

60s measuring interval

-10 .. +20s/mth

Lower working voltage limit

<1.20 V



Battery tension

typ 1.5V