



Movement holder
Removing setting stem
 H5XXX.1T



Movement holder
Setting hands
 H5XXX.1A

Fitting dial and hands

- Crown in position III
- Wind crown forwards, until date changes
- Remove working stem
- Fit dial
- Point all hands towards 12 o'clock
- Set time
- Zeroing the chronograph hands*
- Crown in position II
- Set date
- Crown in position I
- Setting the second time**

Date switching duration:


~1¼h

*Zeroing the chronograph hands

- A. Activate pusher A and B for 2 seconds at the same time, the chronograph second hand rotates once
- B. Pusher A → to correct chrono seconds hand
- C. Pusher B → to jump to minute hand
- D. Pusher A → to correct hand position

**Setting the second time

- A. Press pusher B for >2 seconds, the minute hand of the second time jumps forward
- B. Push pusher B >1 s → hands move forward a minute
- C. Push pusher B 1-2 s → hands move forward an hour
- D. Push pusher B >2 s → hands move forward continuously
- E. After 10 seconds of inactivity, the set time is applied.

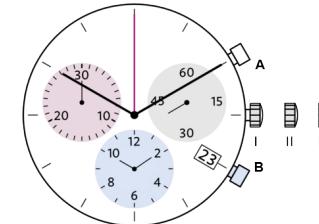

General instructions

Removing the setting stem can only be effected in position I.

The use of supporting screws is essential when mounting the hands.

Permitted hand setting strengths:

Hr. / min. hands: <40N

Other hands: <30N

During quick date correction (setting stem in position II), a date switching speed of 5 d/s must not be exceeded.