



**Movement holder**  
*Removing setting stem*  
H5XXX.1T



**Movement holder**  
*Setting hands*  
H5XXX.1A

## Fitting dial and hands


- Crown in position III
- Wind crown forwards, until date changes
- Remove working stem
- Fit dial
- Point all hands towards 12 o'clock
- Set time
- Zero chronograph hand\*
- Crown in position II
- Set date
- Crown in position I

## Date switching duration:

~1¼hrs

## \*Zeroing the Chronograph hand

- Activate pusher A and B for 2 seconds at the same time  
(Chrono seconds hand rotates once)
- Pusher A → to correct chrono seconds hand
- Pusher B → to jump to hour hand
- Pusher A → to correct hand position
- Pusher B → to jump to minute hand
- Pusher A → to correct hand position

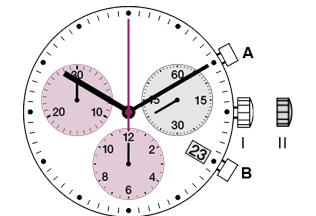

## General Instructions

*Removing the setting stem can only be effected in Pos. I.*

*The use of supporting screws is essential when mounting the hands.*

*Permitted hand setting strengths:*

*Hr / min. hands: <40N*

*Other hands: <30N*

*During quick date correction (setting stem in position II), a date switching speed of 5 d/s must not be exceeded.*