



**Movement holder**  
Removing setting stem  
HZXX.1T



**Movement holder**  
Setting hands  
HZXX.2A

### Fitting dial and hands


- Crown in position III
- Wind hour hand forwards, until date changes
- Remove working hand
- Fit dial
- Place all hands towards 12 o'clock
- Wind hand forwards to set actual time
- Zero chronograph hand\*
- Crown in position II
- Set date
- Crown in position I

### Date switching duration:

~1¼hrs

### \*Zeroing the Chronograph hand

- Press pushers A and B for 2 seconds at the same time  
(Chrono seconds hand rotates once)
- Pusher A - to correct chrono seconds hand
- Pusher B - to jump to minute hand
- Pusher A - to correct hand position

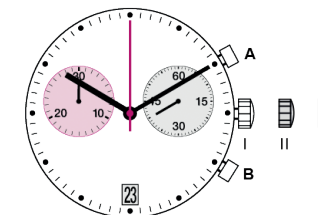

### General Instructions

Removing the setting stem can only be effected in Pos. I.

The use of supporting screws is essential when mounting the hands.

Permitted hand setting strengths:

Hr / min. hands: <40N

Other hands: <30N

During quick date correction (setting stem in position II), a date switching speed of 5 d/s must not be exceeded.

### Complement for T2 instructions Z50/Z60

It might be possible that the date jump will not be finalized when the date is set manually. In that case the movement will be adjusted automatically at the next date jump.