A

B

2000.574.G 1.		**Main plate**
3305.275.CO 2.		**Cannon pinion with driver (Aig.1)**
2030.017.CO 3.		**Centre bridge** Centre bridge held by 1 screw 4000.250.
4000.250 4.		**Screw**
3001.055.FI 5.		**Sliding pinion**
3000.177.CO 6.		**Setting stem**
3017.049 7.		**Setting lever**
3905.049 8.		**Setting lever jumper (3 positions)** Setting lever jumper held by 1 screw 4000.250.
4000.250 9.		**Screw**
3015.081 10.		**Yoke (3 positions)** Parts 3015.081 and 3905.067 must be exchanged together.
3905.067 11.		**Yoke spring** Tensioning the spring arm. Parts 3015.081 and 3905.067 must be exchanged together.
3406.030 12.		**Pusher jumper B** Put the grey jumper between the two posts on the further side.
3406.038 13.		**Pusher jumper A** Put the yellow jumper between the two posts on the closer side.
3622.040 14.		**Stator** Mark |Z| on stator.
3622.039 15.		**Stator (counter 6h, 9h and chrono)**
3622.039 16.		**Stator (counter 6h, 9h and chrono)**
3622.039 17.		**Stator (counter 6h, 9h and chrono)**
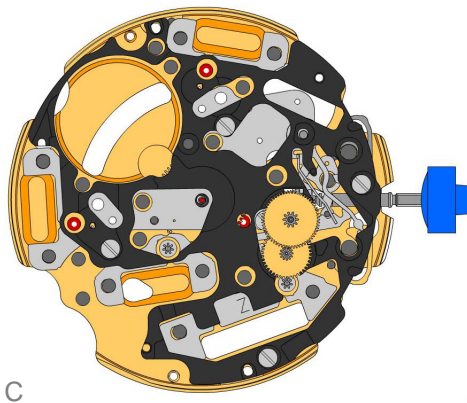
3603.079 18.		**Plastic bracket** Plastic bracket held by 4 screws 4000.250.
4000.250 19.		Screw
3715.094.RK 20.		Rotor
3715.094.RK 21.		Rotor
3147.046.CO 22.		Intermediate wheel
3136.142.CO 23.		Second wheel (long)
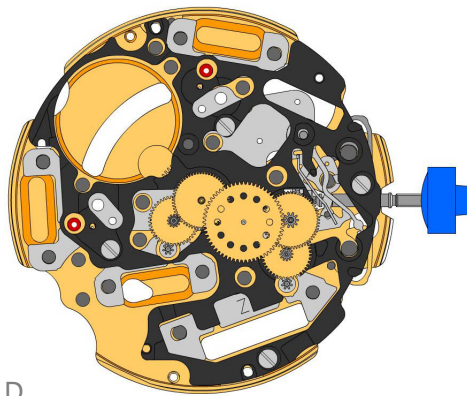
3147.047.CO 24.		Intermediate wheel (chrono)
3136.143.CO 25.		Chronograph wheel (Aig.1)
3122.056.CO 26.		Third wheel
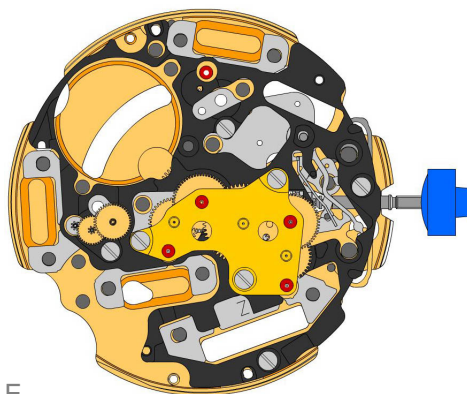
2020.148.G 27.		**Train wheel bridge** Train wheel bridge held by 3 screws 4000.250.
4000.250 28.		Screw
3715.095.RK 29.		Rotor
3147.048.CO 30.		Intermediate wheel (counter)
3402.006.CO 31.		Minute counting wheel

C

D

E
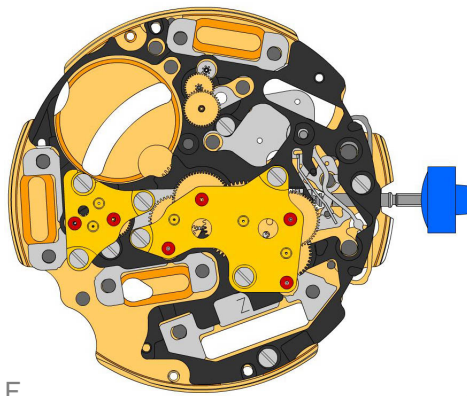
Part No.		Description
2020.149.G 32.		**Counter train wheel bridge** Counter train wheel bridge held by 3 screws 4000.250.
4000.250 33.		**Screw**
3715.095.RK 34.		**Rotor**
3147.048.CO 35.		**Intermediate wheel (counter 12h)**
3402.006.CO 36.		**Minute counting wheel**
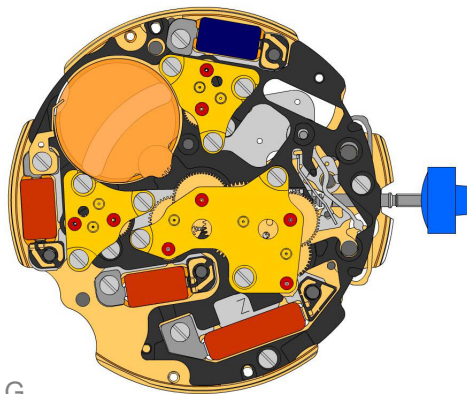
|		
2020.149.G 37.		**Counter train wheel bridge** Counter train wheel bridge held by 3 screws 4000.250.
4000.250 38.		**Screw**
3621.053.RK 39.		**Coil** Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.
3621.054.RK 40.		**Coil (counter 9h, chrono)** Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.
3621.054.RK 41.		**Coil (counter 9h, chrono)** Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.
3621.055.RK 42.		**Coil (counter 6h)** Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.
4000.250 43.		**Screw**
3601.118 44.		**Contact strip** Contact strip held by 1 screw 4000.250.
4000.250 45.		**Screw**
3603.034 46.		**Battery insulator**
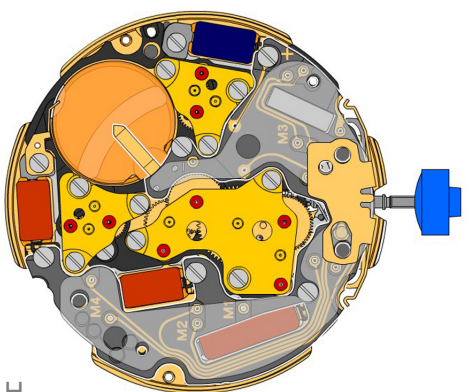
|		
3612.144.5030 47.		**Electronic module** Electronic module held by 5 screws 4000.248. Electronic measurements may be realised now. Parts 3612.144.5030, 3715.095.RK and 3147.048.CO must be exchanged together.
4000.248 48.		**Screw**
3603.069 49.		**Circuit insulator**
3601.107.G 50.		**Pusher contact spring**

F

G

H
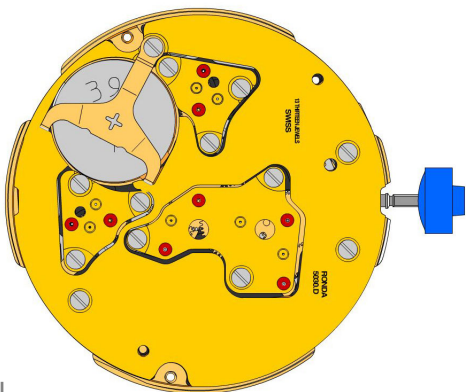
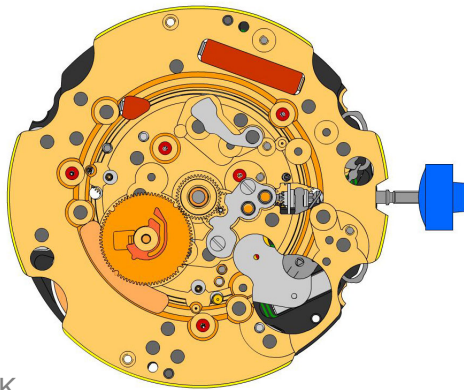|		
2130.137.G.M01.5030D 51.		**Electronic module cover** Electronic module cover held by 3 screws 4000.250.
3600.010.HGF 52.		**Battery 395**
3601.109.G 53.		**Bridle +** Bridle held by 1 screw 4000.250.
4000.250 54.		**Screw**
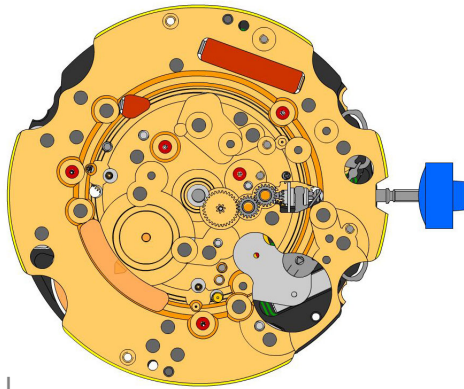
J

|		
2000.574.G 55.		Main plate
3004.164 56.		Setting wheel
3004.164 57.		Setting wheel
3007.054.CO 58.		Minute wheel

K

2130.143 59.		Minute train bridge Minute train bridge held by 2 screws 4000.305.
4000.305 60.		Screw
3301.241 61.		Hour wheel (Aig.1)
3315.016 62.		Friction spring
3004.224.CO 63.		Date indicator driving wheel
3500.049 64.		Date jumper
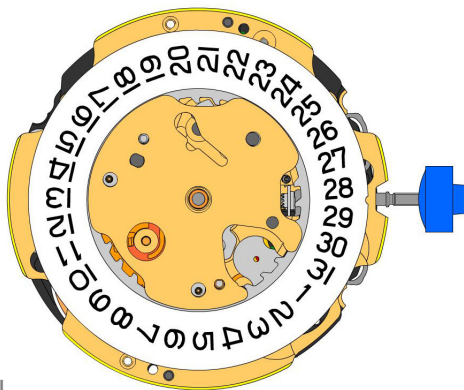
L

3504.208.AB.1.A 65.		Date indicator (standard) Nick of the indicator at 3 o`clock.
2130.141 66.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250.
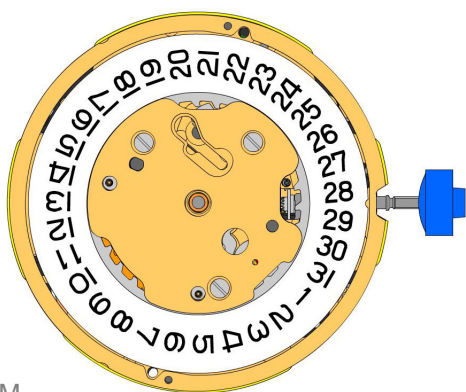
M

3905.070 67.		**Date jumper spring** Insert the date jumper spring in the provided opening.	
2130.140.G 68.		**Date mechanism maintaining plate** Date mechanism maintaining plate held by 2 screws 4000.250.	
4000.250 69.		**Screw**	
3506.072.G 70.		**Dial support**	

8200 71.		**Moebius 8200**	
9014 72.		**Moebius 9014**	
124 73.		**Jismaa 124**	
9020 74.		**Moebius 9020**	
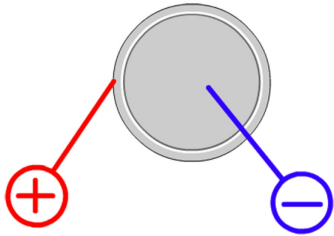
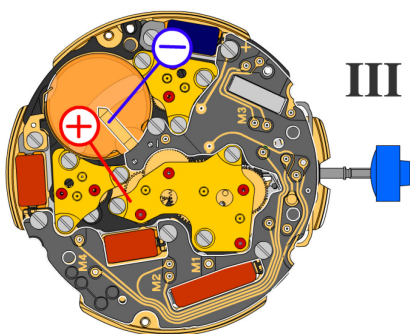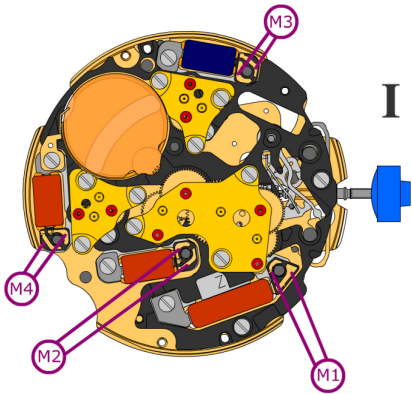| Battery | **395** |
| Voltage | **1.55 V** |
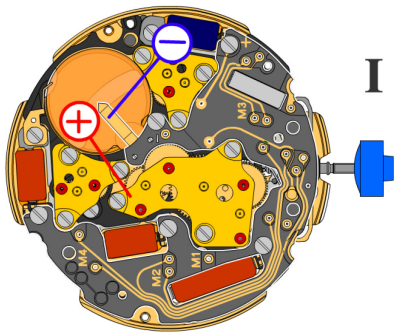
Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:

Typical consumption	***1.32 µA***
Maximal consumption	***1.65 µA***
Rate	**-10s/M. .. +20s/M.**
Lower working voltage limit	**1.20 V**

Setting stem in position III, 60 s measuring interval:

| Typical consumption | ***0.10 µA*** |
| Maximal consumption | ***0.30 µA*** |

Coil resistance M1	**1.90 kΩ .. 2.10 kΩ**
Coil resistance M2	**1.68 kΩ .. 1.88 kΩ**
Coil resistance M3	**1.68 kΩ .. 1.88 kΩ**
Coil resistance M4	**1.68 kΩ .. 1.88 kΩ**
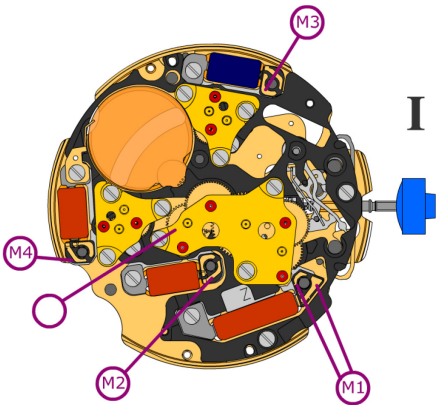
Coil resistance M1/M2/M3/M4	**∞ kΩ**
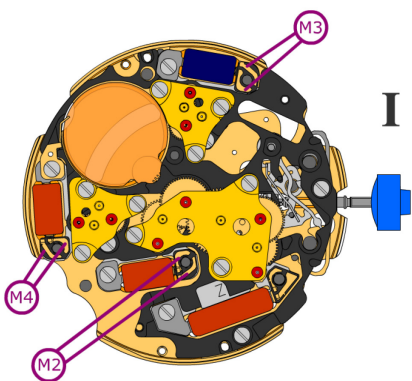
Signal generator (4.9 ms, 8 Hz):

Lower working voltage limit M2/M3/M4	**1.20 V**