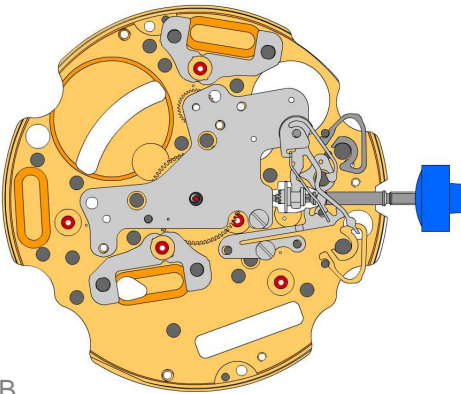
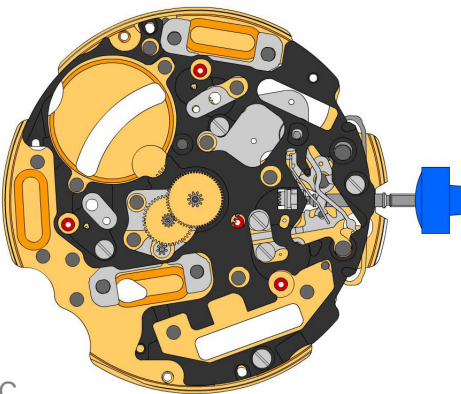
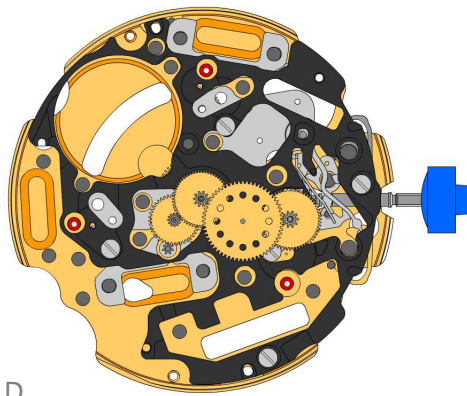



A

B

C

2000.574.G 1.		Main plate
3305.282.CO 2.		Cannon pinion with driver (Aig.2)
3301.243 3.		Hour wheel (counter 12h)
2030.017.CO 4.		Centre bridge Centre bridge held by 1 screw 4000.250. Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together.
3001.055.FI 5.		Sliding pinion
3000.177.CO 6.		Setting stem
3017.049 7.		Setting lever
3905.049 8.		Setting lever jumper (3 positions) Setting lever jumper held by 1 screw 4000.250.
4000.250 9.		Screw
3015.081 10.		Yoke (3 positions) Parts 3015.081 and 3905.067 must be exchanged together.
3905.067 11.		Yoke spring Tensioning the spring arm. Parts 3015.081 and 3905.067 must be exchanged together.
3406.030 12.		Pusher jumper B Put the grey jumper between the two posts on the further side.
3406.038 13.		Pusher jumper A Put the yellow jumper between the two posts on the closer side.
3622.039 14.		Stator (6h, 9h, chrono)
3603.079 15.		Plastic bracket Plastic bracket held by 4 screws 4000.250.
4000.250 16.		Screw
3715.094.RK 17.		Rotor
3147.047.CO 18.		Intermediate wheel (chrono)
3136.156.CO 19.		Second wheel (Aig.2)


D

3136.148.CO
20.  Chronograph wheel (Aig.2)

3122.056.CO
21.  Third wheel

2020.148.G
22.  Train wheel bridge
Train wheel bridge held by 3 screws 4000.250.


4000.250
23.  Screw


3715.095.RK
24.  Rotor

3147.048.CO
25.  Intermediate wheel (counter)


3007.055.CO
26.  Minute wheel (counter 12h)


3402.007.CO
27.  Minute counting wheel (12h)

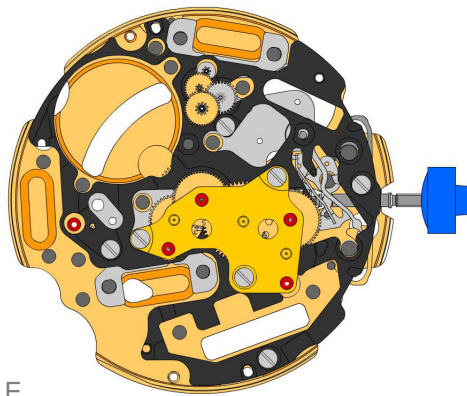
E

2020.149.G
28.  Counter train wheel bridge
Counter train wheel bridge held by 3 screws 4000.250.

4000.250
29.  Screw

3621.055.RK
30.  Coil (counter 6h)
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.079.RK
31.  Coil (center)
Attention: Please hold the coil only on the grey coil core.


3503.071
32.  Tube


3601.118
33.  Contact strip
Contact strip held by 1 screw 4000.250.





4000.250
34.  Screw

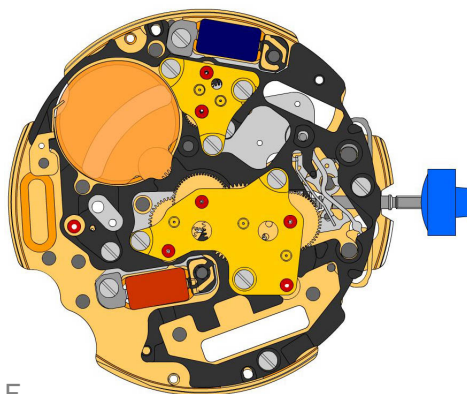
3603.034
35.  Battery insulator

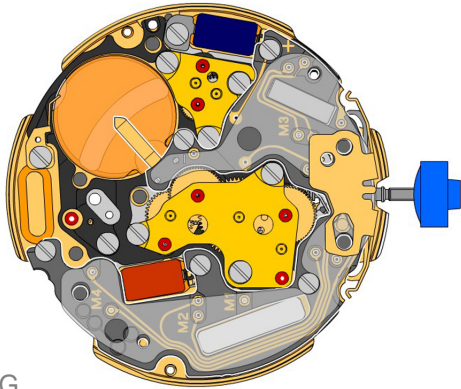



3503.054
36.  Tube




F

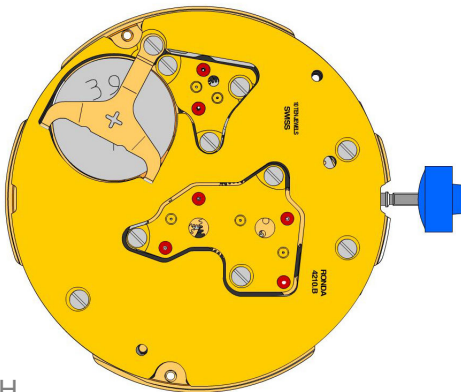








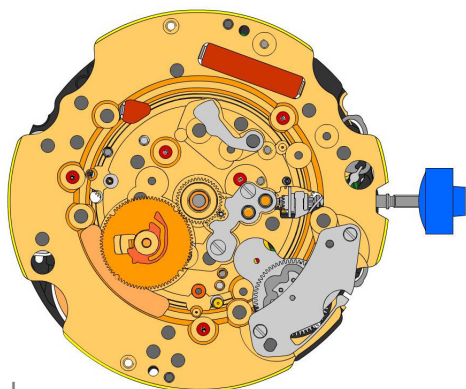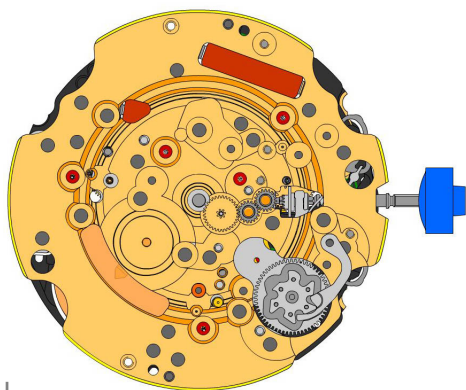




G


3612.146.4210 37.		Electronic module Electronic module held by 5 screws 4000.248. Electronic measurements may be realised now.
4000.248 38.		Screw
3603.069 39.		Circuit insulator
3601.107.G 40.		Pusher contact spring






H


2130.139.G.M01.4210B 41.		Electronic module cover Electronic module cover held by 3 screws 4000.250.
3600.010.HGF 42.		Battery 395
3601.109.G 43.		Bridle + Bridle held by 1 screw 4000.250.
4000.250 44.		Screw

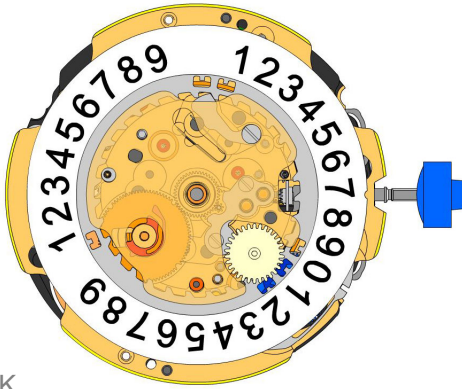







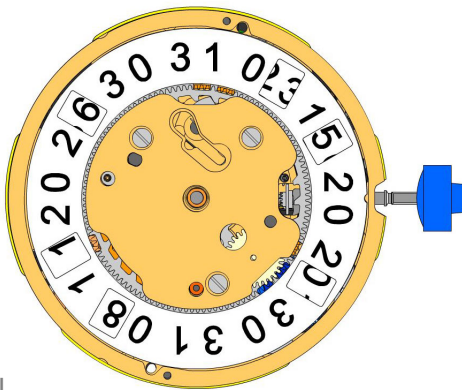


2000.574.G 45.		Main plate
3004.164 46.		Setting wheel
3007.054.CO 47.		Minute wheel
2130.143 48.		Minute train bridge Minute train bridge held by 2 screws 4000.305.
4000.305 49.		Screw
3004.223 50.		Tens indicator driving wheel Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together. The short tooth of the tens indicator driving wheel must point to the center of the movement.
3500.059 51.		Tens jumper Parts 2030.017.CO, 3004.223 and 3500.059 must be exchanged together.
2130.142 52.		Tens jumper maintaining plate Tens jumper maintaining plate held by 2 screws 4000.306. Tensioning the spring arm.
4010.306 53.		Screw
3301.242 54.		Hour wheel (Aig.2)
3315.016 55.		Friction spring
3004.224.CO 56.		Date indicator driving wheel
3500.049 57.		Date jumper


K


3504.214.AF.1.A 58.		Units indicator (standard) Nick of the indicator at 3 o'clock.
3147.054 59.		Tens intermediate wheel
2130.141 60.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250.
3905.070 61.		Date jumper spring Insert the date jumper spring in the provided opening.


L

3504.216.AF.1.A 62.		Tens indicator (standard) Nick of the indicator at 3 o'clock.
2130.140.G 63.		Date mechanism maintaining plate Date mechanism maintaining plate held by 2 screws 4000.250.
4000.250 64.		Screw
3506.072.G 65.		Dial support
8200 66.		Moebius 8200
9014 67.		Moebius 9014
124 68.		Jismaa 124
9020 69.		Moebius 9020

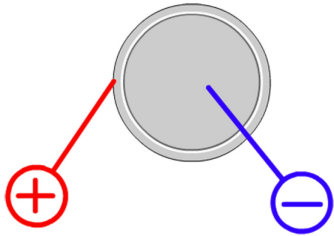


Battery	395
Voltage	1.55 V

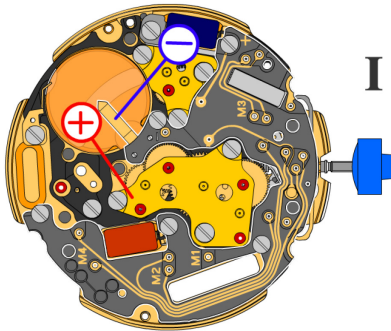


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption	1.32 μA
Maximal consumption	1.65 μA
Rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.20 V

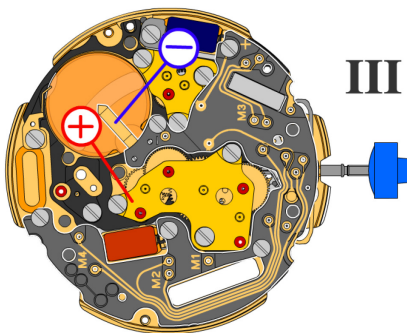

Setting stem in position III, 60 s measuring interval:


Typical consumption	0.10 μA
Maximal consumption	0.30 μA

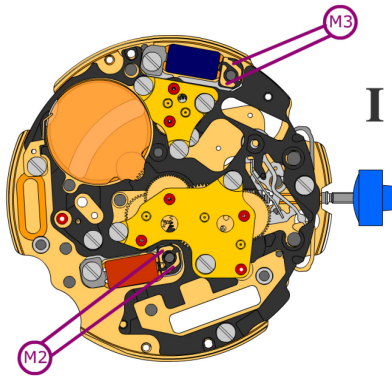


Coil resistance M2

2.20 k Ω .. 2.40 k Ω

Coil resistance M3

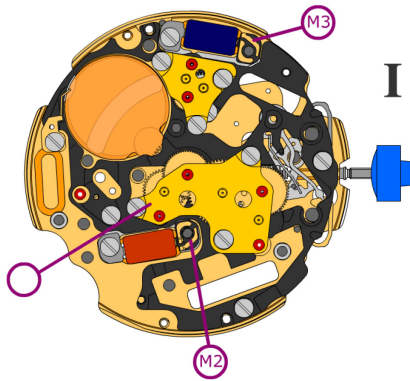1.68 k Ω .. 1.88 k Ω


Coil isolation M2/M3

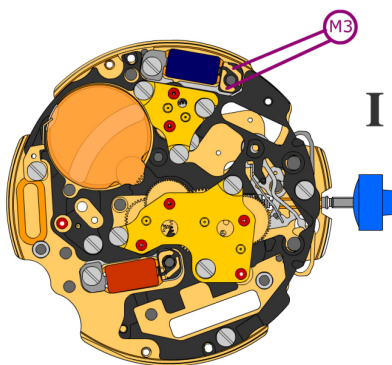 ∞ k Ω

Signal generator (4.9 ms, 8 Hz):

Lower working voltage limit M3

1.20 V