
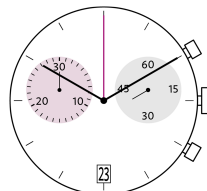


Caliber 5021.D – 12½"

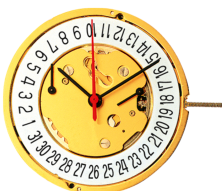

Product Specifications

Analog quartz movement

Line startech

Caliber 5021.D

Size 12½"

Version Swiss Made 10 Jewels / gold plated

Version Swiss Parts 5 Jewels / nickel plated

Standard battery life 54 months

Standard hand fitting height 1

Features

- Repairable metal watch movement
- Power saving mechanism with pulled out stem:
Reduction of consumption approximately 70%
- Very easy handling by two pushers

Functions

- 30 minute counter
- Center stop second (1/1 sec)
- ADD and SPLIT functions
- Chronograph
- Small second
- Date

Quartz Movements

Chronographs

RONDA startech

Caliber 5021.D – 12½"


Technical Specifications

Diameter Total	28.60 mm
Case fitting	28.00 mm
Movement height	4.40 mm
Height over standard battery	4.40 mm
Movement rest	0.60 mm
Height over stem	1.90 mm
Length of stem travel	0.90 mm
Stem thread	0.90 mm
Useful torque second – typical	6 µNm
Useful torque minute – typical	300 µNm
Useful torque center stop second – typical	7 µNm
Operating temperature	0 - 50 °C
Instantaneous rate	-10/ +20 sec/month
Resistance to magnetic fields	18.8 Oe
Resistance against shock	NIHS 91-10



Battery Specifications

Standard battery	No. 395
Standard battery life	54 months
Battery voltage	1.5 V
Current consumption – typical	1.32 µA (Date Mechanism not in Gear)
Current consumption – maximum	1.65 µA (Date Mechanism not in Gear)

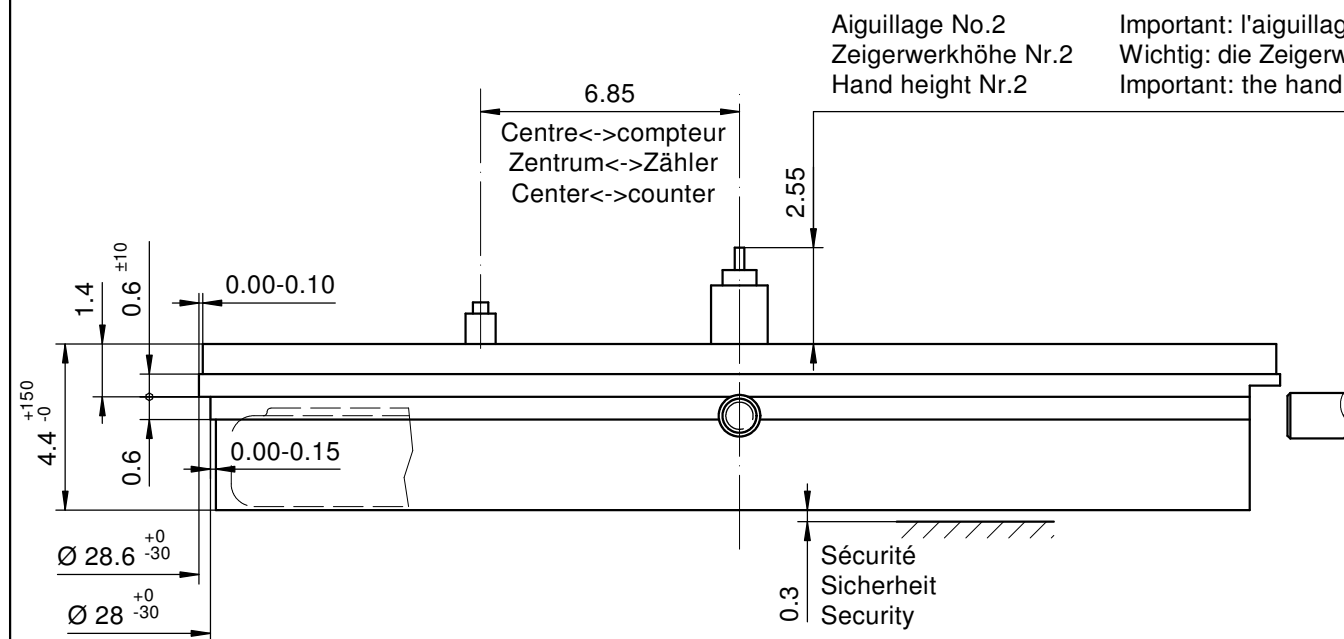

Important: l'aiguillage peut varier selon le modèle
Wichtig: die Zeigerwerkhöhe kann bei verschiedenen Modellen unterschiedlich sein
Important: the hand height can vary between different models


Sécurité entre l'aiguille des secondes et le verre:
Sicherheit zwischen Sekundenzeiger und Glas: 0.30mm
Security between second hand and glass:

Le cadran doit être tenu par la boîte
Das Zifferblatt muss durch die Schale gehalten werden
The dial must be hold by the case

La course du poussoir doit être limitée dans le poussoir lui-même. Sa position poussée doit être contrôlée.






Die Weglänge des Drückers ist im Drücker selbst zu begrenzen. In der gedrückten Stellung ist seine Position zu kontrollieren

The way of the pusher has to be limited in the pusher itself. Its position must be checked while pushed in.

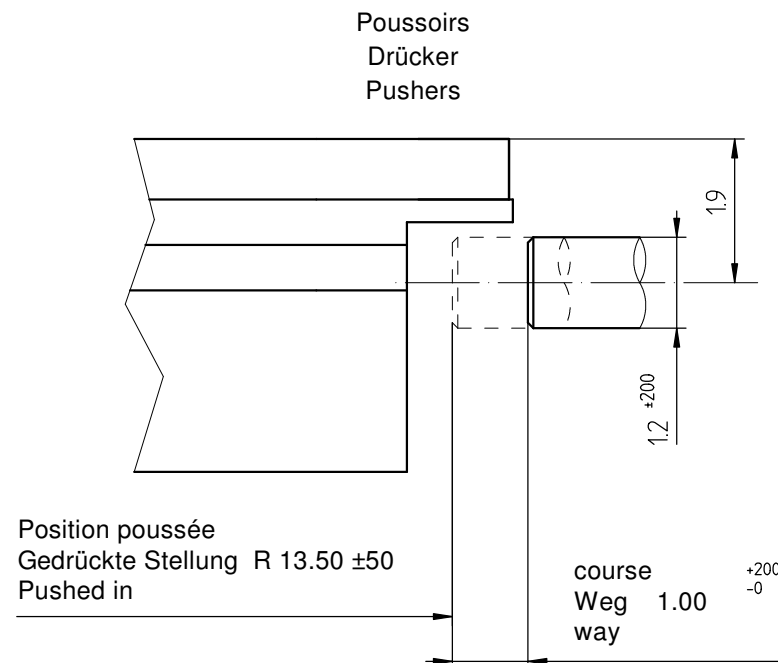


Côté fond de boîte
Seite Gehäuseboden
Case back side
Position pour extraire la tige
Position zum Entfernen der Stellwelle
Position to remove the stem

Pile
Batterie (395) Ø 9.50 x 2.60mm
Battery

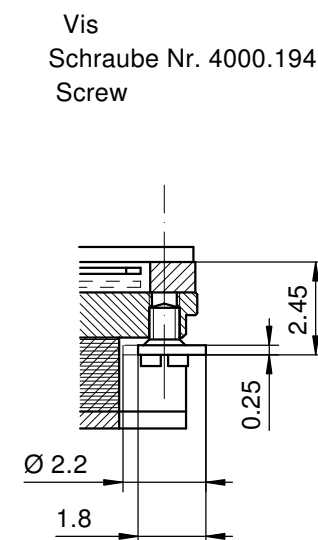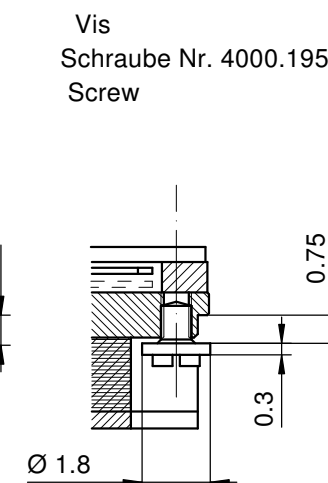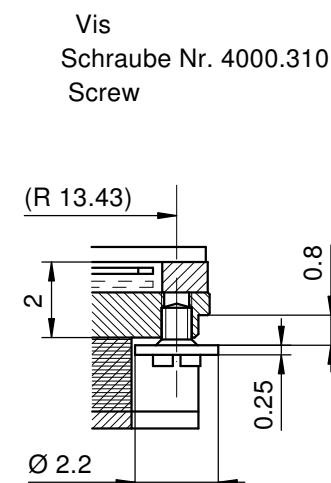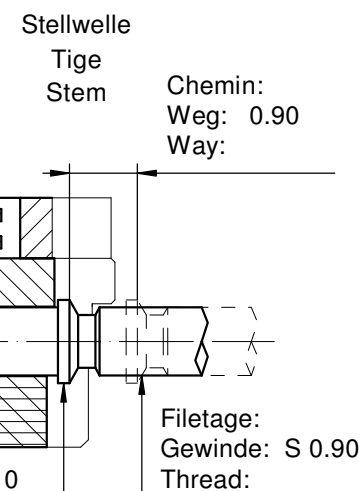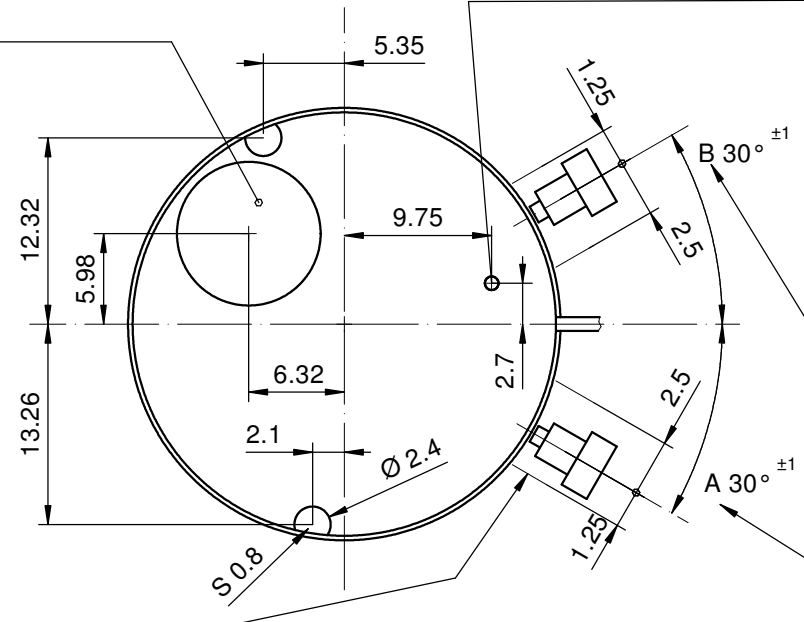

Dégagement cercle d'entourage pour poussoir
Freistellung Gehäuse ring für Drücker
Opening movement holder for pusher

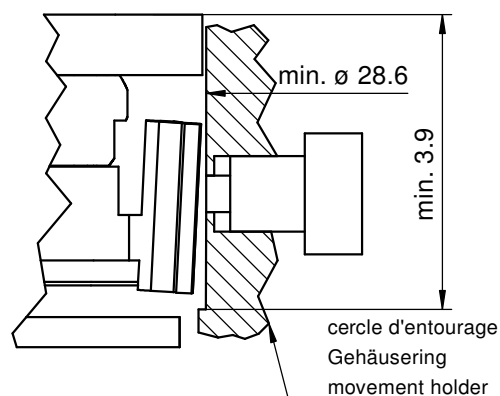

L'angle indiqué pour la direction du poussoir et la position doivent être respectés.
Pour un angle de 0° des poussoirs A et B, voir plan 5000.345

Der angegebene Winkel für die Drückerrichtung und die Position müssen eingehalten werden.
Für einen Drückerwinkel von 0° bei A und B, siehe Zeichnung 5000.345

The indicated angle of the pusher direction and the position must be fulfilled. For pusher angles of 0° (pusher A and B), see drawing 5000.345.



Cage
Uhrwerkgestell 12½"
Frame

RONDA



5040.B, 5040.D, 5030.D, 5021.D, 5040.E

Issued	08 Jan 2001	mg
Modified	31 Aug 2016 ÄA 34777	dh
Released	YES	
Tolerance	+/- 20 µm	
Scale	10 : 1 (5 : 1) (A3H)	
Sous réserve de modifications Äenderungen vorbehalten Modifications reserved		
No.	5000.315	10



Angle Winkel Angle	30°	
Ø Dp	b	
1.00	13.50	
1.10	13.50	
1.20	13.50	
1.30	13.50	
1.40	13.50	

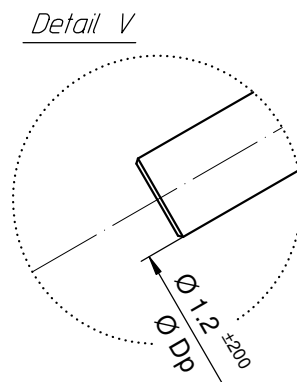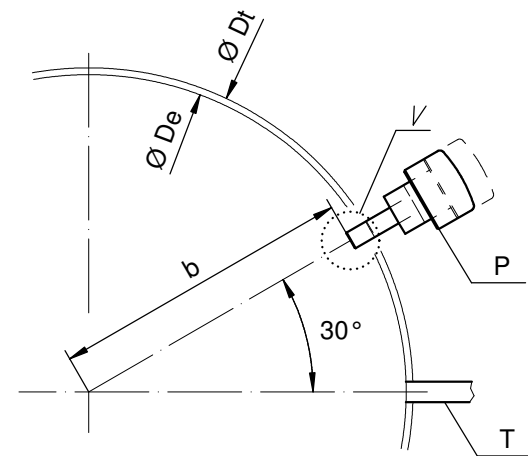

Angle Winkel Angle	0°	
Ø Dp	a	b
1.30	7.40	11.43
1.40	7.45	11.40

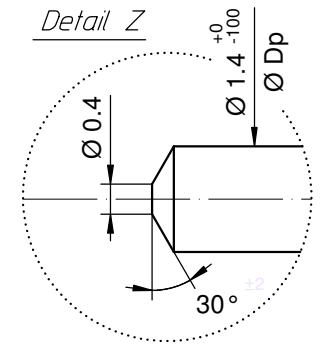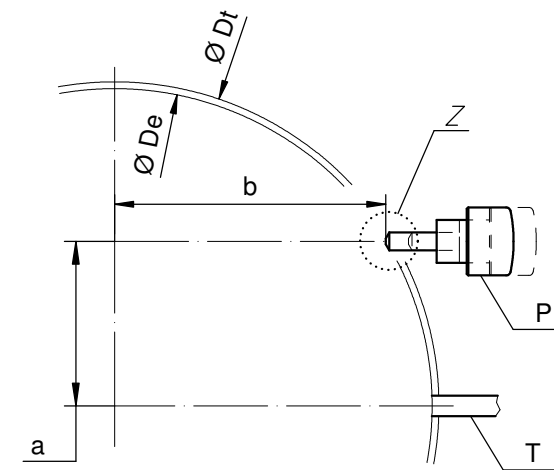

Angle Winkel Angle	20°	
Ø Dp	a	b
1.30	2.57	13.22
1.40	2.59	13.21

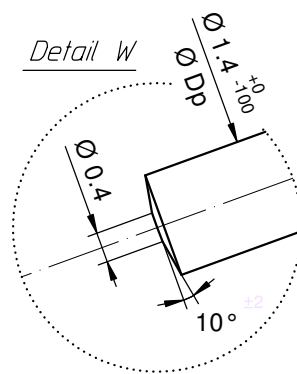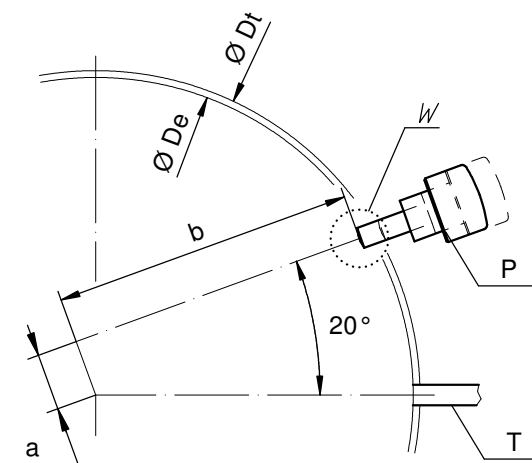

Ø De: diamètre d'encageage
Durchmesser der Gehäusepassung
fitting-diameter



Ø Dp: diamètre du poussoir
Drückerdurchmesser
pusher-diameter

Ø Dt: diamètre total
Totaldurchmesser
total-diameter



P: poussoir en position poussée
Drücker in gedrückter Stellung
pusher in pressed position

T: tige de mise à l'heure
Stellwelle
stem

Angle Winkel Angle	15°	
Ø Dp	a	b
1.30	3.83	12.92
1.40	3.86	12.91

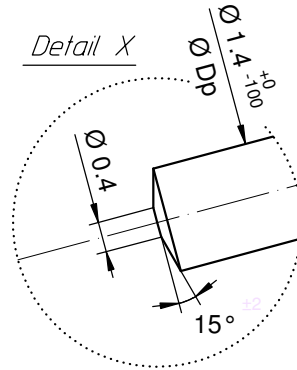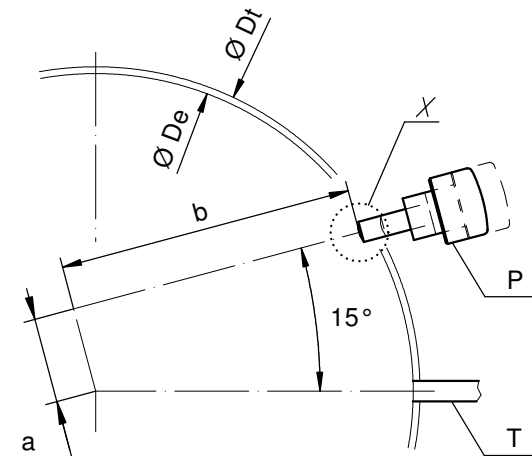


Angle Winkel Angle	10°	
Ø Dp	a	b
1.30	5.06	12.52
1.40	5.10	12.50

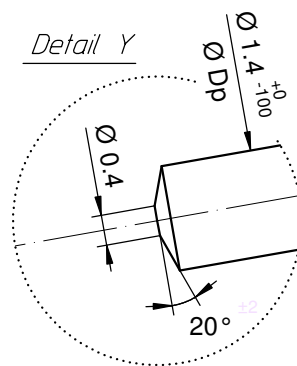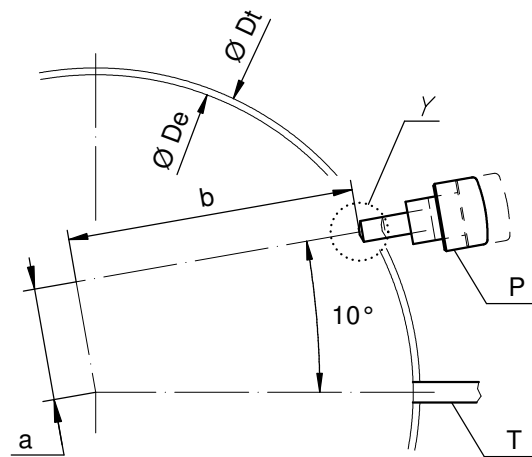

Angle des poussoirs A et B
Winkel der Drücker A und B
Angle of pusher A and B

RONDA 4xxx.x, 5xxx.x

Issued	06 Sep 2004	mk
Modified	30.März 2005 ÄA 1784	mk
Released	YES	
Tolerance	+/- 20 µm	
Scale	10 : 1 (5 : 1) (A3H)	
Sous réserve de modifications Äenderungen vorbehalten Modifications reserved		
No.	5000.345	01

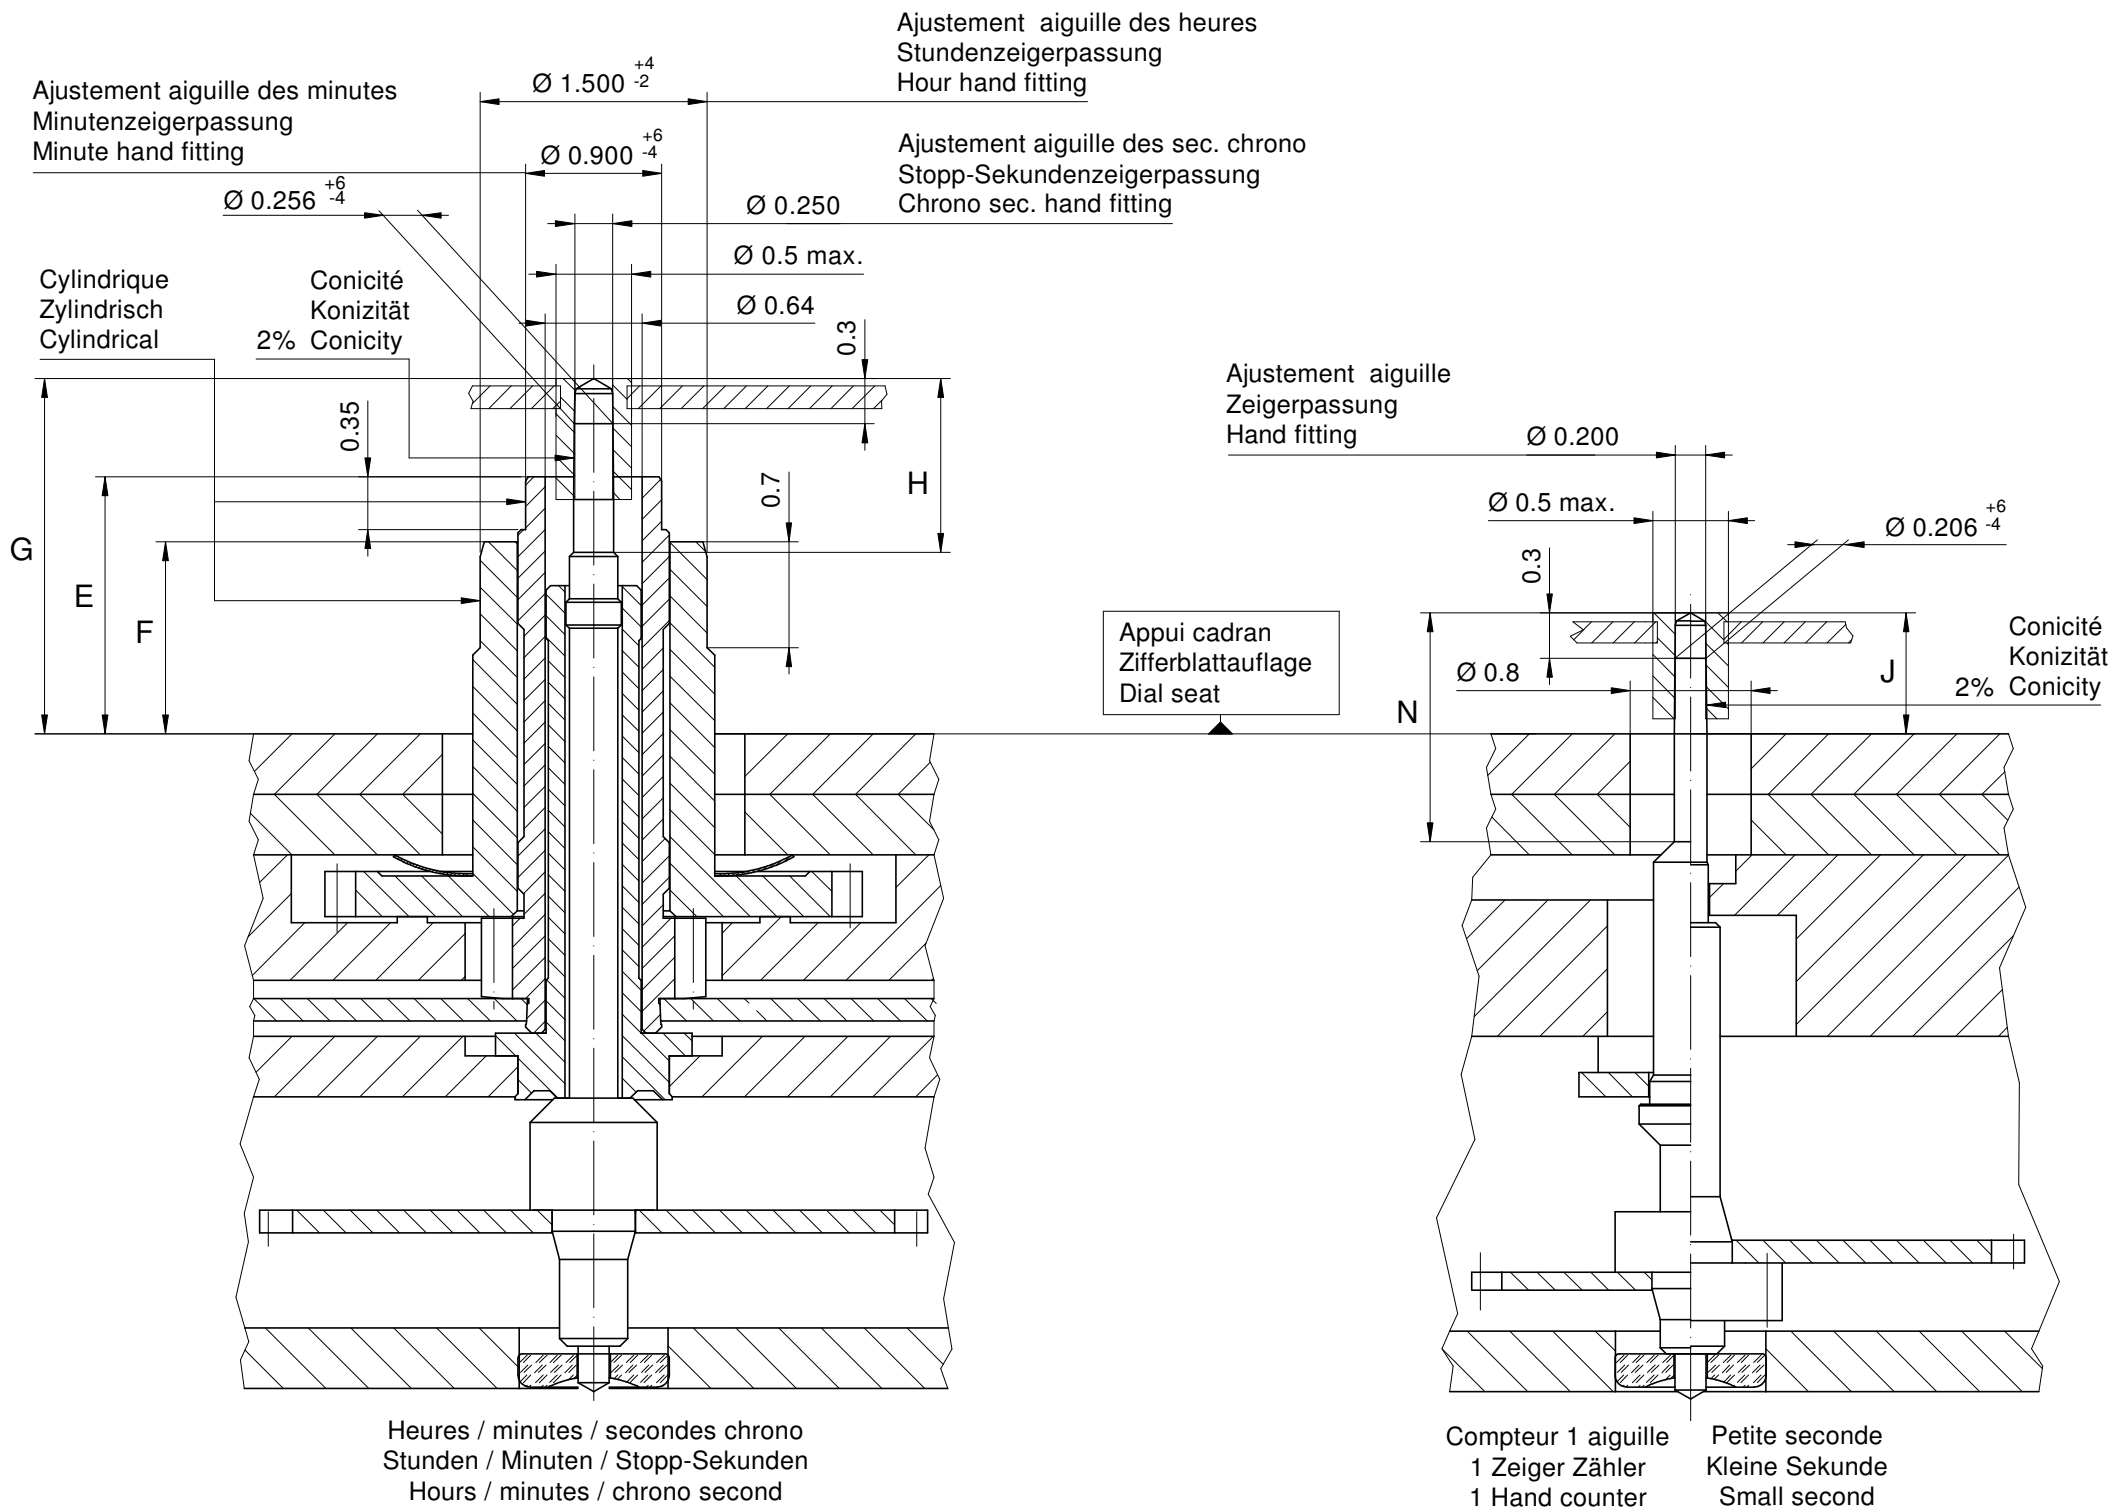

Aiguillages Zeigerwerkhöhe Hand fitting height							
Dépassement Höhe über Zifferblattauflage Height over dial seat							
No	Pignon des secondes chrono Stopp-Sekundentrieb Chrono second pinion	Chaussée Minutenrohr Cannon-pinion	Roue des heures Stundenrad Hour wheel			Petite seconde Kleine Sekunde Small second	1 aig. 1 Zeiger 1 Hand
1	G	E	F	H	N	J	J
-	2.35	1.70	1.27	1.15	1.50	0.80	0.80

Aiguillages Zeigerwerkhöhe Hand fitting height						
Peinture comprise / inkl. Farbe / Paint included						
Epaisseur maximum du cadran Maximale Zifferblattstärke Maximum dial thickness						
No	Sous l'aiguille des secondes chrono Unter Stopp-Sekundenzeiger Under chrono second hand	Sous l'aiguille des minutes Unter Minutenzeiger Under minute hand	Sous l'aiguille des heures Unter Stundenzeiger Under hour hand	Sous l'aiguille de petite seconde Unter kleine Sekundenzeiger Under small second hand	Sous l'aiguille compteur 1 aiguille Unter Zeiger 1 Zeiger Zähler Under hand 1 hand counter	Epaisseur des aiguilles Zeigerdicke Hands thickness
1	1.85	1.30	0.85	0.40	0.40	0.15
-						


		Aig. des sec. chrono Stopp-Sekundenzeiger Chrono second hand	Aig. des minutes Minutenzeiger Minute hand	Aig. des heures Stundenzeiger Hour hand	Aig. petite secondes Kleine Sekundenzeiger Small second hand	Aiguille compteur (1 aig.) Zähler Zeiger (1 Zeiger) Counter hand (1 hand)	Lors de la pose d'aiguilles, le mouvement doit être soutenu. Beim Zeigersetzen muss das Werk abgestützt werden. The movement needs to be supported for hand setting.
mg	max.	10	30	30	10	10	Masse / Masse / Weight *
μNm	max.	0.06	0.80	0.80	0.07	0.03	Balourd / Unwucht / Unbalance *
gmm ²	max.	1.0	-	-	0.4	-	Inertie / Massenträgheit / Inertia *
N	max.	30	40	40	30	30	Force de chassage / Aufpresskraft / Force

Aiguillages Zeigerwerkhöhen 12½" Hand fitting heights		Issued	21 Feb 2011	dh
		Modified	15 Okt 2014 ÄA 13275	dh
		Released	Yes	
		Tolerance	µm	
		Scale	20 : 1 (A3H)	
RONDA	5021.D	Sous réserve de modifications Änderungen vorbehalten Modifications reserved		
		No.	3316.146	01

* En cas de données différentes, veuillez contacter le service après-vente


* Bei abweichenden Werten, bitte technischen Kundendienst anfragen

* In case of different values, please contact the customer service

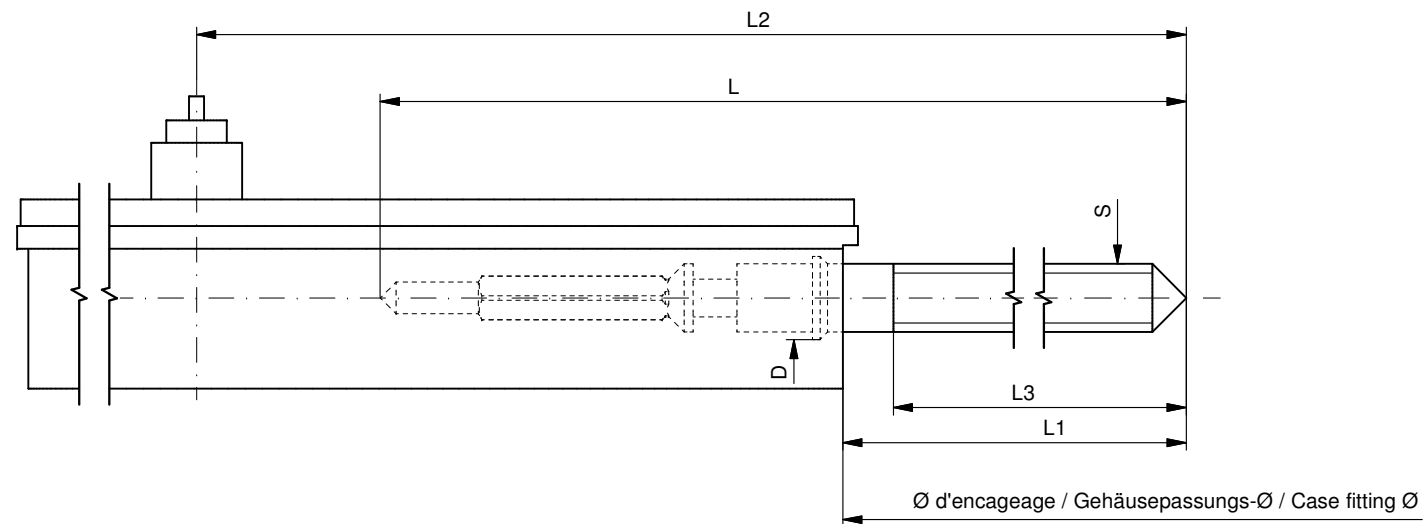

Tige de travail (intégrée dans le mouvement)
Arbeitsstellwelle (im Werk eingebaut)
Working stem (implemented in the movement)


No. d'article Artikelnummer Part number	L	L1	L2	L3	S	D
3000.177.CO	20.00	10.23	24.23	10.15	0.90	1.10

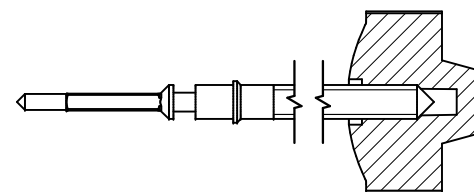


Couleur de la couronne Kronenfarbe Crown color	bleu foncé dunkelblau dark blue
Code	UN 5002

Tige (normale) / Stellwelle (normal) / Stem (normal)

No. d'article Artikelnummer Part number	L	L1	L2	L3	S	D
3000.177	20.00	10.23	24.23	10.15	0.90	1.10
3000.191	32.00	22.23	36.23	22.15	0.90	1.10

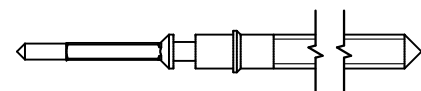

Couronne normale
Normale Krone
Normal crown

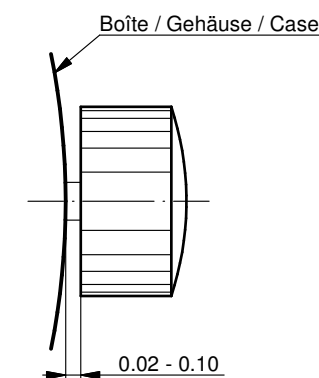


Couronne vissée
Geschraubte Krone
Screwed crown

Force ⇐ min. Kraft ⇐ min. Force ⇐ min.	10 N
Force ⇐ max. Kraft ⇐ max. Force ⇐ max.	15 N

Rallonge de tige / Stellwelle Verlängerung / Stem extension

No. d'article Artikelnummer Part number	L4	L5 (min)	L6	S1	S2	D1
3000.040	12.00	1.90	2.60	0.90	0.90	1.35

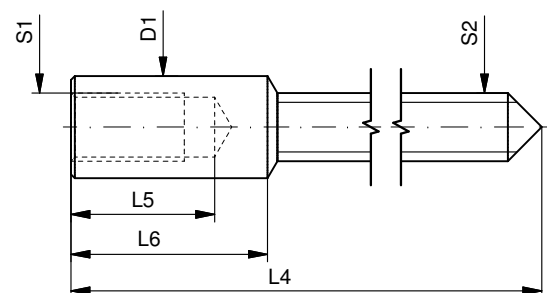

Tige (dimensions / forces)
Stellwelle (Dimensionen / Kräfte)
Stem (dimensions / forces)

RONDA

5010.B, 5020.B, 5021.D, 5030.D,
5040.B, 5040.D, 5040.E, 5040.F,
5050.B, 5050.C, 5051.C, 5130.B, 5130.D

Issued	05 Sep 2012	ds5222
Modified	17 Mär 2017 ÄA 34582	mg5224
Released	YES	
Tolerance	---	
Scale	10:1 (A3)	

Sous réserve de modifications
Änderungen vorbehalten
Modifications reserved

No.	5030.019	01
-----	----------	----



Movement holder
Removing setting stem
H5XXX.1T



Movement holder
Setting hands
H5XXX.1A

Fitting dial and hands


- Crown in position III
- Wind crown, until date 02 appears
- Crown in position III
- Wind hour hand forwards, until date changes to 03
- Remove working stem
- Fit dial
- Point all hands towards 12 o'clock
- Set time
- Zero chronograph hand*
- Crown in position II
- Set date
- Crown in position I

Date switching duration:

~1¼hrs

*Zeroing the Chronograph hand

- Activate pushers A and B for 2 seconds at the same time
(Chrono seconds hand rotates once)
- Pusher A → to corrects chrono seconds hand
- Pusher B → to make minute and seconds hand jump
- Pusher A → to correct hand position

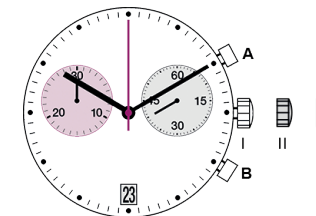

General Instructions

Removing the setting stem can only be effected in Pos. I.

The use of supporting screws is essential when mounting the hands.

Permitted hand setting strengths:

Hr / min. hands: <40N

Other hands: <30N

During quick date correction (setting stem in position II), a date switching speed of 5 d/s must not be exceeded.

You have decided to buy a watch, which was assembled by a watchmaker using a Ronda movement. Please note that no watches are produced or distributed under the Ronda brand.

In case of repairs, guarantee claims and questions concerning the functioning of a watch, purchasers and consumers should contact their retailer or the watch manufacturer, for which the relevant information can be found in the sales or guarantee documentation provided with the watch.

Description of the display and control buttons

Display elements

- Second hand
- Minute hand
- Hour hand
- Second counter
- Minute counter
- Hour counter (only 5030.D)
- Date 5021.B
- Date 5030.D

Control buttons

- Push button A
- Crown
- Push button B

Chronograph: Basic function
(Start / Stop / Reset)

Example:

- Start:** Press push-button A.
- Stop:** to stop the timing, press push-button A once more and read the chronograph hands: **1h / 20min / 38 sec.**
- Zero positioning:** Press push-button B. (The chronograph hands will be reset to their zero positions.)

Setting the time

- * Pull out the crown to position III (the watch stops).
- Turn the crown until you reach the correct time 8:45.
- * Push the crown back into position I.

Please note:
* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «60». Once the hour and minute hands have been set, 2 must be pushed back into position I at the exact second.

Chronograph: Accumulated timing

Example:

- Start:** (start timing)
- Stop:** (e.g. 15 min 5 sec following 1)
- Restart:** (timing is resumed)
- Stop:** (e.g. 5 min 12 sec following 3) = **20 min 17 sec** (The accumulated measured time is shown)
- Reset:** The chronograph hands are returned to their zero positions.

Please note:
* Following 4, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...).

Setting the date (quick mode)

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until the correct date 1 appears.
- Push the crown back into position I.

Please note:
During the date changing phase between approx. 9 PM and midnight the date must be set to the date of the following day.

Chronograph: Intermediate or interval timing

Example:

- Start:** (start timing)
- Display interval:** e.g. 20 minutes 17 seconds (timing continues in the background)
- Making up the measured time:** (The chronograph hands are quickly advanced to the ongoing measured time.)
- Stop:** (Final time is displayed)
- Reset:** The chronograph hands are returned to their zero position.

Please note:
* Following 2, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...).

Setting the date/time following a battery change

Example:
– Date / time on the watch: 17 / 1:25 AM
– Present date / time: 4 / 8:30 PM

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until yesterday's date appears 3.
- * Pull out the crown to position III (the watch stops).
- Turn the crown until the correct date 4 appears.
- * Continue to turn the crown until the correct time 8:30 PM appears.
- Push the crown back into position I.

Please note:
* To set your watch to the exact second, please refer to the chapter entitled «setting the time».
**Please observe the AM/PM clock rhythm.

Adjusting the chronograph hands to zero position

Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the second counter hand rotates by 360° → corrective mode is activated).

Adjusting the second counter hand
Single step: A 1 x short
Continuous: A long


Adjusting the next hand B

Adjusting the hour counter hand at 5030.D (position 6h)
Single step: A 1 x short
Continuous: A long


Adjusting the next hand B

Adjusting the minute counter hand (position 9h)
Single step: A 1 x short
Continuous: A long




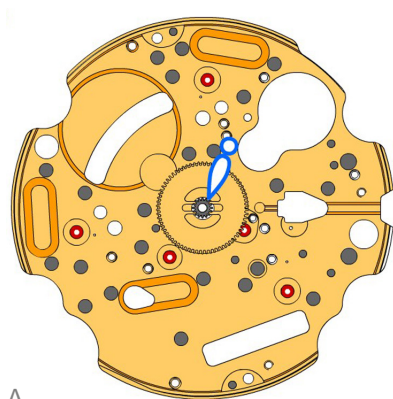



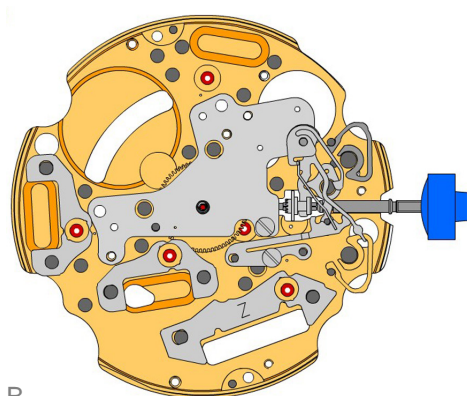








Returning the crown to position I
Termination of the chronograph hands adjustment (can be carried out at any time).




A



B

2000.574.G 1.		Main plate
3305.275.CO 2.		Cannon pinion with driver (Aig.1)
2030.017.CO 3.		Centre bridge Centre bridge held by 1 screw 4000.250.
4000.250 4.		Screw
3001.055.FI 5.		Sliding pinion
3000.177.CO 6.		Setting stem
3017.049 7.		Setting lever
3905.049 8.		Setting lever jumper (3 positions) Setting lever jumper held by 1 screw 4000.250.
4000.250 9.		Screw
3015.081 10.		Yoke (3 positions) Parts 3015.081 and 3905.067 must be exchanged together.
3905.067 11.		Yoke spring Tensioning the spring arm. Parts 3015.081 and 3905.067 must be exchanged together.
3406.030 12.		Pusher jumper B Put the grey jumper between the two posts on the further side.
3406.038 13.		Pusher jumper A Put the yellow jumper between the two posts on the closer side.
3622.040 14.		Stator Mark [Z] on stator.
3622.039 15.		Stator (counter 6h, 9h and chrono)
3622.039 16.		Stator (counter 6h, 9h and chrono)

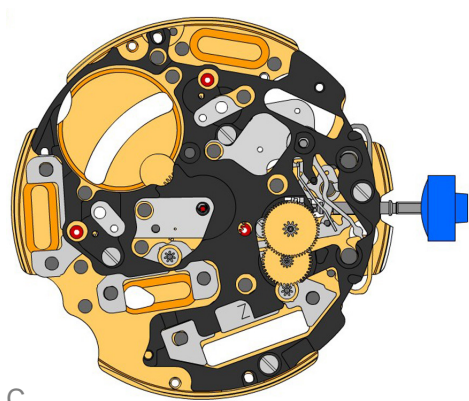

C


3603.079
17.  Plastic bracket
Plastic bracket held by 4 screws 4000.250.


4000.250
18.  Screw

3715.094.RK
19.  Rotor


3715.094.RK
20.  Rotor


3147.046.CO
21.  Intermediate wheel

3136.142.CO
22.  Second wheel (long)

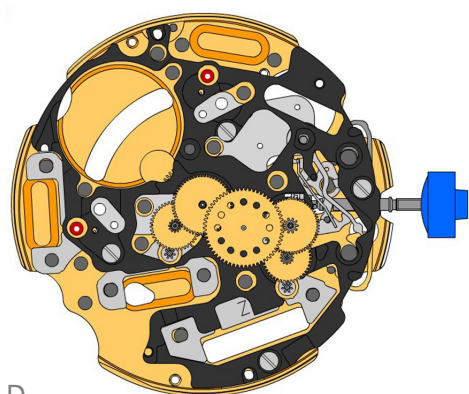


D


3147.047.CO
23.  Intermediate wheel (chrono)

3136.143.CO
24.  Chronograph wheel (Aig.1)


3122.056.CO
25.  Third wheel

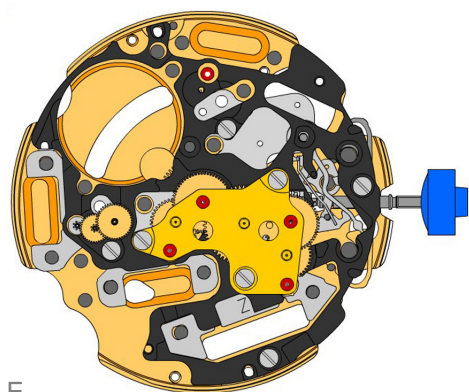


E


2020.148.G
26.  Train wheel bridge
Train wheel bridge held by 3 screws 4000.250.

4000.250
27.  Screw

3715.095.RK
28.  Rotor
Parts 3612.144.5021, 3715.095.RK and 3147.048.CO must be exchanged together.

3147.048.CO
29.  Intermediate wheel (counter)
Parts 3612.144.5021, 3715.095.RK and 3147.048.CO must be exchanged together.

3402.006.CO
30.  Minute counting wheel

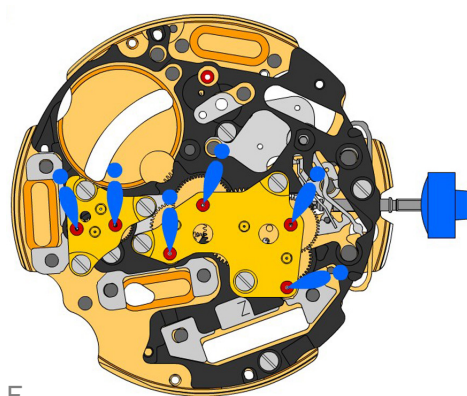

F

2020.149.G
31.



Counter train wheel bridge
Counter train wheel bridge held by 3 screws 4000.250.

4000.250
32.



Screw

4000.250
33.



Screw

3621.053.RK
34.



Coil
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
35.



Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
36.



Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

4000.250
37.



Screw

3601.118
38.



Contact strip
Contact strip held by 1 screw 4000.250.

4000.250
39.




Screw

3603.034
40.



Battery insulator

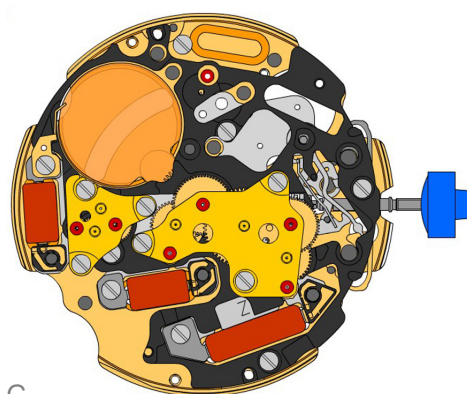

G

3612.144.5021
41.



Electronic module
Electronic module held by 5 screws 4000.248. Electronic measurements may be realised now. Parts 3612.144.5021, 3715.095.RK and 3147.048.CO must be exchanged together.

4000.248
42.



Screw

3603.069
43.




Circuit insulator


3601.107.G
44.





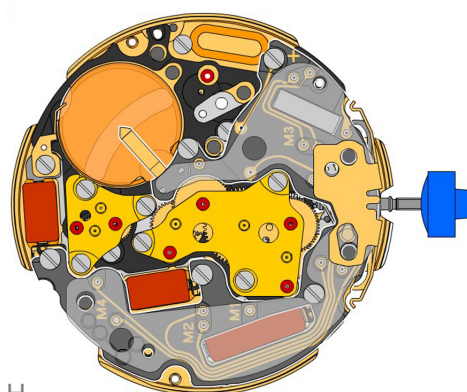


Pusher contact spring

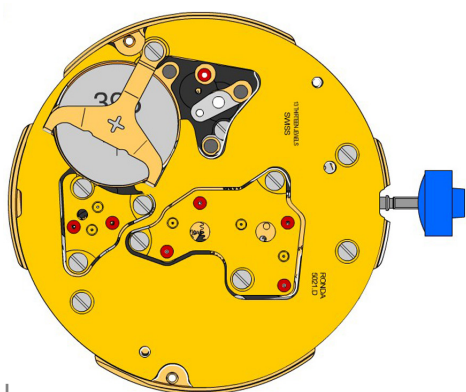


H



2130.137.G.M01.5021D 45.		Electronic module cover Electronic module cover held by 3 screws 4000.250.
3600.010.HGF 46.		Battery 395
3601.109.G 47.		Bridle + Bridle held by 1 screw 4000.250.
4000.250 48.		Screw

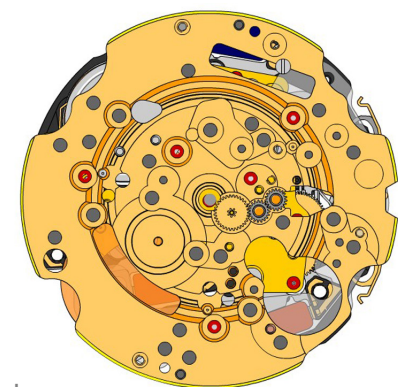

J

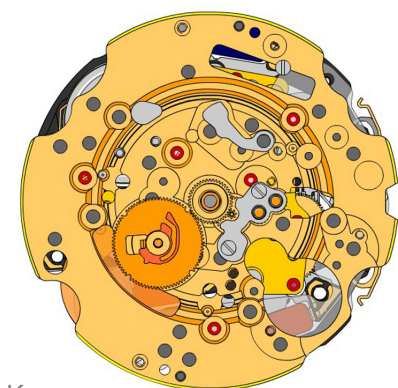

K



L

2000.574.G
49.



Main plate

3004.164
50.



Setting wheel

3004.164
51.



Setting wheel

3007.054.CO
52.



Minute wheel

2130.143
53.



Minute train bridge

Minute train bridge held by 2 screws 4000.305.

4000.305
54.



Screw

3301.241
55.



Hour wheel (Aig.1)

3315.016
56.



Friction spring

3004.224.CO
57.



Date indicator driving wheel

3500.049
58.



Date jumper

3504.208.AB.1.A
59.



Date indicator (standard)

Nick of the indicator at 3 o'clock.

2130.141
60.












Date indicator maintaining plate

Date indicator maintaining plate held by 1 screw 4000.250.




M

3905.070 61.		Date jumper spring Insert the date jumper spring in the provided opening.
2130.140.G 62.		Date mechanism maintaining plate Date mechanism maintaining plate held by 2 screws 4000.250.
4000.250 63.		Screw
3506.072.G 64.		Dial support
8200 65.		Moebius 8200
9014 66.		Moebius 9014
124 67.		Jismaa 124
9020 68.		Moebius 9020

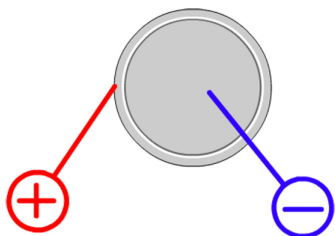


Battery	395
Voltage	1.55 V

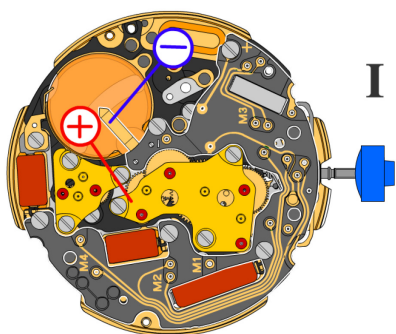


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption	1.32 μA
Maximal consumption	1.65 μA
Rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.20 V

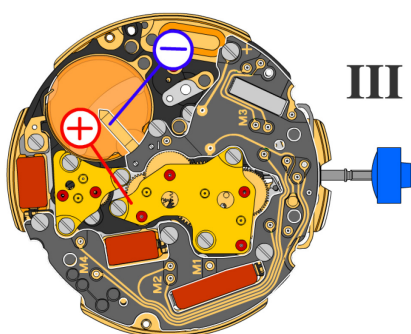

Setting stem in position III, 60 s measuring interval:


Typical consumption	0.10 μA
Maximal consumption	0.30 μA

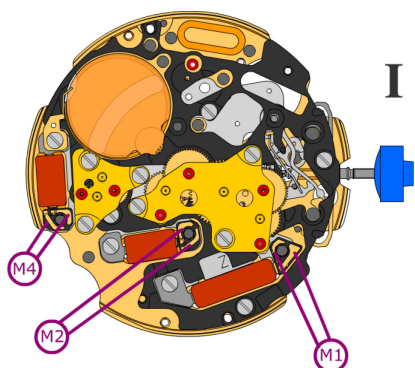


Coil resistance M1 **1.90 k Ω .. 2.10 k Ω**

Coil resistance M2 **1.68 k Ω .. 1.88 k Ω**

Coil resistance M4 **1.68 k Ω .. 1.88 k Ω**

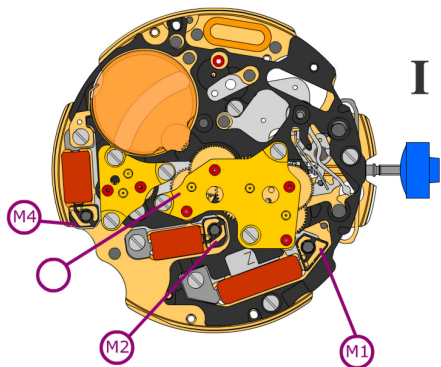


Coil resistances M1-M4 **∞ k Ω**

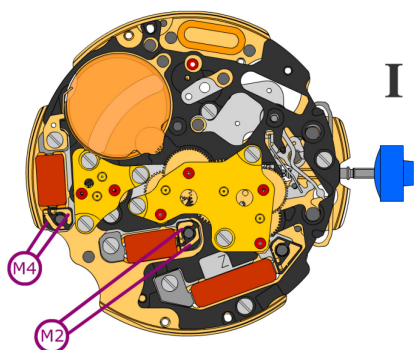


Signal generator (4.9 ms, 8 Hz):

Lower working voltage
limits M2-M4 **1.20 V**

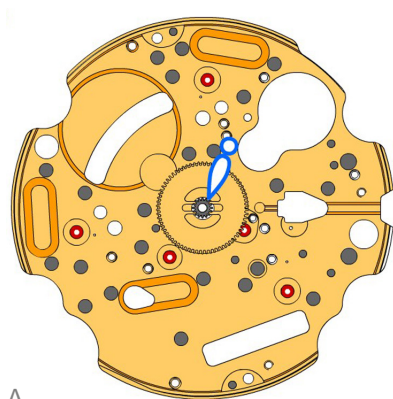

A

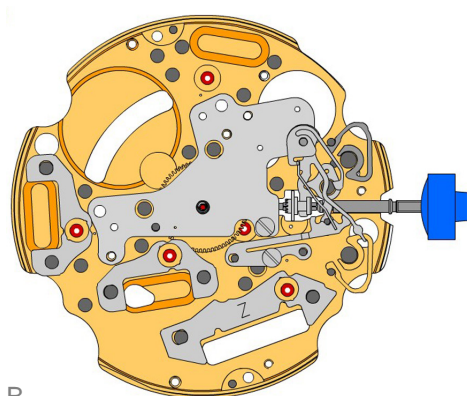

B

2000.574.G

1.



Main plate

3305.275.CO

2.



Cannon pinion with driver (Aig.1)

2030.017.CO

3.



Centre bridge

Centre bridge held by 1 screw 4000.250.

4000.250

4.



Screw

3001.055.FI

5.



Sliding pinion

3000.177.CO

6.



Setting stem

3017.049

7.



Setting lever

3905.049

8.



Setting lever jumper (3 positions)

Setting lever jumper held by 1 screw 4000.250.

4000.250

9.



Screw

3015.081

10.



Yoke (3 positions)

3905.067

11.



Yoke spring

Tensioning the spring arm.

3406.030

12.



Pusher jumper B

Put the grey jumper between the two posts on the further side.

3406.038

13.



Pusher jumper A

Put the yellow jumper between the two posts on the closer side.

3622.040

14.



Stator

Mark [Z] on stator.

3622.039

15.




Stator (counter 6h, 9h and chrono)

3622.039

16.



Stator (counter 6h, 9h and chrono)

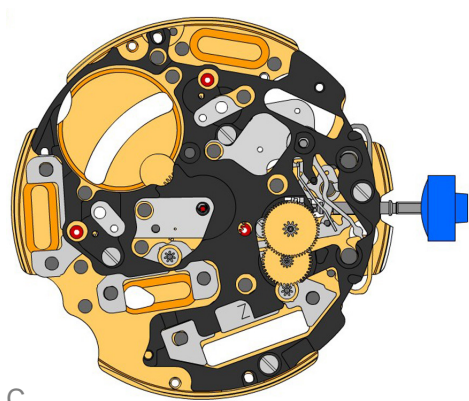

C


3603.079
17.  Plastic bracket
Plastic bracket held by 4 screws 4000.250.


4000.250
18.  Screw

3715.094.RK
19.  Rotor


3715.094.RK
20.  Rotor


3147.046.CO
21.  Intermediate wheel

3136.142.CO
22.  Second wheel (long)

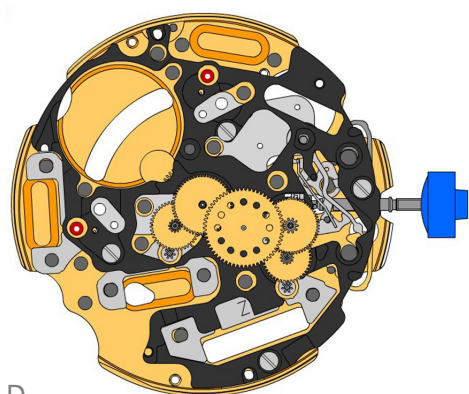


D


3147.047.CO
23.  Intermediate wheel (chrono)

3136.143.CO
24.  Chronograph wheel (Aig.1)

3122.056.CO
25.  Third wheel

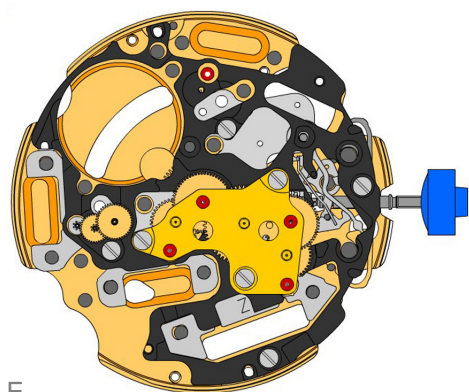


E


2020.148.G
26.  Train wheel bridge
Train wheel bridge held by 3 screws 4000.250.

4000.250
27.  Screw

3715.095.RK
28.  Rotor

3147.059.CO
29.  Intermediate wheel (counter)

3402.006.CO
30.  Minute counting wheel

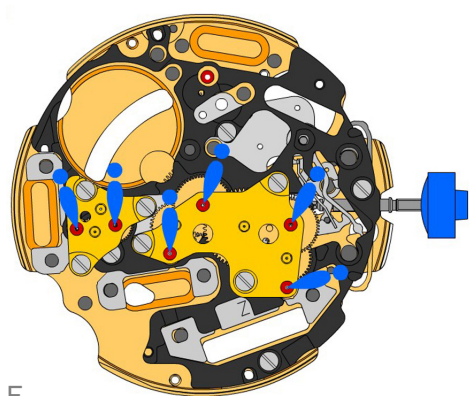

F

2020.149.G
31.



Counter train wheel bridge
Counter train wheel bridge held by 3 screws 4000.250.

4000.250
32.



Screw

4000.250
33.



Screw

3621.053.RK
34.



Coil
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
35.



Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

3621.054.RK
36.



Coil (counter 9h, chrono)
Attention: Please hold the coil only on the grey coil core. Coil held by 1 screw 4000.250.

4000.250
37.



Screw

3601.118
38.



Contact strip
Contact strip held by 1 screw 4000.250.

4000.250
39.




Screw

3603.034
40.



Battery insulator

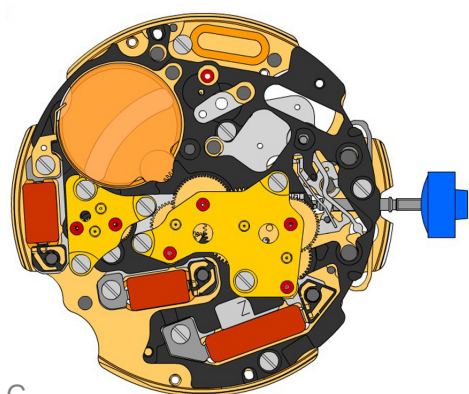

G

4000.248
41.



Screw

3603.069
42.




Circuit insulator


3601.107.G
43.



Pusher contact spring

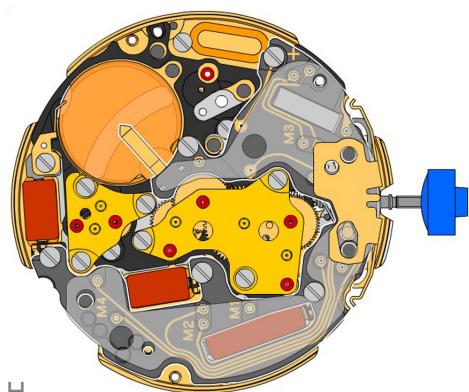

H

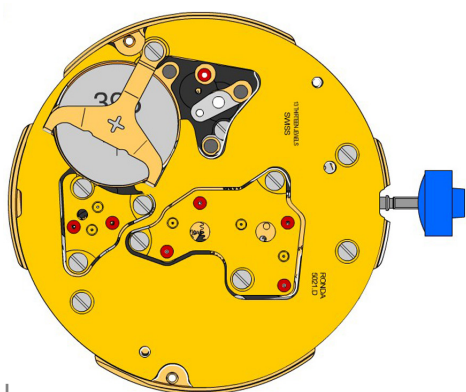


2130.137.G.M01.5021D
44.  Electronic module cover
Electronic module cover held by 3 screws 4000.250.





3600.010.HGF
45.  Battery 395


3601.109.G
46.  Bridle +
Bridle held by 1 screw 4000.250.

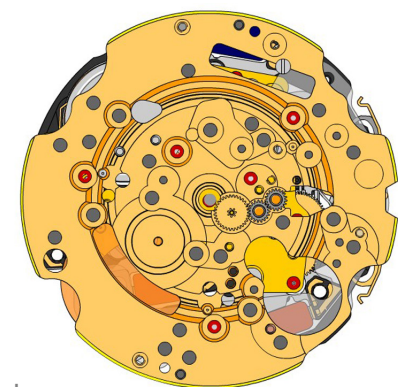4000.250
47.  Screw







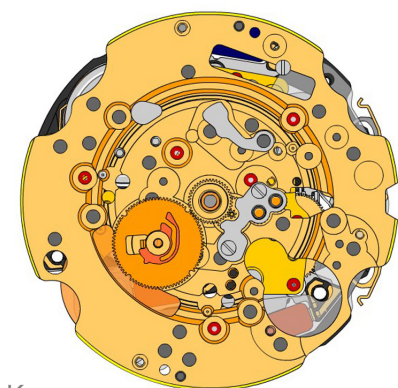

J

2000.574.G 48.		Main plate
3004.164 49.		Setting wheel
3004.164 50.		Setting wheel
3007.054.CO 51.		Minute wheel





K

2130.143 52.		Minute train bridge Minute train bridge held by 2 screws 4000.305.
4000.305 53.		Screw
3301.241 54.		Hour wheel (Aig.1)
3315.016 55.		Friction spring
3004.224.CO 56.		Date indicator driving wheel
3500.049 57.		Date jumper












L

3504.208.AB.1.A 58.		Date indicator (standard) Nick of the indicator at 3 o'clock.
2130.141 59.		Date indicator maintaining plate Date indicator maintaining plate held by 1 screw 4000.250.




M

3905.070 60.		Date jumper spring Insert the date jumper spring in the provided opening.
2130.140.G 61.		Date mechanism maintaining plate Date mechanism maintaining plate held by 2 screws 4000.250.
4000.250 62.		Screw
3506.072.G 63.		Dial support
8200 64.		Moebius 8200
9014 65.		Moebius 9014
124 66.		Jismaa 124
9020 67.		Moebius 9020

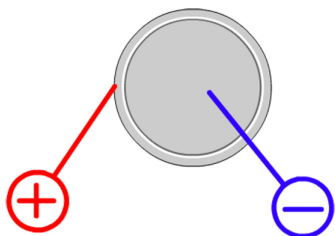


Battery	395
Voltage	1.55 V

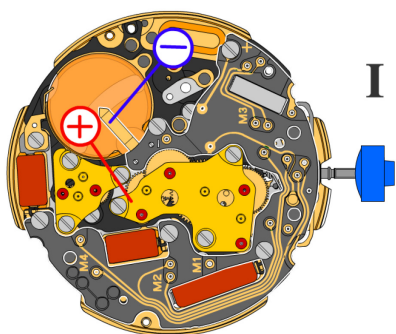


*Setting stem in position I, calendar not in gear,
60 s measuring interval for rate and consumption:*

Typical consumption	1.32 μA
Maximal consumption	1.65 μA
Rate	-10s/M. .. +20s/M.
Lower working voltage limit	1.20 V

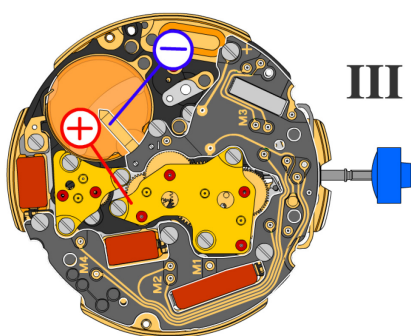

Setting stem in position III, 60 s measuring interval:


Typical consumption	0.10 μA
Maximal consumption	0.30 μA

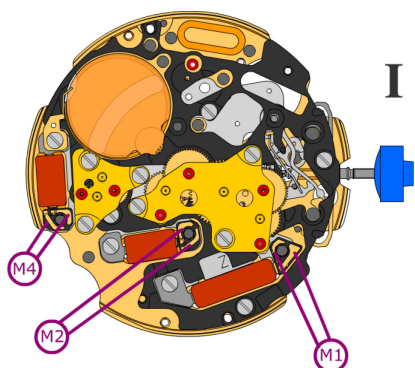


Coil resistance M1 **1.90 k Ω .. 2.10 k Ω**

Coil resistance M2 **1.68 k Ω .. 1.88 k Ω**

Coil resistance M4 **1.68 k Ω .. 1.88 k Ω**

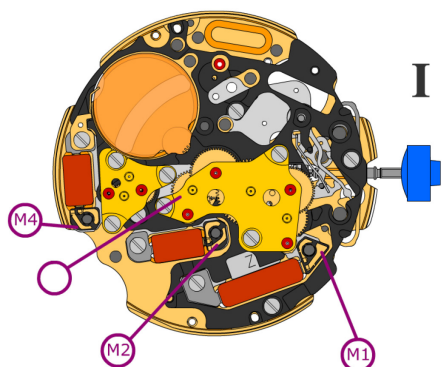

Coil resistances M1-M4 **∞ k Ω**

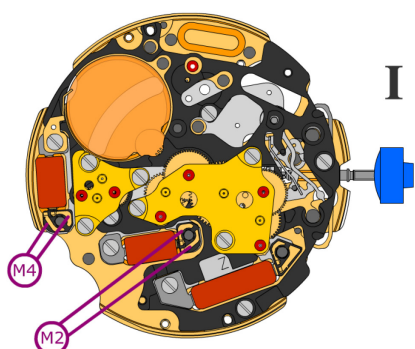

Signal generator (4.9 ms, 8 Hz):

Lower working voltage
limits M2-M4 **1.20 V**